


# 108-2120, 108-2150 AMT-Series Yoke Rigging Kits Installation Instruction Manual

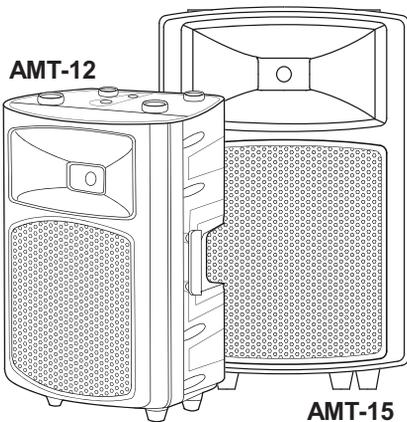

## For Apogee AMT-12 and AMT-15 Loudspeakers


© Copyright 2012 Bogen Communications, Inc.  
Specifications subject to change  
54-2207-01A 1206



**YOU MUST ACCURATELY FOLLOW THE INSTRUCTIONS FOR ALL THE PARTS INVOLVED IN THIS INSTALLATION. FAILURE TO DO SO CAN CAUSE SERIOUS INJURY OR DEATH TO OTHERS AND MAY EXPOSE YOU AND/OR YOUR COMPANY TO POSSIBLE LEGAL ACTION.**



# 108-2120 & 108-2150 AMT-Series Yoke Rigging Kit Components


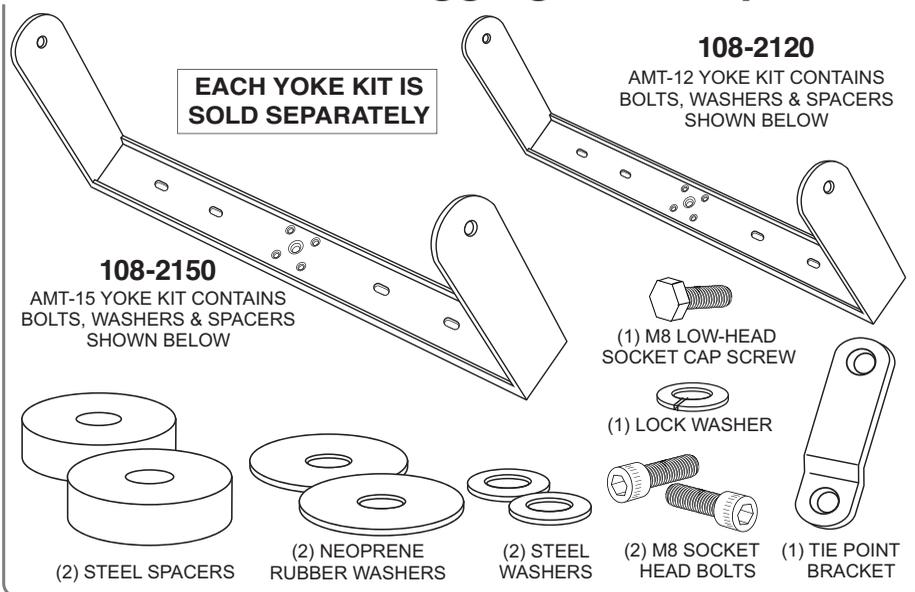


## 1. Assembling the AMT-Series Yoke Kit


### Preparing the AMT-Series Yoke Kit for Assembly with the AMT Loudspeaker

AFTER FIRST SECURELY ATTACHING THE YOKE to a mounting surface (see section 3), the loudspeaker can be attached to the yoke. This is best accomplished with two people, one to hold the loudspeaker in place, the other to insert the hardware (bolts, washers, spacers). The bolt, flat steel washer, steel spacer, and rubber washer need to be used on each end of the cabinet (top & bottom) to securely hold the loudspeaker in place.

**Diagram A**

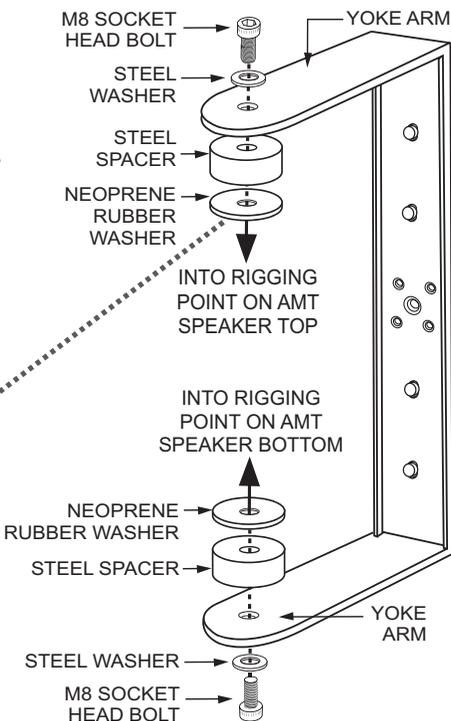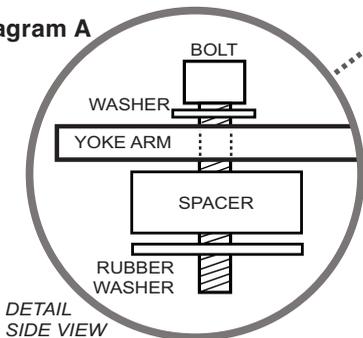

Holding the loudspeaker in place, line up the holes in the yoke with the holes in the top and bottom of the enclosure closest to the front of the cabinet. The first bolt/washer/spacer/rubber washer combination needs to be installed in the correct order (see *Diagram A*) on one end of the bracket and speaker, then can be partially tightened. The second bolt/washer/spacer/rubber washer combination can then be installed at the other end of the bracket and speaker and partially tightened. Once the desired orientation of the speaker is selected, the bolts can be fully tightened to prevent the enclosure from pivoting.

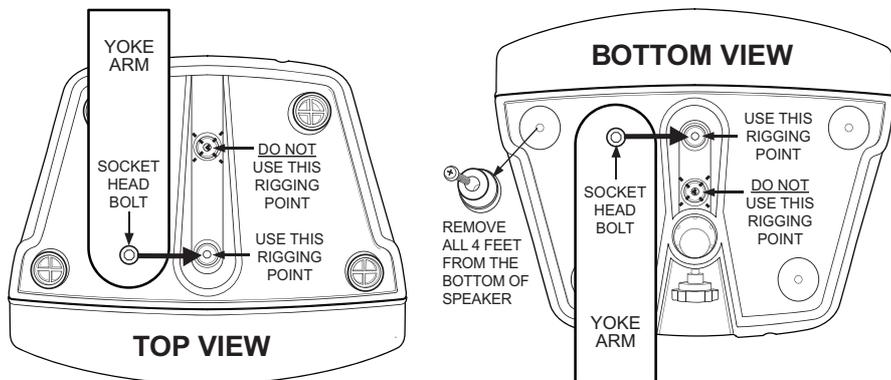


**NOTE:** Be sure to use the Rigging Point which is toward the front of the speaker on both the top and bottom of the speaker enclosure to attach the Yoke socket head bolt.

### Remove Feet from AMT Speaker


If the enclosure will be pivoted more than a few inches to the left or right / up or down, remove the 4 feet from the bottom of the enclosure. This will allow the speaker to rotate fully. When the desired angle has been set, fully tighten both the top and bottom socket head screws.

**NOTE:** Be sure that all the hardware has been tightened securely. However, **DO NOT** over-tighten.


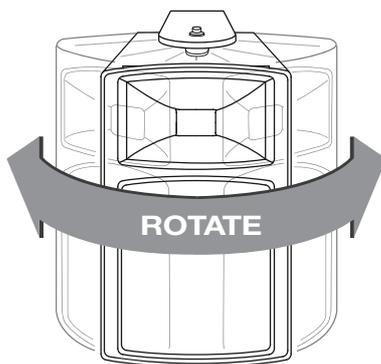


## 2. Safety Cable Anchor Tie Point

A convenient Safety Cable Anchor Tie Point Bracket is provided with the yoke. This attaches to the rear thread/rigging point in the top of the speaker using the supplied low profile socket head bolt with the lock washer. The attached bracket can now be rotated to the most convenient angle for attaching a safety cable (cable to be user supplied).

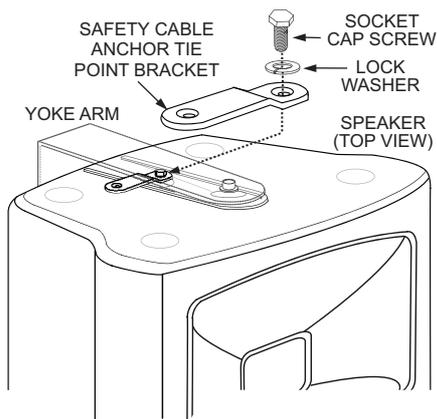


# 3. Mounting Yoke Assembly & AMT Speaker

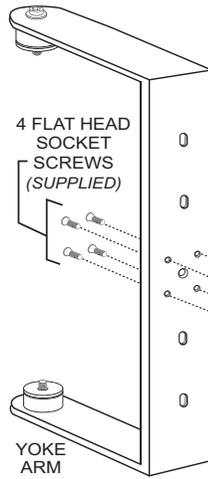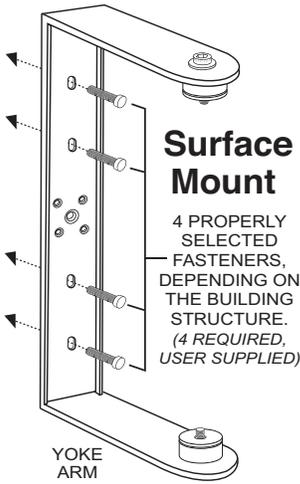


## Horizontal Stand Mount

**140-05**  
MACHINED ALUMINUM STAND FITTING KIT FOR YOKE (SOLD SEPARATELY)

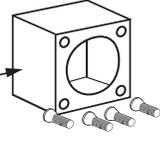

## HORIZONTAL TRIPOD MOUNT

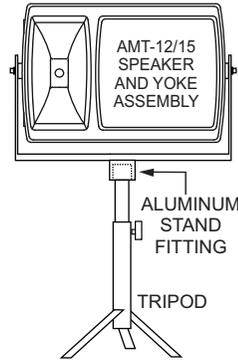

**WARNING:** Customer is to be responsible for the mounting hardware and selection of mounting surface. Both the mounting hardware and surface into which the unit is to be attached must be specified to withstand 10X the weight of the suspended assembly. Also, a safety cable should be attached to the unit so as to prevent from fall should the mounting hardware/surface attachment fail.

## Limited Warranty; Exclusion of Certain Damages

Apogee Sound 108-2120 & 108-2150 AMT Yoke Rigging Kits are warranted to be free from defects in material or workmanship for three (3) years from the date of sale to the original purchaser. Any part of the product covered by this warranty that, with normal installation and use, becomes defective will be repaired or replaced by Apogee, at our option, provided the product is shipped insured and prepaid to: Apogee Sound Factory Service Department, 50 Spring Street, Ramsey, NJ 07446, USA. The product will be returned to you freight prepaid. This warranty does not extend to any of our products that have been subjected to abuse, misuse, improper storage, neglect, accident, improper installation or have been modified or repaired or altered in any manner whatsoever, or where the serial number or date code has been removed or defaced.

THE FOREGOING LIMITED WARRANTY IS APOGEE'S SOLE AND EXCLUSIVE WARRANTY AND THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY. APOGEE SOUND MAKES NO OTHER WARRANTIES OF ANY KIND, EITHER EXPRESSED OR IMPLIED, AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED AND EXCLUDED TO THE MAXIMUM EXTENT ALLOWABLE BY LAW. Apogee's liability arising out of the manufacture, sale or supplying of products or their use or disposition, whether based upon warranty, contract, tort or otherwise, shall be limited to the price of the product. In no event shall Apogee be liable for special, incidental or consequential damages (including, but not limited to, loss of profits, loss of data or loss of use damages) arising out of the manufacture, sale or supplying of products, even if Apogee has been advised of the possibility of such damages or losses. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

Products that are out of warranty will also be repaired by the Apogee Sound Factory Service Department – same address as above or call 201-934-8500. The parts and labor involved in these repairs are warranted for 90 days when repaired by the Apogee Sound Factory Service Department. All shipping charges in addition to parts and labor charges will be at the owner's expense. All returns require a Return Authorization number.

7/22/2008

**APOGEE**  
SOUND INTERNATIONAL

www.apogee-sound.com