



Protective cover


## STEP 1 - PREPARING TO MOUNT THE CAMERA

- 1. The mounting surface must withstand five times the weight of your camera.
- 2. Do not let the cables get caught in improper places or the electric line cover can be damaged. This may cause a short or fire.
- 3. Detach the camera's dome cover by pressing on the two small buttons located at each side of the cover dome.
- 4. Remove the dome protective film before placing the dome back on the camera base.

#### STEP 2 - CABLING THE CAMERA TO **EXTERNAL DEVICES**

Pass the wires through the mount bracket and make all necessary connections. Connect the BNC cable and power cables to the camera.

Power Requirements	Power Consumption	
DC12V/AC24V dual voltage	DC12V (LED off): 5.76W, 480mA DC12V (LED on): 7.92W, 660mA AC24V (LED off): 6.49W, 429mA AC24V (LED on): 7.15W, 495mA	

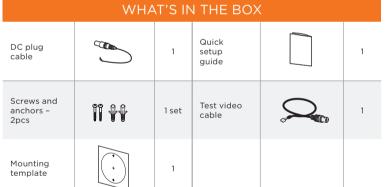

NOTE: Download all your support materials and tools in one place

- 2. Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
- 3. Click 'Search'. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.


Attention: This document is intended to serve as a quick reference for the initial setup. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.


Tel: +1 (866) 446-3595 / (813) 888-9555

9:00AM - 8:00PM EST, Monday through Friday

Technical Support Hours:

digital-watchdog.com

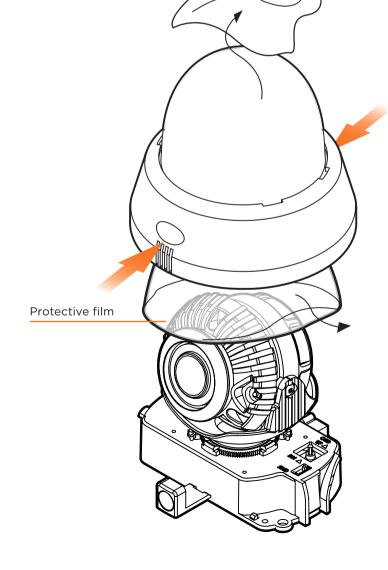

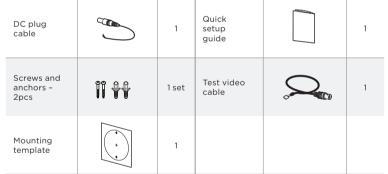

DWC-D4883WTIRW

DW

## 1. Go to: http://www.digital-watchdog.com/resources



## **Quick Start Guide**

# STEP 3 – CHANGING THE SIGNAL IN THE CAMERA

- 1. The camera supports HD-Analog, HD-CVI and HD-TVI signals as well as CVBS up to 960H. To switch between the signals:
  - a. Enter the camera's OSD menu. You can access it locally from using the camera's joystick in the body of the camera, or from a recorder supporting UTC communication.
    Go to SETUP > OUTPUT.
  - b. Set the camera's resolution from the following options:
    - 4K/2160p @15fps.
  - 5MP/1440 @30fps.
  - 2.1MP/1080p @30fps.
  - c. Set the camera's analog signal output from the following options:
  - HD-A HD-Analog
  - HD-T HD-TVI
  - HD-C HD-CVI
  - CVBS legacy analog signal
  - d. Change CONFIRM to ON to save the changes.
  - e. Go to the EXIT menu and select SAVE&EXIT to save all changes. The camera signal automatically.

## STEP 4 - INSTALLING THE CAMERA

- 1. Once all cables have been connected, use the screws included with the camera to properly mount and secure the camera to the mounting surface.
- 2. Adjust the camera's pan, tilt and position to achieve the desired view. The cameras' max angles are:
  - Pan: 0°~ 360°
  - Tilt: 0°~ 75°
  - Rotation: 0°~ 350°
- 3. To adjust the camera's zoom and focus, use the lever at the base of the camera's module.
  - a. Move the lever up to zoom in.
  - b. Move the lever down to zoom out.
  - c. Move the lever to the left to adjust focus to near.
  - d. Move the lever to the right to adjust focus to far.
- 4. Once the installation is complete, remove the protective film from the camera's dome cover.

OUTPUT		
FRAME RATE FREQ ANALOG MODE CONFIRM RETURN	2160p 60HZ HD_T 0FF ✔	15

NOTE: To use your Star-Light Plus<sup>™</sup> 4K cameras at a lower resolution, you must use a VMAX<sup>®</sup> A1 4K DVR to access the camera's menu due to the cameras being set to 4K as the default. A DVR that does not support 4K resolution may recognize the camera, but will not deliver a picture.

