

# easynet<sup>™</sup> Series DVR Mobile App

### **Operating Instructions**



The easynet Touch<sup>™</sup> mobile app is a free mobile application that allows direct access to your easynet<sup>™</sup> DVR on the run from your smart mobile devices, such as iPhone, iPad, and Android OS-based smart phones and tablets. This App allows for live streaming, playback, and remote access to your surveillance cameras when connected to your local easynet<sup>™</sup> DVR network via

Wi-Fi or 3G/4G network.

#### **DISCLAIMER**

- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions.
- NUVICO reserves the right to change the specifications of the software described herein at any time without prior notice.

#### **Compatible Models**

All easynet<sup>™</sup> DVRs:

- ED-U1600 / U3200
- ED-P400 / P800 / P1600
- ED-C400 / C800 / C1600

#### Key Features

- Multi-channel live view display
- "Favorite View" for multi-site login management
- Multi-channel playback
- Instantaneous playback and time search
- Intuitive multi-gesture controls
- Camera title / current time & date / DVR status icons Recording on/off, alarm, & video loss
- PTZ controls

#### **Getting started**



easynet Touch<sup>™</sup> mobile app can be downloaded free from the Apple App Store (iPhone), or the Android Market Place. Please download and install the easynet Touch<sup>™</sup> mobile app before proceeding further.

#### **Disclaimer & Adding a Site**

Once you have downloaded and installed the easynet Touch<sup>™</sup> mobile app, tap on the app icon to launch the application. The easynet Touch<sup>™</sup> loading screen will display momentarily, followed by the disclaimer. \*Note: For optimal display performance, please turn your phone or tablet screen horizontally (landscape).



**INFORMATION** – When your device is connected to 3G/4G network, the multi-channel display mode is limited to <u>quad view only</u>. For full 16-ch display mode, you must be connected to a high-speed internet (Wi-Fi). We recommend Wi-Fi connection for best multi-channel viewing performance and experience.

- 1. Click on "OK" to proceed with adding your DVR or "Site."
- 2. Adding your site (DVR) is easy. Simply tap on the 💷 button located at the top right corner of the title bar.

iPad 🜩 🔆	4:09	PM		Not Charging 🗐
Edit	Site	List		<b>•</b>
		<i></i>		
	Bite Lint Search	Settings Favorila	q • View	

3. Input the IP Address, the User Name, and the Password. The Port Number is already filled-in with the default port number of 7000.

Add Unit       Image: Control of Name       Host Name – Input your         IP Address or Host Name       IP Address or Host Name       IP Address or the Host         Port       7000       Outer Parswell         Viser Name       Outer Parswell       Host Name.         Password       Outer Parswell       Host Name.	Pad S	3153 PM Net Charolog	3
IP Address or Host Name       IP Address or Host Name         Port       200         User Name       Default admon         Password       User Presend	Cancel	Add Unit Save	Host Name – Input your
IP Address or Host Name       Name.         Port       2000         User Name       Default admon         Password       User Presented			IP Address or the Host
Port 2000 User Name Default admo Password User Parsword Deer Parsword Company of the Parsword Company	IP Address or Host Name	* Address or Host Name	Name.
User Name Password User Passwo	Port	7000	
Password Uner Present	Liser Name	Default admin	hostname.nuvicoconnect.
	Password	The Recent	com
	Password		

- 4. Once the information has been filled in, tap on the save button at the top right of the title bar to save and exit.
- 5. If the DVR information is correct, your easynet Touch<sup>™</sup> app will detect the DVR, and a connection will be made.

Pad 🗢		4:34	PM		Not Chargin	1g 💷
Edit		Site	List			+
ED-U1600 : ED U1600 Demo Address : B0010d2						0
		Device	Found			
		ED-U	1600			
		0	к			
	_	_	-	-		
		0.	- 58	3		
	Sile List	Search	Settings	Favorile View		

Device Found – Once a connection has been established, the DVR model name will be displayed in the window prompt along with the connection confirmation. Your DVR is now added to your Site List.

#### **Channel List**

After the site setup, your DVR can now be selected. Tap on the site name, which now displays the DVR model number and the IP address. All of the channels (cameras) connected to that network is now

displayed. To edit or view the DVR site information, tap on the arrow view button located at the top right of the title bar.

\*Note: To add another site, repeat the above step by tapping on the 💷 button.

Channel List – All the cameras connected to the DVR is listed here.       Channel List       Thu official there.         The model numbers of the cameras are also displayed. Any PTZ speed dome will be marked accordingly to easily distinguish between the cameras.       5.5C 530N       Image: Camera and the camera and	
cameras connected to the DVR is listed here.1.SC S36N w F7zOnd is mThe model numbers of the cameras are also displayed. Any PTZ speed dome will be marked accordingly to easily distinguish between the cameras.1.SC S36N w F7zOnd is m7.SC S36N w F7zS.SC S36N w F7zS.SC S36N w F7zOnd is m8.SC S36N w F7zS.SC S36N w F7zS.SC S36N w F7zOnd is m9.TZ speed dome will be marked accordingly to easily distinguish between the cameras.S.SC S36N w F7zOnd is m11. CAM11CAM10Ond is mOnd is m12. CAM12Is CAM13Is CAM13	ımbnails –
the DVR is listed here.       2.5C 536N       is m         The model numbers       3.5C 536N       is character         of the cameras are       4.5C 536N       is character         also displayed. Any       5.5C 536N       is character         PTZ speed dome will       6.5C 536N       is character         be marked       8.5C 536N       is character         accordingly to easily       9. CAM9       is C 636N         distinguish between       10. CAM10       is character         the cameras.       11. CAM11       is character         13. CAM13       13. CAM13       is character	ce a connecti
The model numbers     3.5C 536N     cha       of the cameras are     4.5C 536N     seri       also displayed. Any     6.5C 536N     box       PTZ speed dome will     7.5C 536N     will       be marked     8.5C 536N     will       accordingly to easily     9. CAM9     of th       distinguish between     10. CAM10     displayed       the cameras.     11. CAM11     cha       12. CAM13     13. CAM13     cha	nade and the
of the cameras are also displayed. Any PTZ speed dome will be marked accordingly to easily distinguish between the cameras.     4.9C 396N 	innel is viewe
also displayed. Any     5 SC SaeN     box       PTZ speed dome will     5 SC SaeN     box       be marked     6 SC SaeN     will       accordingly to easily     9 CAMP     of t       distinguish between     10 CAMID     displayed.       11. CAMI1     12 CAMI2     champed       13. CAMI3     13. CAMI3     champed	ies of black
PTZ speed dome will be marked accordingly to easily distinguish between the cameras.     6. SC S36N Will 7. SC S36N Will 8. SC S36N Will 9. CAMB     will thu of t distinguish between 11. CAM11       11. CAM12     12. CAM12	ies on the rig
be marked     7. SC S38N       accordingly to easily     8. SC S36N       distinguish between     10. CAM10       the cameras.     11. CAM11       12. CAM12     11. CAM12	display the
accordingly to easily     a.sc Sasan     of t       distinguish between     10. CAM10     disp       the cameras.     11. CAM11     cha       12. CAM12     13. CAM13     cha	mbnail imag
accordingly to easily     9. CAM9     of t       distinguish between     10. CAM10     disp       the cameras.     11. CAM11     cha       12. CAM12     11. CAM13     record	monan mage
distinguish between 10. CAM10 dist the cameras. 11. CAM11 dist 12. CAM12 dist 13. CAM13 dist reco	ne last pictur
the cameras. 11. CAM11 cha 12. CAM12 cha 13. CAM13	played for eas
12. CAM12 reco	nnel
13. CAM13	ognition.
14. CAM14	
15. CAM15	

#### Navigating the app

*During Live View* – Double tap on the desired channel (during quad view, 9-ch view, or 16-ch view), or swipe your finger left or right to change to the next channel or channel set.





During PTZ Control (w/ Crosshair) - Tapping on a particular area of the screen while in PTZ control mode moves the camera in that direction. Tap close to the center for small movements, and far for large movements.

Pinch In/Out - You may pinch in or out using your thumb and index finger to zoom in and out. For • best result, it is recommended you zoom out and center the object/subject on the screen then zoom in for a close-up.



PTZ Controls - On any channel(s) with the small "PTZ" icon just below the camera title can be controlled. First select that channel (double tap), then tap on the PTZ icon on the right side of

the main screen . Once the crosshair appears on the center of the screen, you may tap or pinch in or out to pan, tilt, and zoom your PTZ.

## Instant Playback 🕨



Instant Playback displays exactly one minute prior to the live-feed video. This powerful tool can be used at any time by simply tapping on the Instant Playback button regardless of the current viewing mode.







When an Instant Playback of one minute is not enough and you need to go back further, the Search

option should be used. You may also perform a Search by tapping on the button located at the bottom of the main navigation whenever it appears.

- 1. Tap on either of the two Search buttons to initiate the video search procedure.
- 2. Once in the Search List mode, choose from the available Sites (DVRs).

	iPad 🙃	2:03 PM	Not Charging
Search List Mode - During this mode, the		Search List	
title bar will read "Search List" and the	ED-U1600 : ED U1600 Demo Address : B0010d2		
Q			
Search button at the bottom highlighted.			
The currently active sites will be listed with			
the model number and the IP address of the			
DVR, as shown on the right.			
		Site List Search Settings Favorite V	Sew

3. Choose from the available Channels (Cameras).

2:03 PM	Not Charging 💷
Channel List	
	and the second second
	1
	- ALLE
	100
	100
	5
	1
	203 PM Channel List

Thumbnails are displayed to easily identify the correct camera(s).

4. Specify the exact time of playback by adjusting the time dial.



5. Once the desired date and time has been set, tap on the D button to playback the recorded video.



If you find yourself revisiting particular channels (Cameras) on several different sites (DVRs) repeatedly, you can compile a list to view all of them in your Favorite View list at once. If compiled, you can simultaneously view up to 16 channels from across different sites at a touch of a button, and on-demand.

1. If your Favorite View list is currently empty, you can add your frequently visited channels by

tapping on the 🗾 button on the top right of the title bar.

Pad 🗢		4:50	PM		_	Not Charging
Favorite View		Selec	t Site			
ED-U1600 : ED U1600 Demo						
Address : B0010d2						
	Ē	0.	*	-		
	Site List	Search	Settings	Favorite View		

2. Tap on the desired site, and then choose the desired channels to add to your Favorite View list.

Select Site	_	Select (	Camera	_	_	s	ave
1. SC S36N w/ PTZ							~
2. SC S36N						and the second	
3. SC S36N w/ PTZ							
4. SC S36N w/PTZ						and the second second	~
5. SC S36N w/ PTZ							
6. SC S36N w/ PTZ						- and	
7. SC S36N w/ PTZ							~
8. SC \$36N w/ PTZ							
9. CAM9							
10. CAM10						S	~
11. CAM11						A	
12. CAM12							
13. CAM13						and the	~
14. CAM14							
15. CAM15						1	~
	Ē	0	*				

Select all the channels you would like to include in your Favorite View list by tapping on all of the desired channels. A check mark will appear next to the thumbnails to confirm the selection.



- 3. Once all the channels have been selected, tap on the button to finalize the list.
- 4. Tap on "OK" to be taken to the Select Site. Tap on the Favorite View button to review all the added channels.
- 5. Tap on any of the channels to jump to Live View of your Favorite View selections.

## Settings

To find information on your easynet Touch<sup>™</sup> mobile app, tap on the Settings button from the main navigation panel.

		Set	tings		Not Chary
Information					
Version : 1.2					
Contact					
E-Mail : techsupport@nuv	ico.com				
Phone : 1-201-541-1605					
Homepage : http://nuvico.	om				
OSD					
Camera Title					ON CON
Time					ON O
Event					ON O
	目	0.	*	3	
	City Link	Research.	and all	Encotine View	





NUVICO ® Copyright 2011 Version 1.11 Designs and specifications are subject to change without notice. For more information, please visit our website at www.nuvico.com

NUVICO Corporate Headquarters 53 Smith Street Englewood, NJ 07631 Tel: 201-541-1605 Toll Free: 866-523-1700 Fax: 201-541-1620 sales@nuvico.com | www.nuvico.com

NUVICO International Corporation R#1001, KOFOMO Tower, 16-3 Sunae-Dong, Bundang-Gu,

Seongnam-Si Gyeonggi-Do, 463-825, Korea Tel: 82-31-712-8814 Fax: 82-70-7500-9164 | export@nuvico.com

Follow us by going to www.twitter.com/nuvico for our latest company news or sign up to receive our eNewsletters by emailing us at: newsletters@nuvico.com IMPORTANT: NUVICO products are available through authorized resellers only! For more information on our Unauthorized Reseller

policy, please visit us online at www.nuvico.com/unauthorized-resellers.htm.