

801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 • Fax: (805) 494-8861 www.sdcsecurity.com • E-mail: service@sdcsecurity.com

INSTALLATION INSTRUCTIONS CYLINDRICAL LOCK Z7200

FOR USE ON DOORS 1-3/8" \sim 2" (35mm \sim 51mm) THICK


TOOLS REQUIRED FOR NEW INSTALLATION:


1 philips head screwdriver 1 2-1/8" (54MM) hole saw 1 1" (25.4mm) drill bit 1 5/16" (8mm) drill bit

1 chisel 1 file

OPTIONAL:

DOOR CORE DRILLING GUIDE #7000-DG & CORING DRILL BIT #7000-DB

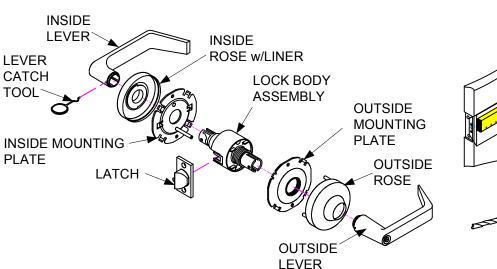

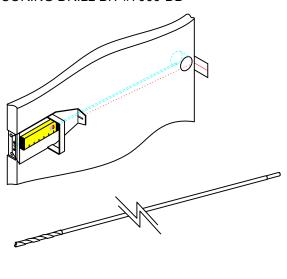

1. MARK DOOR

а


- a. Mark centerline on door face and door edge (usually 38" from finished floor)
- center on door face
 NOTE: BACKSET ON DOOR FACE MUST BE
 THE SAME AS BACKSET OF YOUR
 LOCK.

b. Select backset 2-3/8" or 2-3/4" and mark hole

c. Mark two holes for screw post.

Fold template for High or Low Bevel positioning (reference template)

2. DRILL HOLES

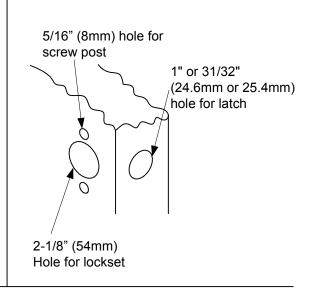



3. INSTALL LATCH


- a. Insert latch in hole and keep it parallel to door face.
 Mark outline and remove latch
- b. Chisel 1/8" (3mm) deep or until faceplate is flush with door edge.
- c. Insert latch and tighten screws.

 NOTE: LATCH BOLT BEVEL MUST FACE TOWARDS

 CLOSING DIRECTION.

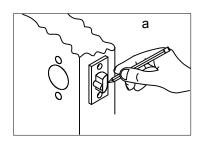


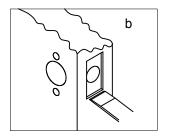


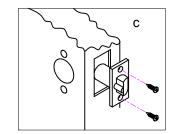


4. INSTALL STRIKE


- a. Close door to mark horizontal line of strike.
- b. Measure one half of door thickness from door stop to mark vertical center line of strike.
 Drill 1" (25.4mm) hole, 1/2" (12.7mm) deep at intersection of horizontal and vertical center lines.
- c. Cut out jamb 3/32" (2.4mm) deep or until strike is flush with jamb. Tighten screws securely.

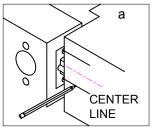

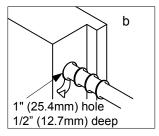


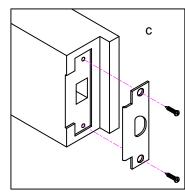



5. REMOVE INSIDE TRIM

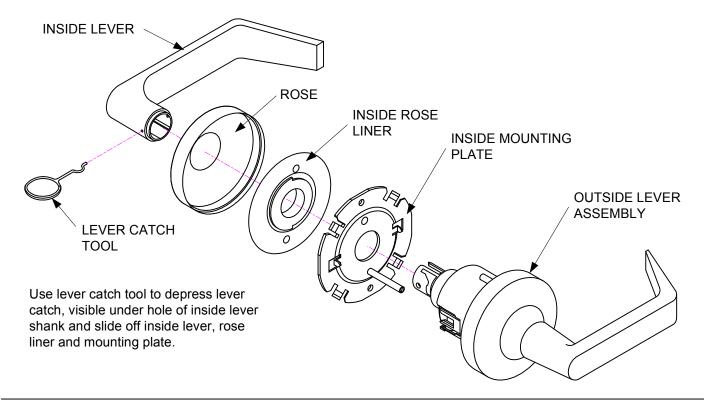

  6. ADJUST DOOR THICKNESS






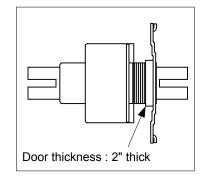


7. INSTALL OUTSIDE LEVER ASSEMBLY

Install outside lever assembly on the door. Make sure tail of latch is engaging with retractor correctly as illustrated. Refer to wire diagram on last page for wiring.

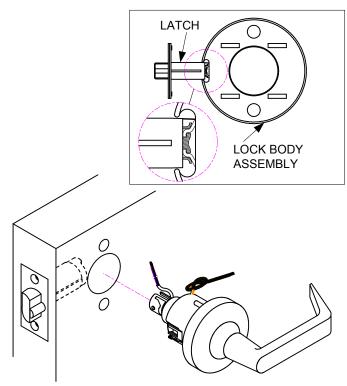


8. INSTALL INSIDE MOUNTING PLATE AND ROSE


a. Install inside mounting plate to lock body.

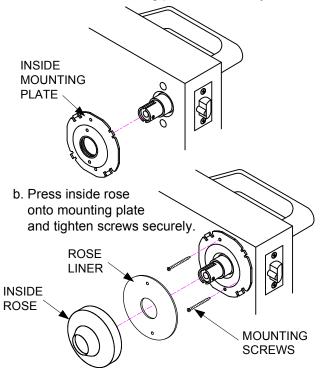

9. INSTALL LEVER

a. Depress lever catch with tool provided.
 Push inside lever on completely until catch engages in lever.
 Confirm lever is secured.

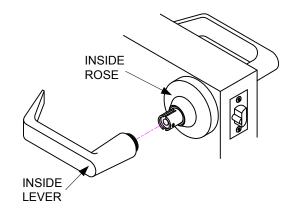

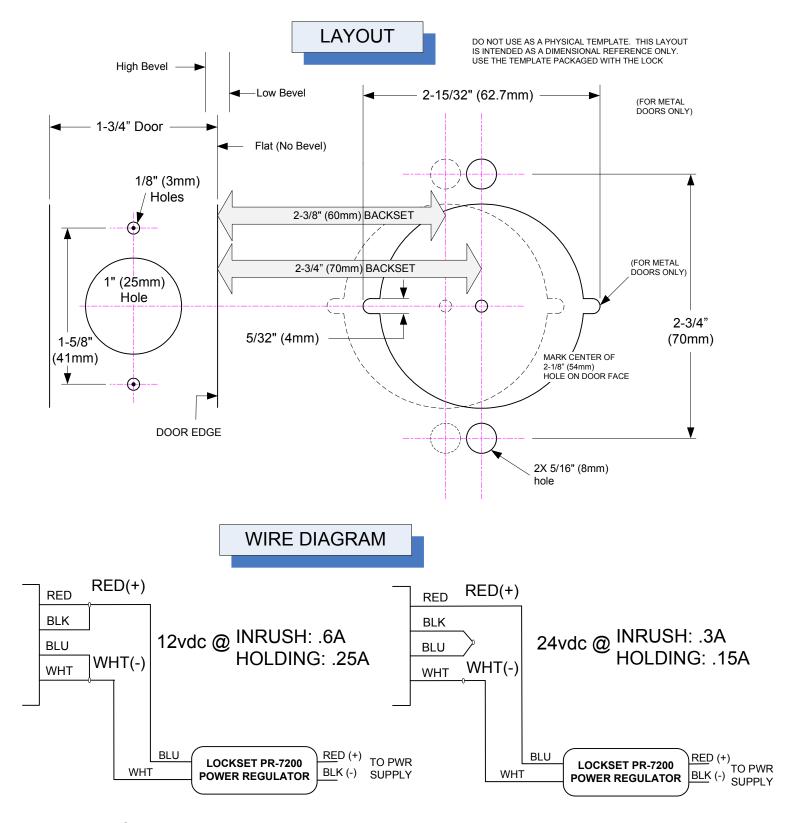

Use of the PR-7200 limits the power consumption and reduces operating temperature.

REQUEST-TO-EXIT OUTPUT SPDT, 3 AMPS @ 30VDC

REX N/C = ORG/RED N/O = YEL/RED