


NXL NVR

Quick Start Guide

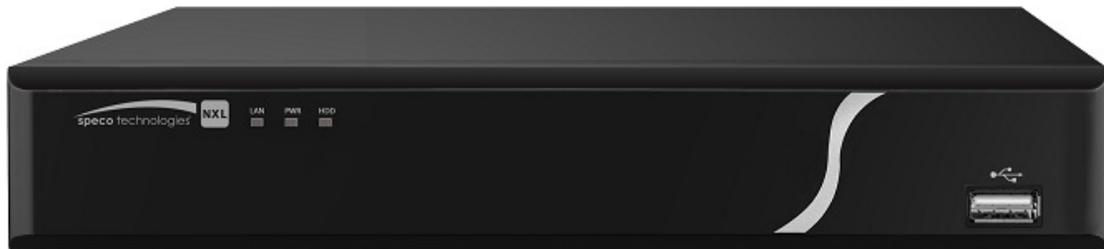

Welcome

Thank you for purchasing this NVR.

This guide is designed to be a quick reference for installing the system.

Please read this guide carefully before installing and operating the unit.

If technical assistance is needed, please contact Speco Technologies Technical Support.

Phone: 1-800-645-5516 option 3

Email: techsupport@specotech.com

Important Safeguards and Warnings

- Speco Technologies assumes no liability or responsibility for any fires or electrical shock caused by improper handling or installation.
- Speco Technologies is not liable for any problems caused by unauthorized modifications or attempted repair, which will void the warranty.

Note: All of the installation and operations here should conform to local electric safety rules.

Package Contents

- 48VDC Power Adapter & Power Cable
- CD
- Mouse
- Ethernet Cable
- Quick Start Guide
- Unit

1. Check Unit

After unpacking the unit, please check for any visible damage. Then check to make sure that all accessories are included.

2. Product Label

Check that the model number and serial number that's listed on the label on the unit are the same as what's listed on the package label.

3. Front Panel

The front panel is shown as in Figure 1.



Figure 1

Please refer to the following sheet for detailed information.

Icon	Name	Function
LAN	Network status indicator	Blue indicator is on when connected to a network
PWR	Power indicator	Blue indicator is on when power is operating normally
HDD	HDD status indicator	Blue indicator is on when the hard drive is operating normally

4. Rear Panel

The rear panel is shown in Figure 2 (8ch unit shown).

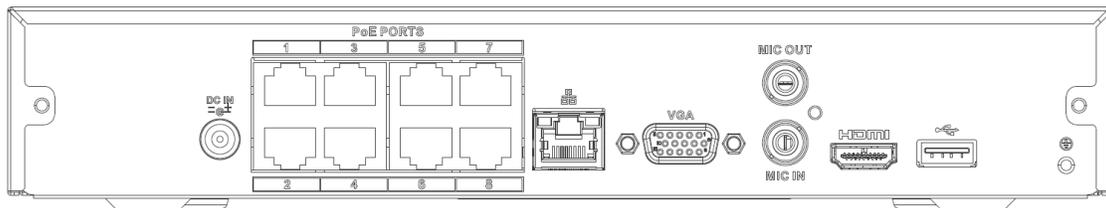


Figure 2

Please refer to the following sheet for detailed information.

Port Name	Connection	Function
	USB2.0 port	May be used for a mouse and external storage.

Port Name	Connection	Function
	Network port	10M/100Mbps Ethernet port. Connect to a network cable.
HDMI	HDMI v1.4	Used for video output to a monitor/display with HDMI port
VGA	VGA output	Used for video output to a monitor/display with VGA port
	GND	Ground end
	Power input port	Input DC 12V/2A.
MIC IN	Audio input port	Audio input port for two-way audio. Connect a microphone.
MIC OUT	Audio output port	<p>Audio output port to a speaker</p> <ul style="list-style-type: none"> ● Two-way audio output. ● Audio output on full screen live view. ● Audio output on full screen playback.

5. Unit Login

After the system boots up, the default video display is in multi-window mode.

See Figure 3 for the login interface.

Listed below is the default login ID:

- **Username:** admin (administrator, local and remote)

Note:

For security purposes, it is required to create the administrator password on the initial login.

5 incorrect login attempts within 30 minutes will result in a lock on the account. Once the unit is locked, please wait for 30 minutes before attempting to log in again.

To reset the password, please contact Speco Technologies Technical Support.

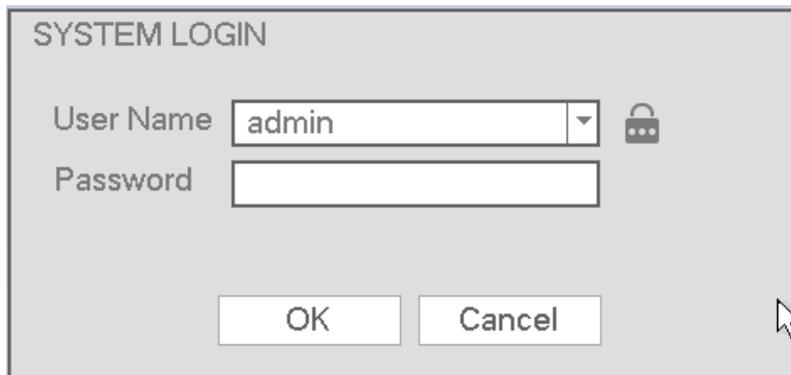
A dialog box titled "SYSTEM LOGIN" with a light gray background. It contains two input fields: "User Name" with a dropdown menu showing "admin" and a lock icon to its right, and "Password" with a text box. At the bottom, there are two buttons: "OK" and "Cancel". A mouse cursor is visible at the bottom right corner of the dialog box.

Figure 3

6. Remote Web Access

Open Internet Explorer and enter the NVR's IP address in the address bar.

Follow the instructions to install the plug-in.

After installation, the login interface is shown as below. See Figure 4.

Please enter the user name and password.

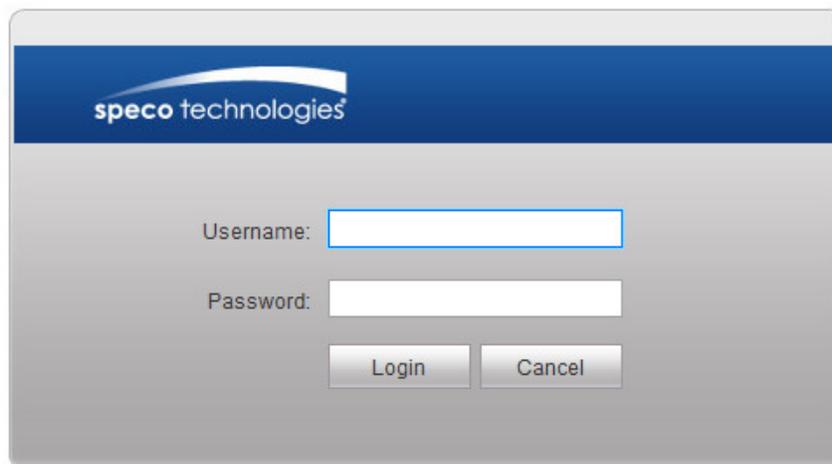
A login interface for Speco Technologies. It features a blue header bar with the "speco technologies" logo. Below the header, there are two input fields: "Username:" and "Password:". At the bottom, there are two buttons: "Login" and "Cancel".

Figure 4