



INSTALLATION INSTRUCTIONS AND SAFETY INFORMATION

FOR THE VIKING G-5 GATE OPERATOR



CLASS I, CLASS II, CLASS III,
AND CLASS IV


**Residential and Commercial
Vehicular Swing Gate Operator**






With its compact, low profile design and the power to support up to 2000 lbs of weight or gate lengths of up to 18 feet, the Viking G-5™ will revolutionize the idea of gate operation. This operator is manufactured with the highest quality components and is designed to accent any gate style. The G-5™ is capable of continuous cycles operation at 24V DC, converted directly from an AC line. The battery back-up provides up to 400 cycles of operation with a maximum capacity gate.

THE VIKING G-5™ SWING GATE OPERATOR

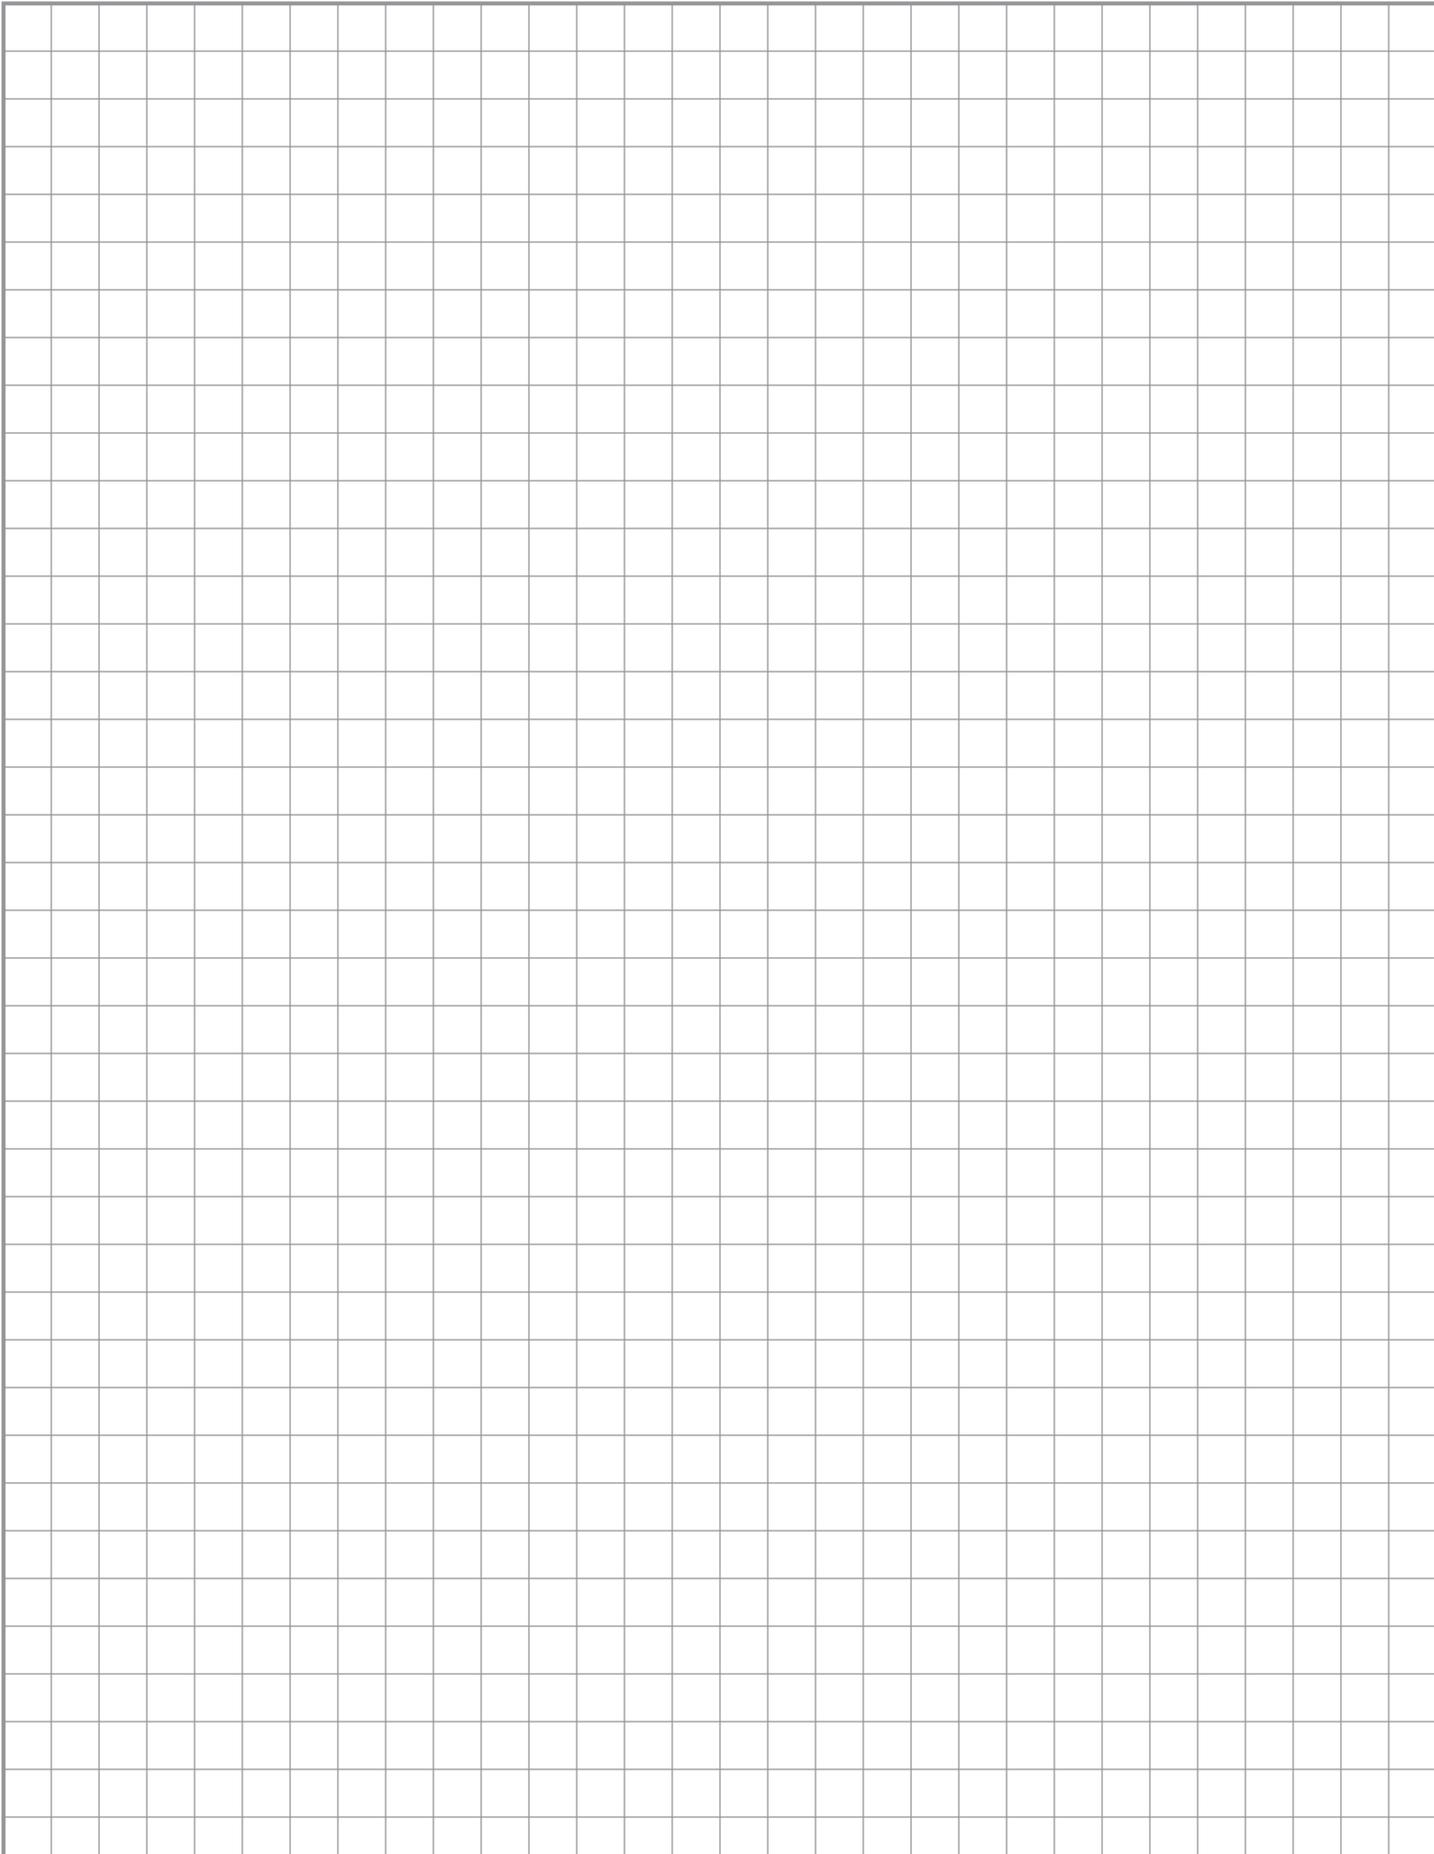


PARTS DIAGRAM

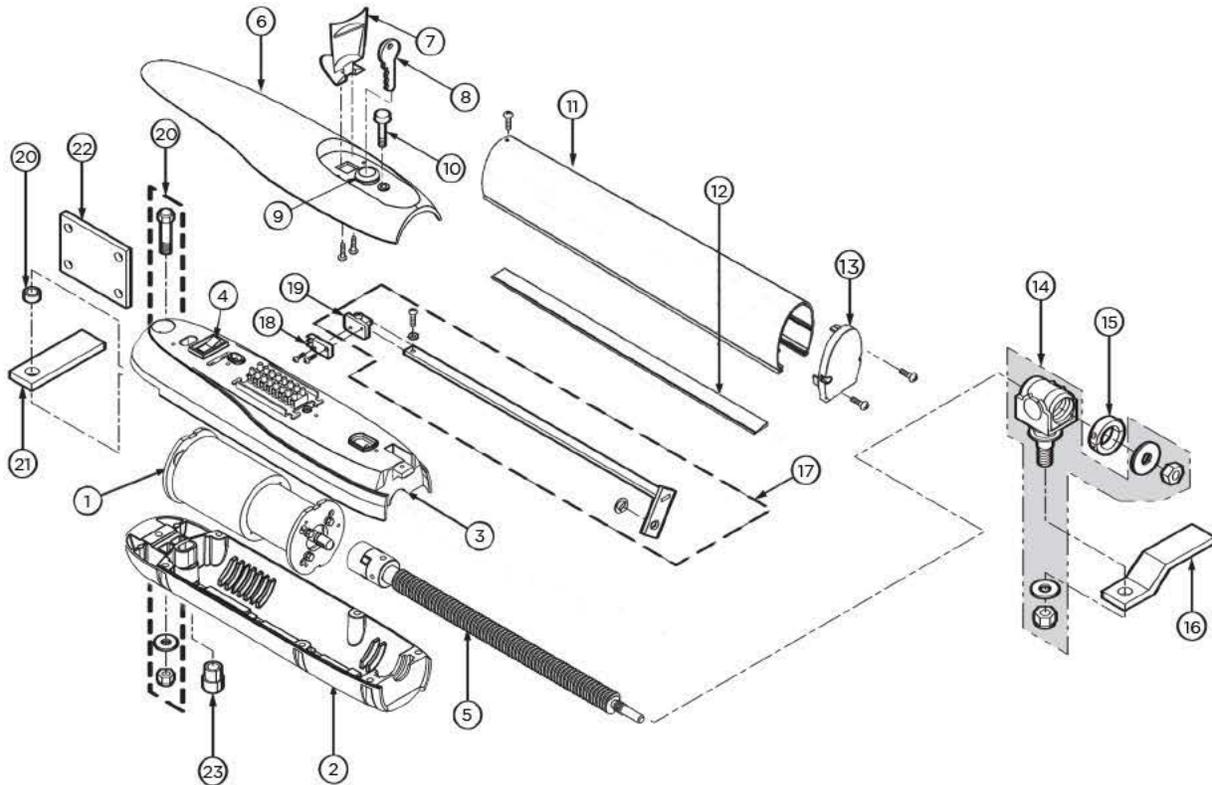

Item	Description	Part No.
1	24V DC Motor	VNXG5MO
2	G5 Motor Casing Lower	VNG5CL
3	G5 Motor Casing Upper	VNG5CU
4	Manual Release Switch	DUMRS20
5	Lead Screw w/ Coupler	VNXG5LDSW
6	Cover, Terminal	VNXG5CT
7	Door, Cover Release	VNXG5DCR
8	Key, Cover Release	VNXG5K
9	Key Cylinder, Cover Release	VNXG5KC
10	Thumbscrew, Cover Release	VNXG5TSCR
11	Cover Lead Screw	VNXG5CLS
12	Dust Brush (2)	VNXG5DB
13	End Cap, Lead Screw Cover	VNXG5ECC
14	Carrier w/ Hardware	VNXG5C78
15	Positive Stop	VAG5PSE
16	Mounting Bracket, Front	VNXG5MBF78
17	Limit Mounting Bar	VNXG5LMB
18	Limit Switch (2)	VNXG5LS
19	Limit Switch Bracket	VNXG5LSB
20	Mounting Hardware, Back	VNXG5MHB
21	Mounting Bracket, Back	VNXG5MBB
22	Backing Plate, Bar Mount (2)	VNXG5BPBM
23	Strain Relief, Chasis	VNXG5SRCH

Overall Dimensions

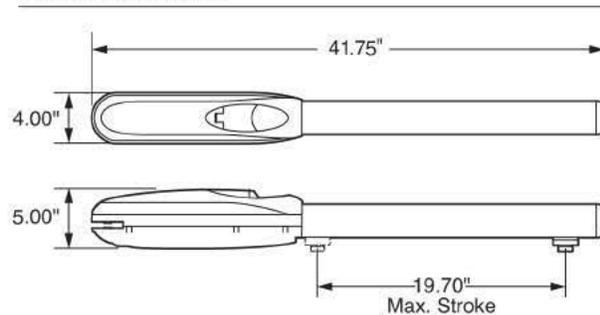

Weight

40 lb.


WARNING - For Installation By Qualified Personnel Only.




TECHNICAL SUPPORT 1 800 908 0884

ACCESS SYSTEMS™

PARTS DIAGRAM

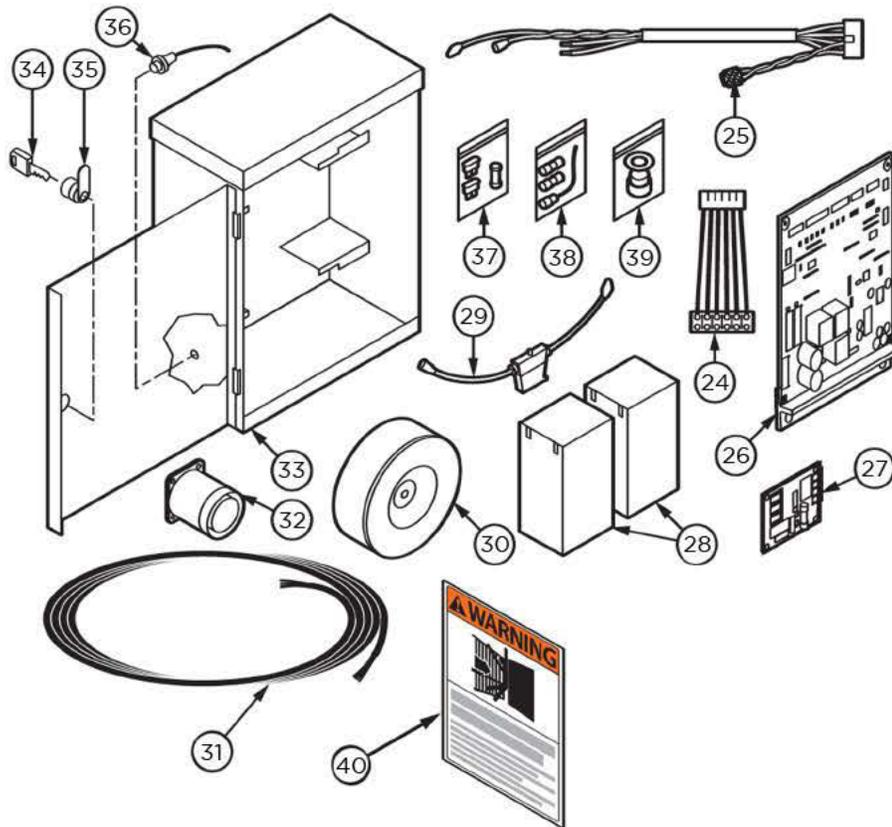

Item	Description	Part No.
24	Motor Harness (Single ECU Only)	ECUMTHRN
25	Power Harness	DUPHC
26	Control Board (Single)	DUPCB10-G5NX
26	Control Board (Master-Slave)	DUMSCB10-G5NX
27	EMI Board	DUEMI10
28	Battery	DUBA12
29	Battery Fuse Holder	VABFH
30	Toroid Transformer, 10 awg	DUTT10
31	6 Conductor Cable, 16 ga.	VA-CB16
32	Alarm	DUAL10
33	ECU Box	VA-ECUBB
34	ECU Access Key	ECUKEY
35	ECU Key Cylinder w/ 2 Keys	ECUKEYC
36	Reset Switch	ECURW
37	Fuse Kit	DUFSK10
38	Radio Antenna Kit	VARAK
39	Strain Relief (ECU)	DH3/4NMCC
40	Warning Placard	DUWPA

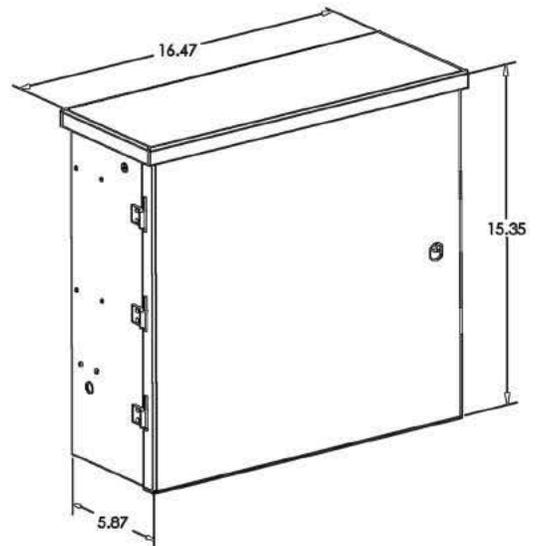

WARNING - For Installation By Qualified Personnel Only.



TABLE OF CONTENTS

Parts Diagram/Parts List	i-ii
Important Safety Information	
Important Safety Instructions	2
Important Installation Instructions	2-3
Maintenance/General Safety Precautions	4
Terminology	5
Photo Beam (non-contact sensor) Installation	6
Edge Sensor (contact sensor) Installation	7
Manual Release	7
Audible Alarm Reset Switch Installation	8
Warning Placard Installation	8
Important Installation Information	9
Specifications	9
Plan of Installation – Open Inside	10
Plan of Installation – Open Outside	11
Gate Operator Installation	
Step 1 through 5 – Operator Installation	12-13
Step 6 through 8 – Limit Switch and Positive Stop Setup	14
Opening/Closing Setup	15
Reference Wiring Diagram; Limit Switch Connections	15
Control Box Installation	16
Electrical Installation	
Electrical Installation (120/220 VAC)	17
Single Unit Connections	18
Master/Slave Connections	19
Vehicular Loop Detector Installation	
Loop Layout Diagrams	20
Installation Guidelines	21
Accessory Connections	
Open Commands; Safety Connections	22
Radio Receiver	23
Viking Electromagnetic Lock	24
Magnetic Lock; Solenoid; Guard Station	25
Special Features	
Intelligent Obstruction Sensor (Primary Entrapment Protection)	26
Fail Safe/Fail Secure Operation; Hold Open Timer	27
Gate Overlap Setting	28
Auto_open Feature	29
Optional Solar Panel Installation	30-31
Pipe Stand Mount Kit	32-33
Optional VikingBlue Installation	34
Troubleshooting	35-37



IMPORTANT SAFETY INFORMATION

WARNING - Not following these instructions may cause severe injury or death to persons.

IMPORTANT SAFETY INSTRUCTIONS

WARNING – To reduce the risk of severe injury or death:

1. READ AND FOLLOW ALL INSTRUCTIONS.
2. Never let children operate or play with gate controls. Keep the remote control away from children.
3. Always keep people and objects away from the gate. **NO ONE SHOULD CROSS THE PATH OF THE MOVING GATE.**
4. Test the gate operator monthly. The gate **MUST** reverse on contact with a rigid object or when an object activates the non-contact sensors. After adjusting the force or the limit of travel, retest the gate operator. Failure to adjust and retest the gate operator properly can increase the risk of injury or death.
5. Use the manual release only when the gate is not moving.
6. **KEEP GATES PROPERLY MAINTAINED.** Read the owner's manual. Have a qualified service professional make repairs to gate hardware.
7. The entrance is for vehicles only. Pedestrians must use a separate entrance.
8. **Every gate operator installation MUST have secondary protection devices against entrapment, such as edge sensors and photo beams more in particularly in places where the risk of entrapment is more likely to occur.**
9. SAVE THESE INSTRUCTIONS.

IMPORTANT INSTALLATION INSTRUCTIONS

1. Install the gate operator only when:
 - a) The operator is appropriate for the construction of the gate and the usage Class of the gate (refer to page 5),
 - b) All openings of a horizontal slide gate are guarded or screened from the bottom of the gate to a minimum of 4 feet (1.22 m) above the ground to prevent a 2-1/4 inch (57.2 mm) diameter sphere from passing through the openings anywhere in the gate, and in that portion of the adjacent fence that the gate covers in the open position,
 - c) **ALL EXPOSED PINCH POINTS ARE ELIMINATED OR GUARDED, AND**
 - d) **GUARDING IS SUPPLIED FOR EXPOSED ROLLERS.**
2. The operator is intended for installation only on gates used for vehicles. Pedestrians must be supplied with a separate access opening. The pedestrian access opening shall be designed to promote pedestrian usage. Locate the gate such that persons will not come in contact with the vehicular gate during the entire path of travel of the vehicular gate.
3. The gate must be installed in a location so that enough clearance is supplied between the gate and adjacent structures when opening and closing to reduce the risk of entrapment. Swinging gates shall not open into public access areas.
4. The gate must be properly installed and work freely in both directions prior to the installation of the gate operator. Do not over-tighten the operator clutch or pressure relief valve to compensate for a damaged gate.
5. The gate operator controls must be placed so that the user has full view of the gate area when the gate is moving **AND AWAY FROM THE GATE PATH PERIMETER,**



IMPORTANT SAFETY INFORMATION

WARNING - Not following these instructions may cause severe injury or death to persons.

IMPORTANT INSTALLATION INSTRUCTIONS Continued

6. Controls intended for user activation must be located at least six feet (6') away from any moving part of the gate and where the user is prevented from reaching over, under, around or through the gate to operate the controls. Outdoor or easily accessible controls shall have a security feature to prevent unauthorized use.
7. The Stop and/or Reset button must be located in the line-of-sight of the gate. Activation of the reset control shall not cause the operator to start.
8. All warning signs and placards must be installed where visible in the area of the gate. A minimum of two placards shall be installed. A placard is to be installed in the area of each side of the gate and be visible to persons located on the side of the gate on which the placard is installed.
9. **For gate operators utilizing a non-contact sensor (Photo beam or like) in accordance with section 31.1.1 of the UL325 standard:**
 - a) **See instructions on the placement of non-contact sensors for each Type of application (refer to page 6),**
 - b) **Care shall be exercised to reduce the risk of nuisance tripping, such as when a vehicle, trips the sensor while the gate is still moving, and**
 - c) **One or more non-contact sensors shall be located where the risk of entrapment or obstruction exists, such as the perimeter reachable by a moving gate or barrier (refer to page 6).**
 - d) **Use only Omron E3K-R10K4 photoelectric eye to comply with UL325**
10. **For a gate operator utilizing a contact sensor (Edge sensor or like) in accordance with section 31.1.1 of the UL325 standard:**
 - a) **One or more contact sensors shall be located where the risk of entrapment or obstruction exists, such as at the leading edge, trailing edge, and post mounted both inside and outside of a vehicular horizontal slide gate (refer to page 7).**
 - b) **One or more contact sensors shall be located at the bottom edge of a vehicular vertical lift gate.**
 - c) **One or more contact sensors shall be located at the pinch point of a vehicular vertical pivot gate.**
 - d) **A hardwired contact sensor shall be located and its wiring arranged so that the communication between the sensor and the gate operator is not subjected to mechanical damage.**
 - e) **A wireless contact sensor such as one that transmits radio frequency (RF) signals to the gate operator for entrapment protection functions shall be located where the transmission of the signals are not obstructed or impeded by building structures, natural landscaping or similar obstruction. A wireless contact sensor shall function under the intended end-use conditions.**
 - f) **One or more contact sensors shall be located on the inside and outside leading edge of a swing gate. Additionally, if the bottom edge of a swing gate is greater than 6 inches (152 mm) above the ground at any point in its arc of travel, one or more contact sensors shall be located on the bottom edge (refer to page 7).**
 - g) **One or more contact sensors shall be located at the bottom edge of a vertical barrier (arm).**
 - h) **Use only Miller Edge Model MGR20 or MGS20 edge sensor to comply with UL325**



IMPORTANT SAFETY INFORMATION

WARNING - Not following these instructions may cause severe injury or death to persons.

MAINTENANCE

Remove the Power Harness from the Control Board (refer to page 17)

- Clean and lubricate the turning pins and gate hinges using the recommended lubricant.
- Clean and lubricate the lead screw using silicon grease.
- Check to ensure all mounting hardware of the gate operator is properly tightened.
- Ensure that the gate moves freely.
- Check for corroded parts and replace if necessary.
- Check the battery for the following:
 - Battery connections must be free of corrosion.
 - Battery voltage must be 26 VDC (fully charged battery).

Reconnect the Power Harness to the Control Board (refer to page 17)

- Check and confirm the proper operation of all safety devices (photoelectric eye, edge sensors, ect.).
- Check and confirm the operation of all installed accessories.
- Check and confirm the operation of all special features such as the Intelligent Obstruction Sensor and Hold Open Timer (refer to page 20 to 27)
- Check and confirm the operation of the manual release (refer to page 7)
- Verify battery backup functionally by turning off the power source (120 VAC and 220 VAC).
DO NOT FORGET TO TURN ON THE POWER SOURCE AFTER VERIFICATION.

GENERAL SAFETY PRECAUTIONS

The following precautions are an integral part of the product and must be supplied to the user. Read carefully as they contain important Recommendations for the safe installation, use, and maintenance.

- These instruction must be kept and forwarded to all possible future users of the system.
- This product must be used only for that which it has been expressly designed.
- Any other use is to be considered improper and therefore dangerous.
- The manufacturer cannot be held responsible for possible damage caused by improper, erroneous, or unreasonable use.
- Avoid operating in the proximity of the hinges or moving mechanical parts.
- Do not enter the path of the moving gate while in motion.
- Do not obstruct the motion of the gate as this may cause a situation of danger.
- Do not allow children to play or stay within the the path of the moving gate.
- Keep remote control or any other control devices out of the reach of children to avoid possible involuntary activation of the gate operator.
- In case of break down or malfunction of the product, disconnect from the main power source. Do not attempt to repair or intervene directly, contact only qualified personnel for repair.
- Failure to comply with the above may create a situation of danger.
- All cleaning, maintenance, or repair work must be carried out by qualified personnel.
- In order to guarantee that the system works efficiently and correctly, it is important to have the manufacturer's instructions on maintenance of the gate and operator carried out by qualified personnel.
- In particular, regular checks are recommended in order to verify that the safety devices are operating correctly.

All installation, maintenance, and repair work must be documented and made available to the user.

Installer:

Signature _____

Date _____

Contact: _____



IMPORTANT SAFETY INFORMATION

CAUTION: To Reduce the Risk of Fire or Injury to Persons


- a) Use only the following type and size of battery(ies): Yuasa NP7-12
- b) Do not dispose of the battery(ies) in fire. The cells may explode. Check with local codes for possible disposal instructions.
- c) Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- d) Exercise care in handling batteries in order not to short the battery with conductive materials such as rings, bracelets, and keys.
- e) Change the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- f) Observe proper polarity orientation between the battery(ies) and charging circuit.
- g) Do not mix batteries of different sizes or from different manufacturers in this product (applies to products employing more than one user replaceable secondary battery).
- h) A battery-operated product employing a secondary battery supply intended to be charged within the product shall contain specific instructions concerning the proper method of charging.

UL325 Gate Operator Classification

GLOSSARY


RESIDENTIAL VEHICULAR GATE OPERATOR

CLASS I – A vehicular gate operator (or system) intended for use in a home of one-to four single family dwelling, or a garage or parking area associated therewith.

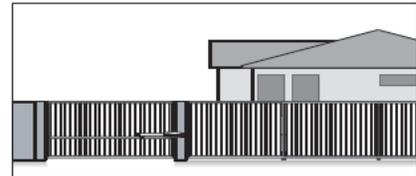


COMMERCIAL/GENERAL ACCESS VEHICULAR GATE OPERATOR

CLASS II – A vehicular gate operator (or system) intended for use in a commercial location or building such as a multi-family housing unit (five or more single family units), hotel, garages, retail store, or other building servicing the general public.

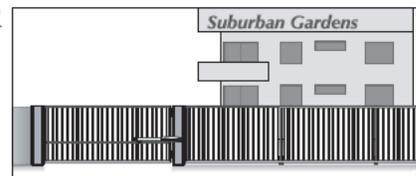


INDUSTRIAL/LIMITED ACCESS VEHICULAR GATE OPERATOR

CLASS III – A vehicular gate operator (or system) intended for use in an industrial location or building such as a factory or loading dock area or other locations not intended to service the general public.

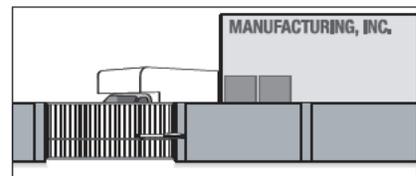

RESTRICTED ACCESS VEHICULAR GATE OPERATOR

CLASS IV – A vehicular gate operator (or system) intended for use in a guarded industrial location or building such as an airport security area or other restricted access locations not servicing the general public, in which unauthorized access is prevented via supervision by security personnel.

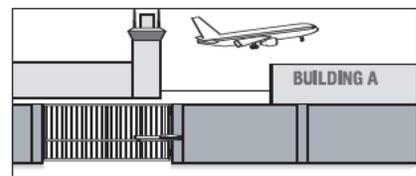

Install the gate operator only when:

The operator is appropriate for the construction of the gate and the Usage Class of the gate.



IMPORTANT SAFETY INFORMATION

WARNING - Not following these instructions may cause severe injury or death to persons.

NOTE - This type of installation DOES NOT reverse the gate all the way back to its limits when the photo-beam is obstructed. This installation is only to protect against entrapment and to comply with UL325.

Photo Beam (non-contact sensor) Installation Secondary Entrapment Protection



Photo beams or like must be installed to reduce the risk of entrapment.

Use only Omron E3K-R10K4 photoelectric eye to comply with UL325

Make the electrical connections of the photoelectric sensor as described here on this page.

Care shall be exercised to reduce the risk of nuisance tripping, such as when a vehicle trips the sensor while the gate is still moving; and

One or more non-contact sensors shall be located where the risk of entrapment or obstruction exists, such as the perimeter reachable by a moving gate or barrier.

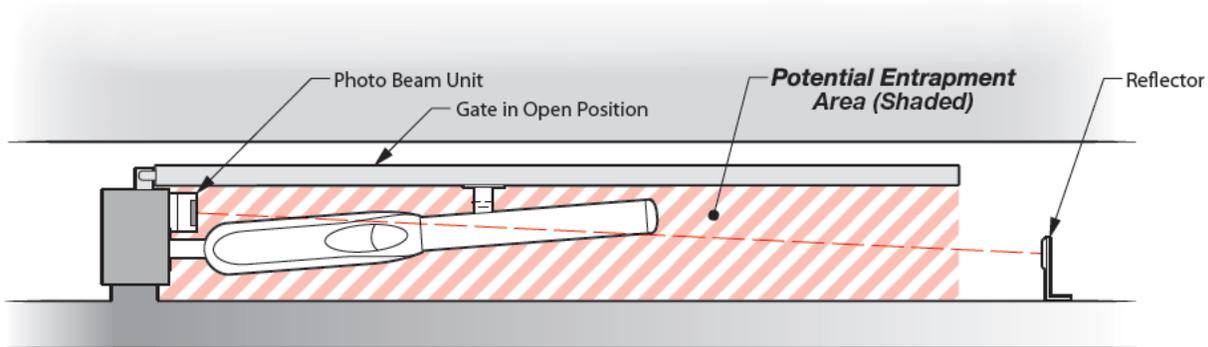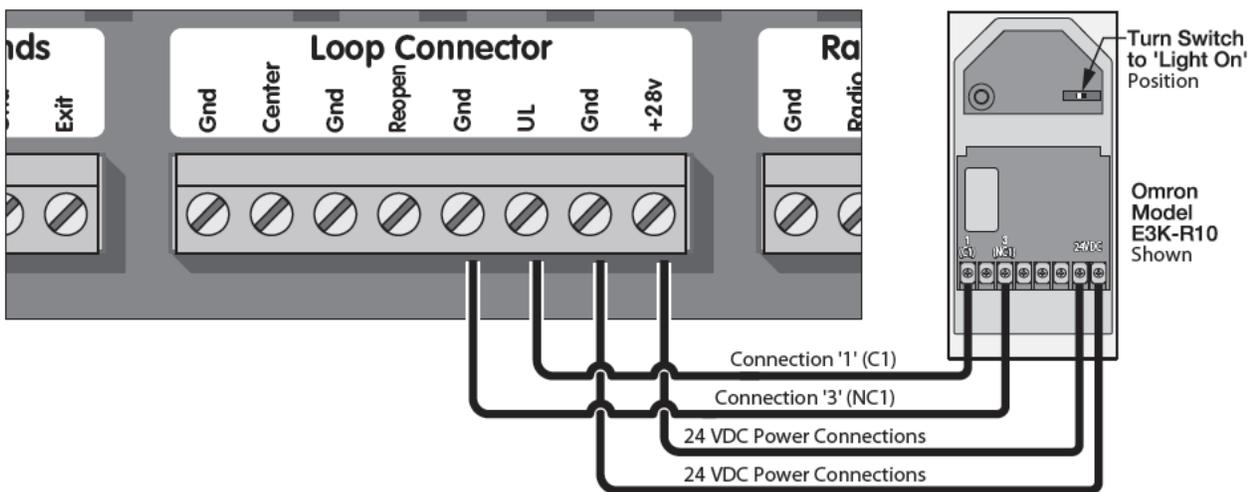

One or more non-contact sensors should be located where the risk of entrapment or obstruction exists, such as the perimeter reachable by a moving gate or barrier.

Consult the installation manual of the UL325 device (photo beam or like) for detail information about the usage, installation, and maintenance




IMPORTANT SAFETY INFORMATION

WARNING - Not following these instructions may cause severe injury or death to persons.

Edge Sensor (contact sensor) Installation

Secondary Entrapment Protection

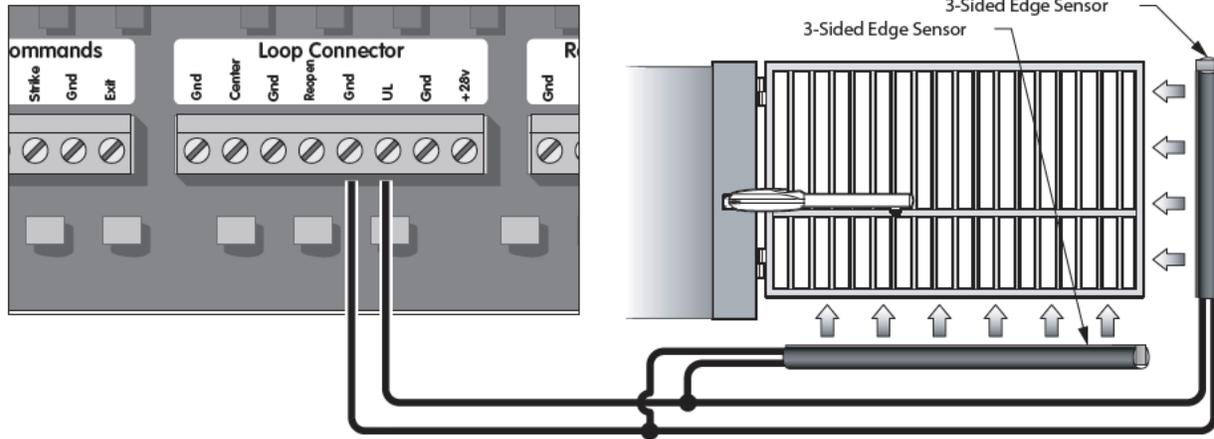

Edge sensor or like must be installed to reduce the risk of entrapment.


Use only Miller Edge 3-sided activation type MGR20 or MDS20 to comply with UL325. One or more contact sensors shall be located on the inside and outside leading edge of a swing gate. Additionally, if the bottom edge of a swing gate is greater than 6 inches (152 mm) above the ground at any point in its arc of travel, one or more contact sensors shall be located on the bottom edge.

1. A hardwired contact sensor shall be located and its wiring arranged so that the communication between the sensor and the gate operator is not subjected to mechanical damage.
2. A wireless contact sensor such as one that transmits radio frequency (RF) signals to the gate operator for entrapment protection functions shall be located where the transmission of the signals are not obstructed or impeded by building structures, natural landscaping or similar obstruction. A wireless contact sensor shall function under the intended end-use conditions.

Manual Release

When manual operation is required:

1. Unlock and remove the Top Cover with the Key or optional Thumbscrew provided.
2. Place the Manual Release Switch to the "RELEASE" position.
3. To resume normal operation, place the Manual Release Switch back to the "ENGAGE" position.

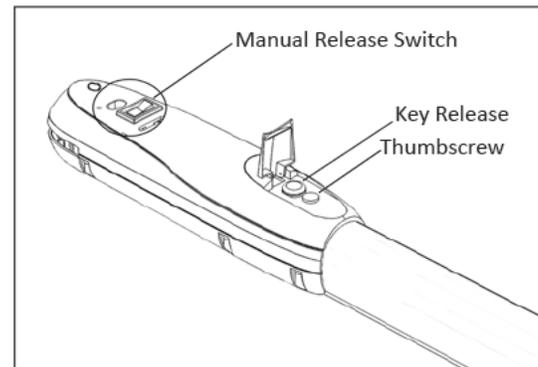

IMPORTANT SAFETY INFORMATION

WARNING - Not following these instructions may cause severe injury or death to persons.


Audible Alarm Reset Switch Installation

Manual Reset for the Audible Alarm

UL325 standard requires an audible alarm to go off after two consecutive events detected by the primary entrapment protection of the gate operator (obstruction sensor). The audible alarm will continue to sound for 5 minutes or until a stop command gets actuated.

The Stop command can be actuated in two different forms:

1. Using the Built in Stop switch on the Control Box; or
2. Using an External Stop button within the sight of the gate, away from moving parts of the gate and out of reach of children.
3. Controls intended for user activation must be located at least six feet (6') away from any moving part of the gate and where the user is prevented from reaching over, under, around, or through the gate to operate the controls. Outdoor or easily accessible controls must have a security feature to prevent unauthorized use.
4. The Stop and/or Reset button must be located in the line-of-sight of the gate. Activation of the reset control must not cause the operator to start.

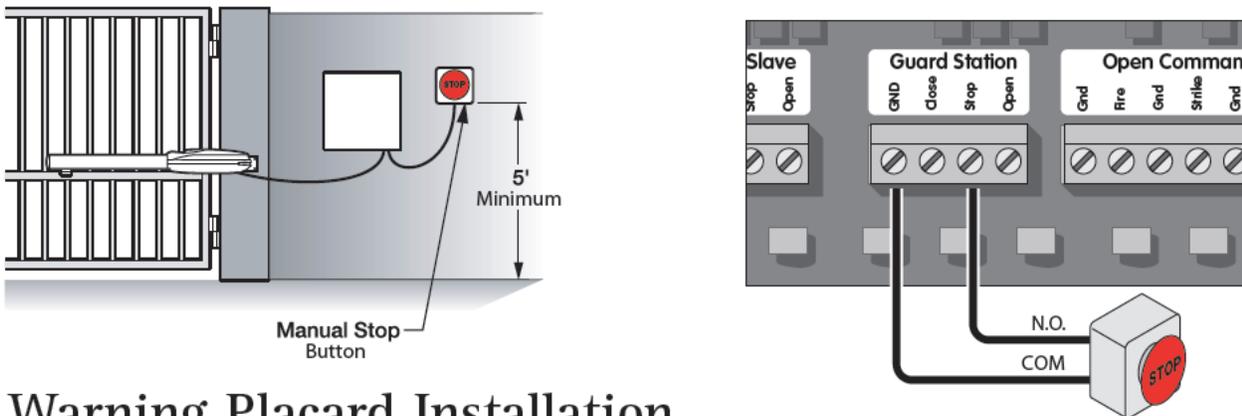

Warning Placard Installation




All Warning Signs and Placards must be installed where visible in the area of the gate. A minimum of two placards must be installed. A placard is to be installed in the area of each side of the gate and be visible.

IMPORTANT INSTALLATION INFORMATION

**CAUTION - FOR USE WITH GATES OF A MAXIMUM OF 18 FT. IN LENGTH AND 700 LBS. IN WEIGHT.
WARNING - TO REDUCE THE RISK OF SEVERE INJURY OR DEATH TO PERSONS:**




This is NOT a pedestrian gate operator

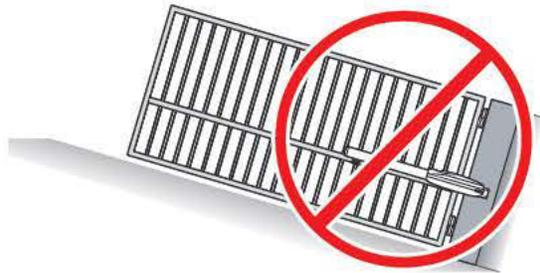

Do NOT Install the gate operator to lift gates


Locate Control Buttons:

1. Within sight of the gate,
2. At a minimum height of 5 feet so small children are not able to reach it; and
3. At Least 6 Feet away from all moving parts of the gate.

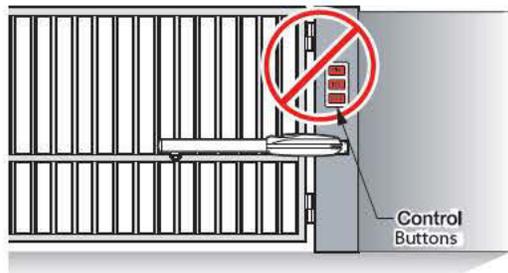

Specifications

Power Requirements:	120 VAC Single Phase at 2 Amps Or 220 VAC Single Phase at 1 Amp
Operating Temperature:	-20°C (-4°F) to 70°C (158°F)
Maximum Gate Weight/Length:	Refer to Chart

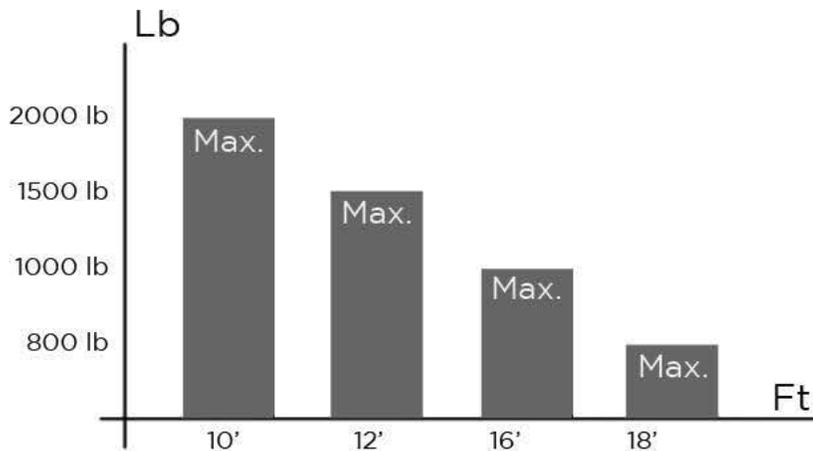


Gate Weight/Length Relationship



PLAN OF INSTALLATION - OPEN INSIDE

The gate must be installed in a location so that enough clearance is supplied between the gate and adjacent structures when opening and closing to reduce the risk of entrapment.

Swinging gates shall not open into public access areas.

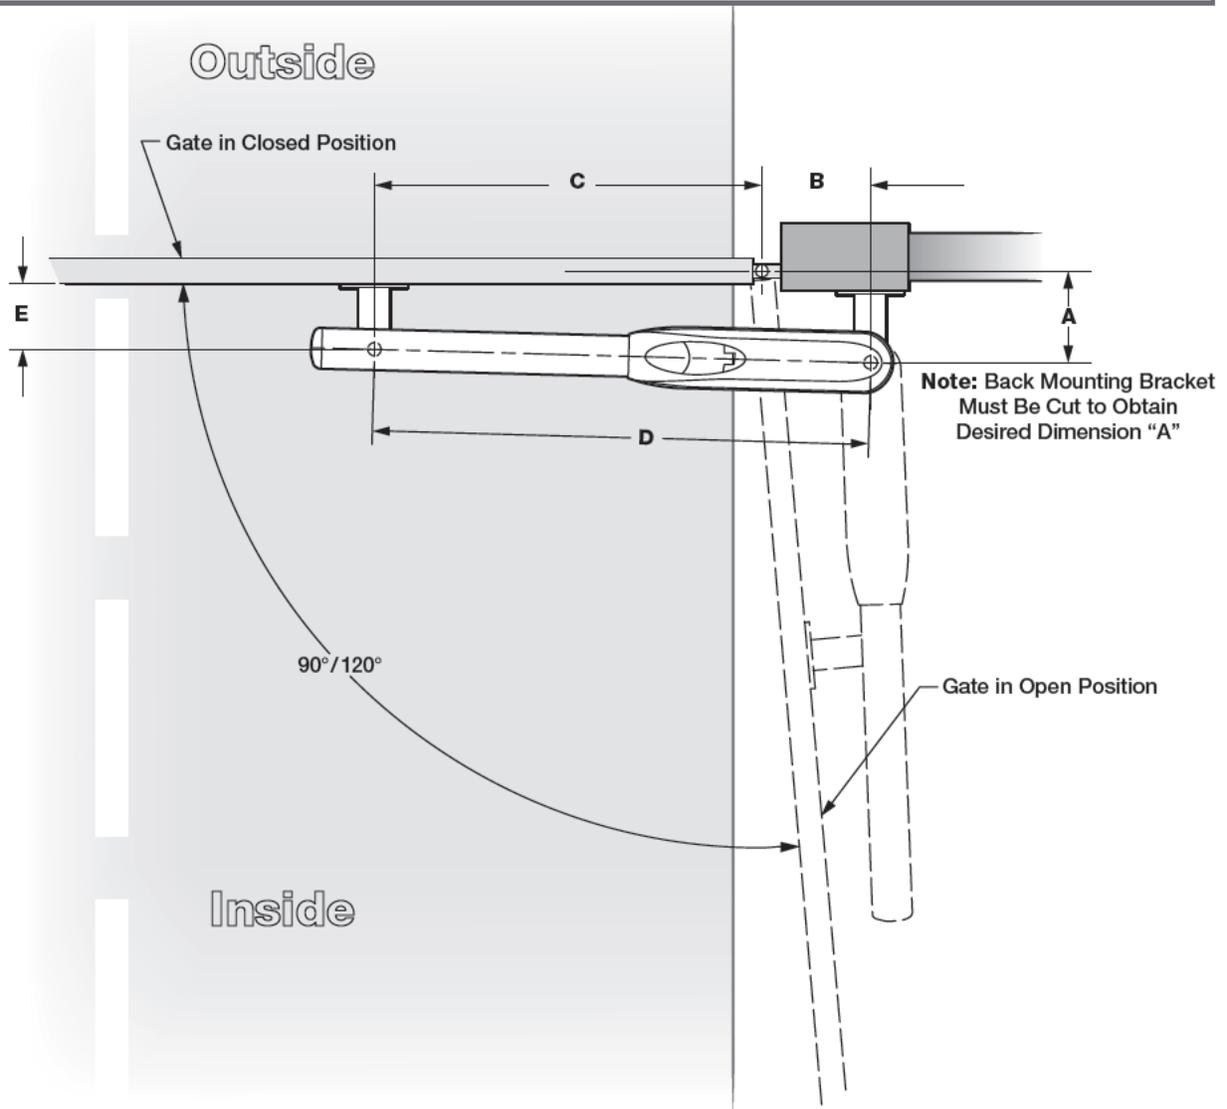

Range	NORMAL INSTALLATION					Opening Time
	A	B	C	D	E	
Option A	6.00	4.50	27	31.5	4.75	14 seconds
Option B	6.625	7.875	28	35.875	4.75	20 seconds

Figure A
Open Inside Plan of Installation

Note: Varying from the dimensions shown may severely affect the speed and performance of the gate operator.



PLAN OF INSTALLATION – OPEN OUTSIDE

The gate must be installed in a location so that enough clearance is supplied between the gate and adjacent structures when opening and closing to reduce the risk of entrapment.

Swinging gates shall not open into public access areas.

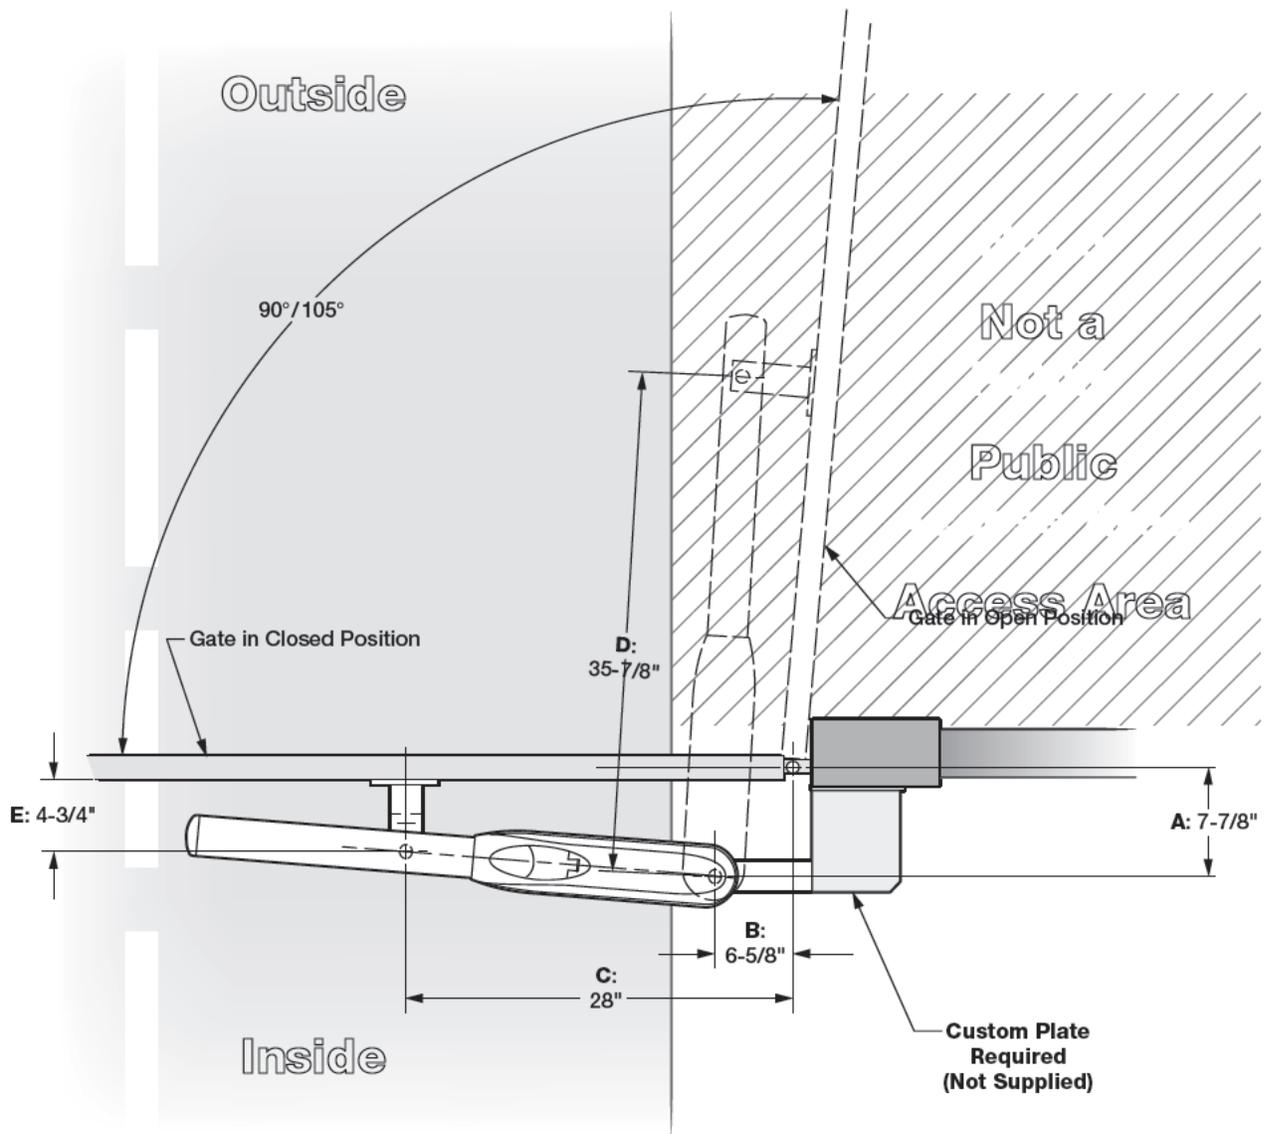


Figure B
Open Outside Plan of Installation

Note: Varying from the dimensions shown may severely affect the speed and performance of the gate operator.



GATE OPERATOR INSTALLATION

CAUTION - If Front Mounting Bracket is not welded to a frame member that runs the full length of the gate, the gate operator may damage the gate. Do not weld the bracket or backing plate to a few pickets.




STEP 1

Cut and position the Front Mounting Bracket (offset bar) according to figure A or B found on page 10 or 11. Tack weld the bracket in place. Ensure that the bracket is level.

Note: It is recommended to use a frame member across the full width of the gate.


For gates of non-ferrous construction, a backing plate is provided. The bracket must be cut to the proper length and welded to the backing plate if used.

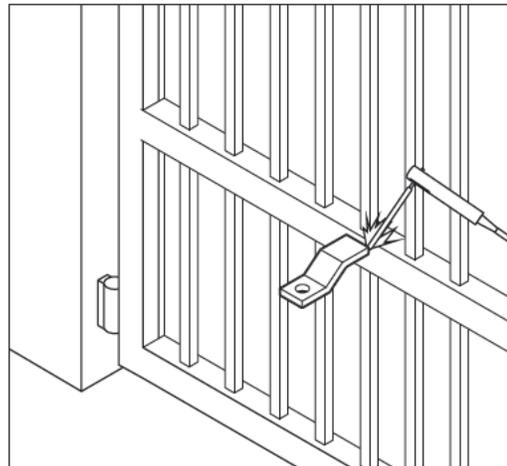

STEP 2

Cut and position the Back Mounting Bracket (pivot bar) according to figure A or B found on page 10 or 11. Tack weld the bracket in place. Ensure that the bracket is level.

Note: For an Open Outside gate, an additional bracket will need to be fabricated to obtain the proper configuration (see Figure B, page 11). A backing plate is also provided if unable to weld the Back Mounting Bracket to the gate post or column.

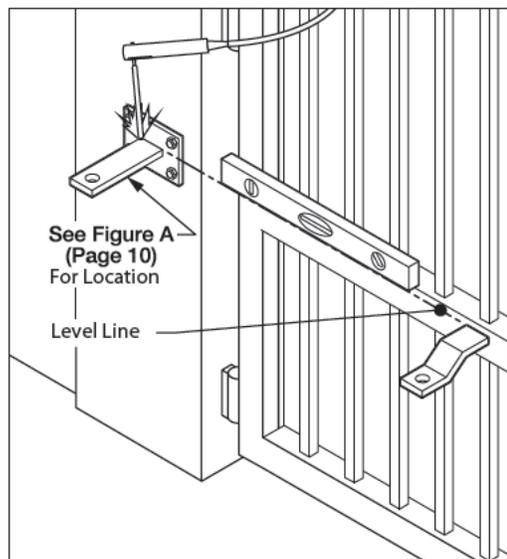


GATE OPERATOR INSTALLATION

Step 3

Remove the Top Cover and set for Manual Release:

- a) Open the plastic flap
- b) Remove the Top Cover.
- c) Place the Manual Release Switch in the "Off" Position.

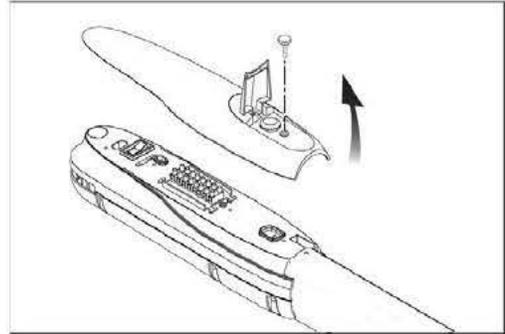


STEP 4

Mount the operator and ensure that the gate and gate operator moves freely.


Once it is determined the operator will work properly, remove the operator and complete the welding process.

Place the Manual release switch back to the "Reset" position.

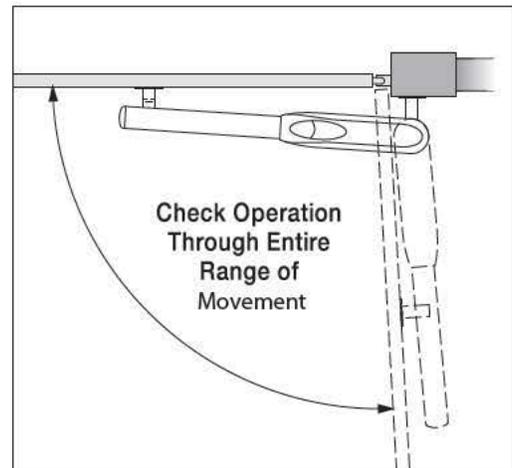


STEP 5

Remount the gate operator. Lubricate the moving parts (the carrier bolt shaft on the lead screw bar, the large and small washer) and tighten the self-locking nut.

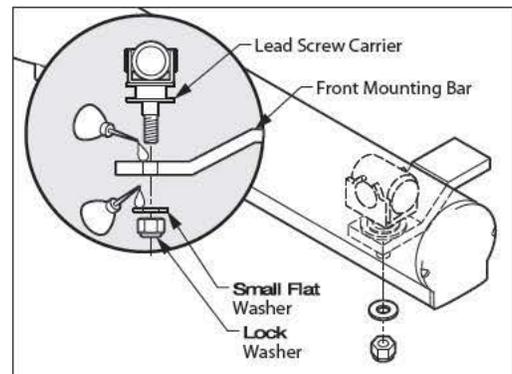

Note: The Rear Pivot Bushing provided is oil impregnated and does not require lubrication.

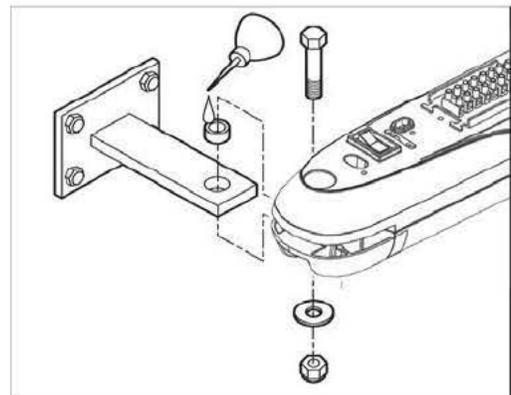



GATE OPERATOR INSTALLATION

Limit Switch Setup

STEP 6

Remove the lead screw cover:

- a) Remove the screw and
- b) Slide out the cover.

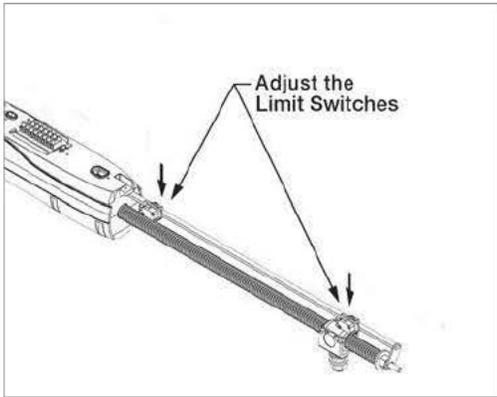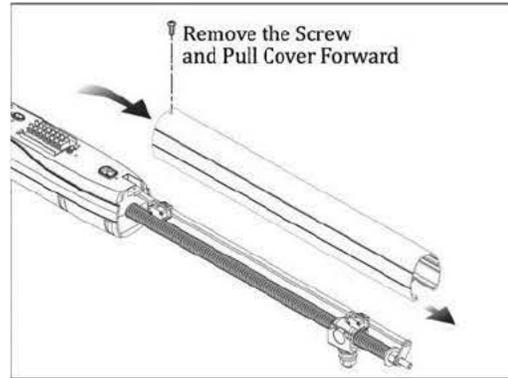

Note: Leave cover off until after the installation of the control box and the electrical installation. Verify that the operator opens and closes to the desired position under power. Make any adjustments as necessary.

STEP 7



Loosen the screws on the limit switch holders and position the limit switches to the desired position.

Move the gate manually and ensure that the limit switch gets actuated at the desired open and closed position. The limit switch will click when engaged by the lead screw carrier.

Retighten the screws on the limit switch holders once the proper position has been determined (DO NOT OVERTIGHTEN).

With the Close Limit Switch properly adjusted and the gate partially open, install the Positive Stop Collar onto the shaft in the position shown. (There should be a 1/16" gap between the Collar and the Limit Switch Holder). Tighten the Collar evenly until secure.

Close the gate and check that the gate stops at the intended place. If not, readjust the collar as necessary and recheck the position after opening and closing the gate.

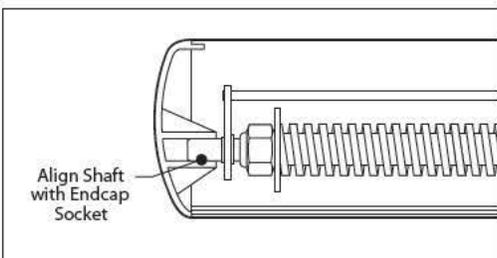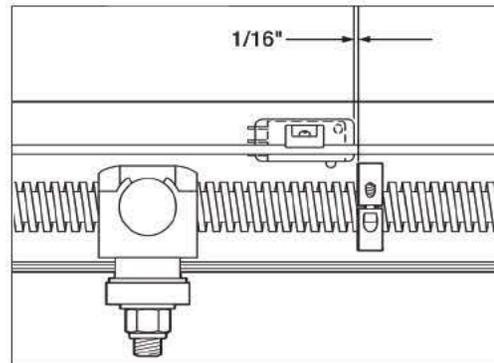

STEP 8

Replace the cover taking care to position the shaft properly inside the endcap.



GATE OPERATOR INSTALLATION

Opening/Closing Setup:

To have the gate operator slow down prior to reaching its limits use the following steps:

1. Setup the Limit Switches manually at the desired open and close position.
2. Allow the gate operator to run a full open and close cycle (from limit to limit) without interruption.

Note: During the first full open and close cycle: The gate operator doesn't slow down prior to reaching its limits. During subsequent cycles: The gate operator will slow down prior to reaching its limits.


3. Verify that the gate opens and closes to the desired position.

To change the open or close limit position(s) the following steps MUST BE taken:

A. Reset the gate operator by performing one of the following steps:


- i. Disconnect the Motor/Limit Harness Connector (see page 18 or 19) or
- ii. Actuate both limits at the same time

B. Repeat steps 1, 2 and 3.

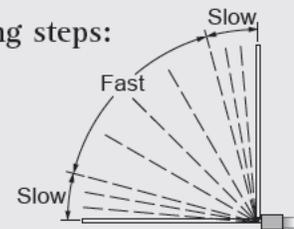

Reference Wiring Diagram


Connect the lead wires as shown

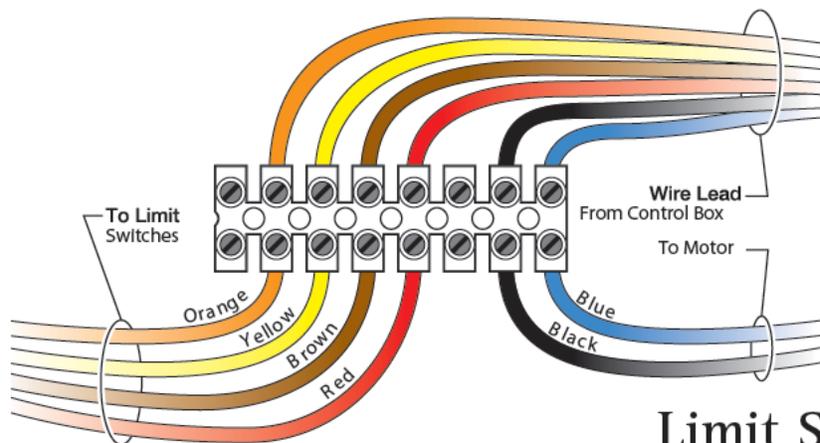

Note: Use this wiring diagram as a guide to connect the wires to the motor unit.

Limit Switch Connections

The Limit Switches are wired as shown

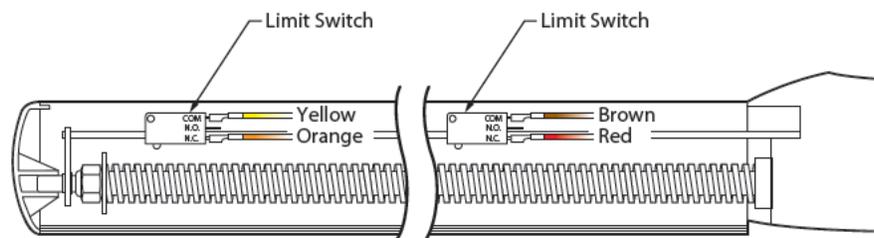

CONTROL BOX INSTALLATION




WARNING - If the control box is not mounted properly it may fall, causing damage and/or injury. The Electronic Control Unit (ECU) weight is approximately 40 lbs. Be sure that the substrate being mounted to and the fasteners being used are appropriate to support the weight of the control box.

1. Disconnect the Siren and Stop Button Leads from the Control Board. Remove the Control Board Mounting Plate. The plate is held in the box by four screws.

2. Position the ECU Box in the desired place and mark the mounting holes. Prepare the holes to receive the anchors/fasteners.

3. Position the ECU Box and secure it to the mounting surface using the Sealed Washers provided (place the rubber side of the washers against the inside of the control box).

Note: Depending on type of anchor used, it may be necessary to enlarge the mounting holes in the control box.

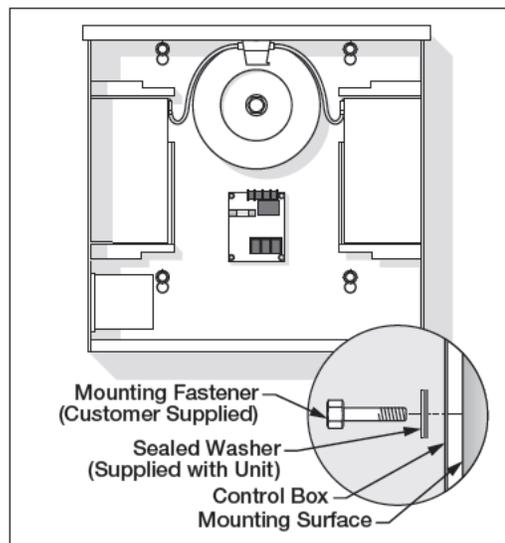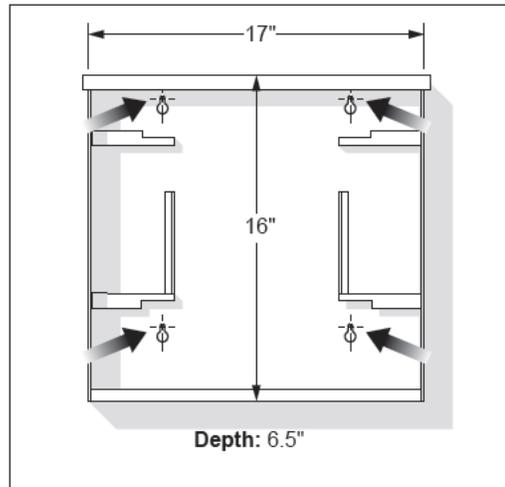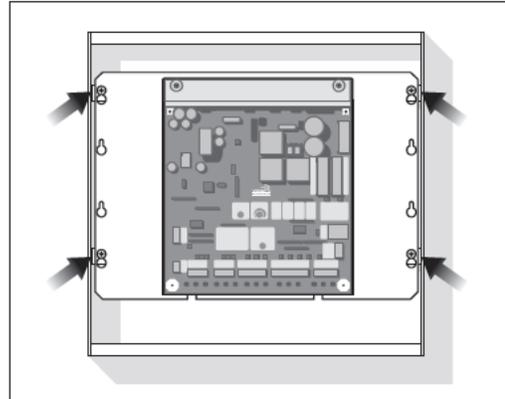

ELECTRICAL INSTALLATION

Caution – Do not connect the power harness to the board until the installation is ready for verification.

STEP 4 (Refer to Page 16 for EMI Board Location)




The Gate Operator requires a single phase AC line to operate the gate and charge the batteries.

- A. Turn off the main switch or breaker for the power line being used.
- B. Move the selector switch on the Incoming Voltage Selector to the proper position (115 for 110 to 120VAC, 230 for 200 to 240VAC).
- C. Connect the incoming power wires to the terminals as shown in the illustration.
- D. Turn on the main switch or breaker once the installation is ready for final adjustments.
- E. Verify that all three LEDs are illuminated on the EMI Board.
- F. Plug the Power Harness in to the Control Board.
- G. Verify that the “Charger” and “Power” LEDs are illuminated on the Control Board.

Guidelines for proper ground installation

To minimize the effects caused by lightning, follow these guidelines.


1. Use a ground rod to provide a ground reference.
2. Consult your city code and be aware of underground services in the site of the gate operator to prevent inconveniences.
3. Always use a single bonding point for grounding.
4. All ground wires must be as short and as thick as possible.
5. Prevent unnecessary turns or loops in all ground wires.

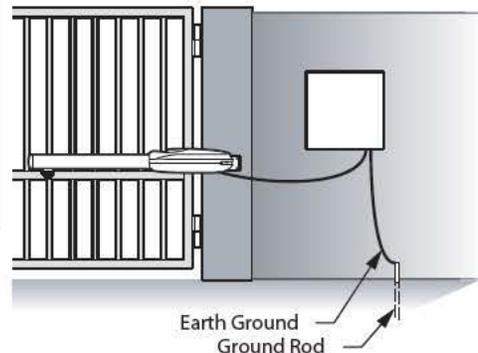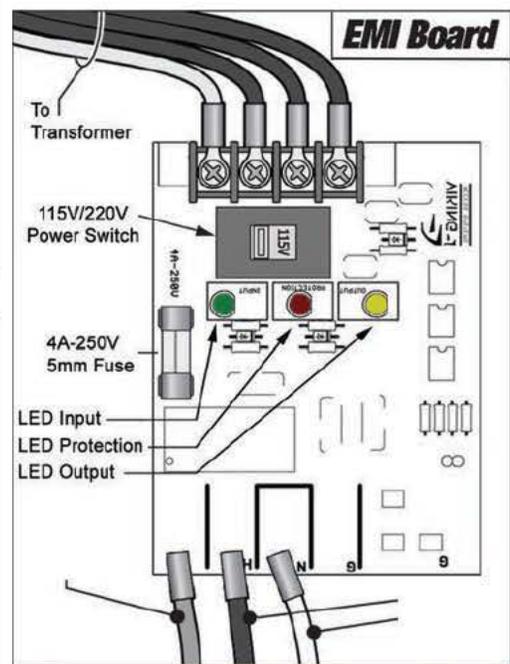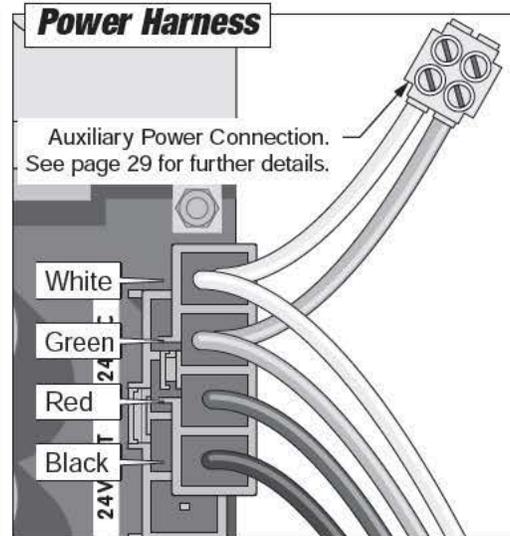





ELECTRICAL INSTALLATION – SINGLE UNIT

Single Unit Connections

Connect the wires from the motor unit to the terminal block mounted next to the control board. Match wire colors to the terminal block.

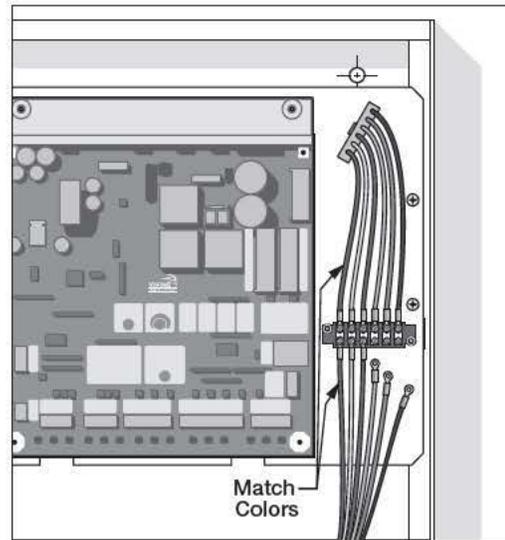


Connect the wire harness to the "OPEN RIGHT" connector if the gate opens inside. Connect the wire harness to the "OPEN LEFT" connector if the gate opens outside.

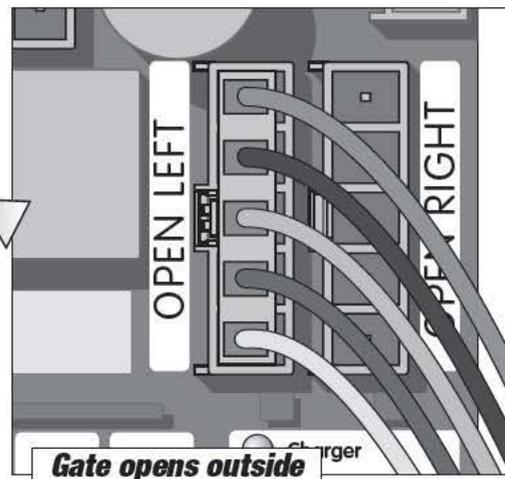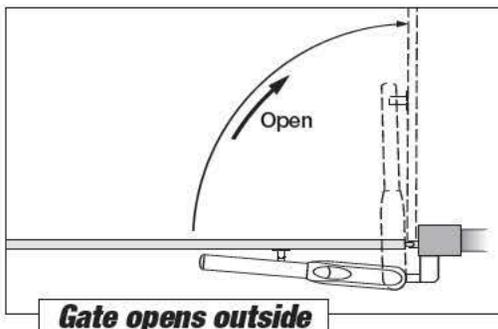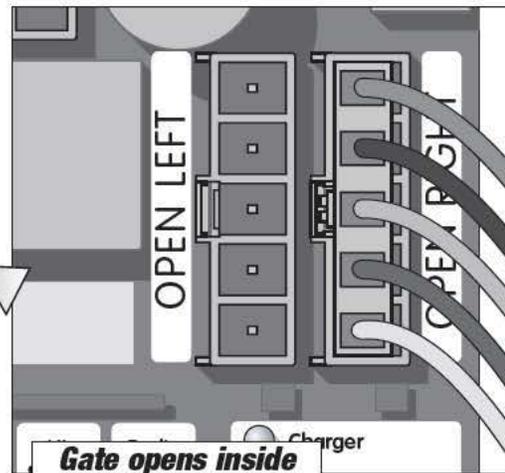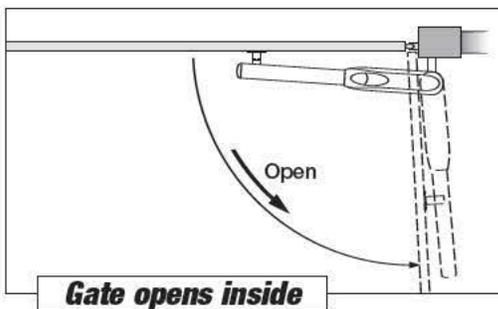



ELECTRICAL INSTALLATION – MASTER/SLAVE

Master/Slave Connections


A Master/Slave control board is available, when required, to run two gate operators in synchronous mode.

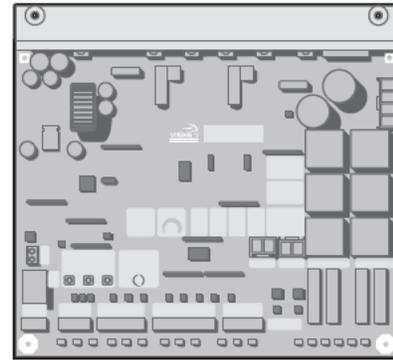

Using the connectors provided insert the wires from the motor units as shown in the diagram below. Insert the connectors in the proper receptacles (Master or Slave, Open Inside or Outside).

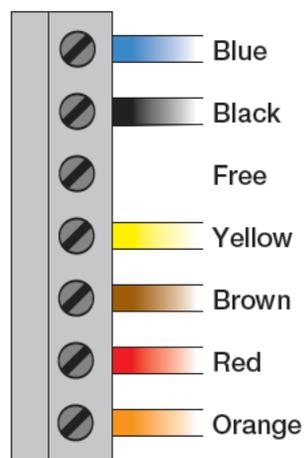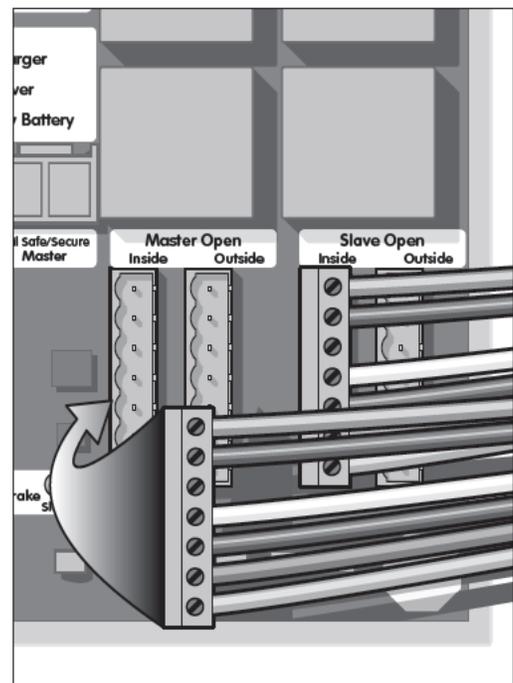


VEHICULAR LOOP DETECTOR INSTALLATION

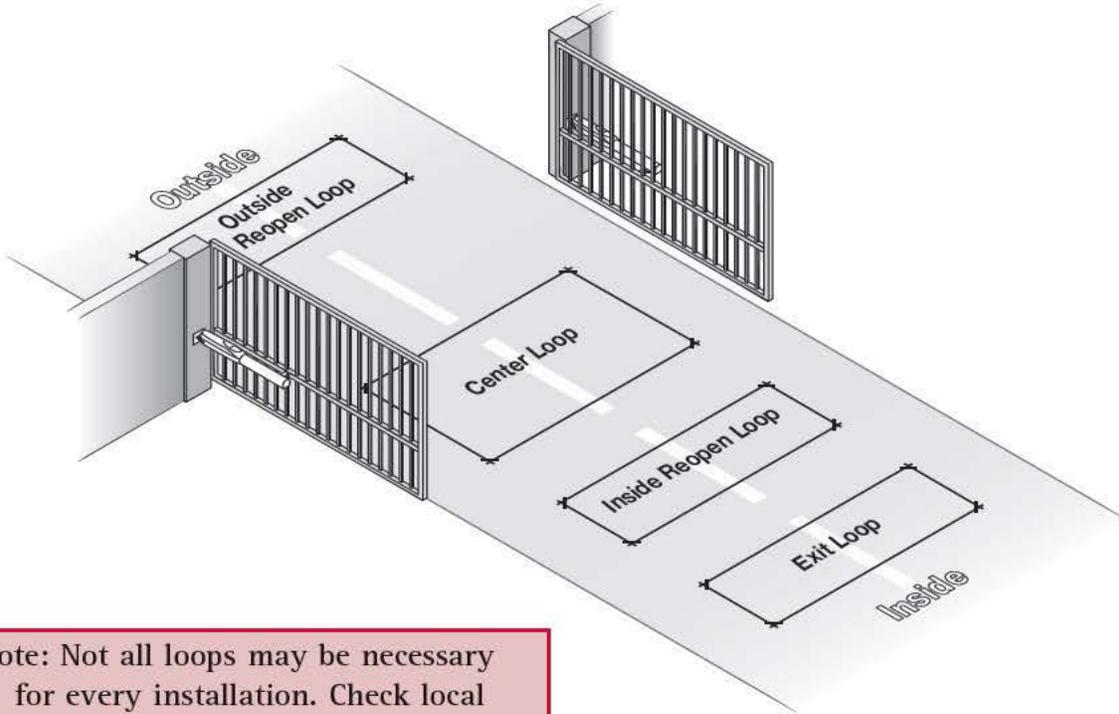

Note: Not all loops may be necessary for every installation. Check local regulations and accepted best-practice design requirements.

Dimension A – 5' for Single Gate Operator
6' for Master/Slave Gate Operator

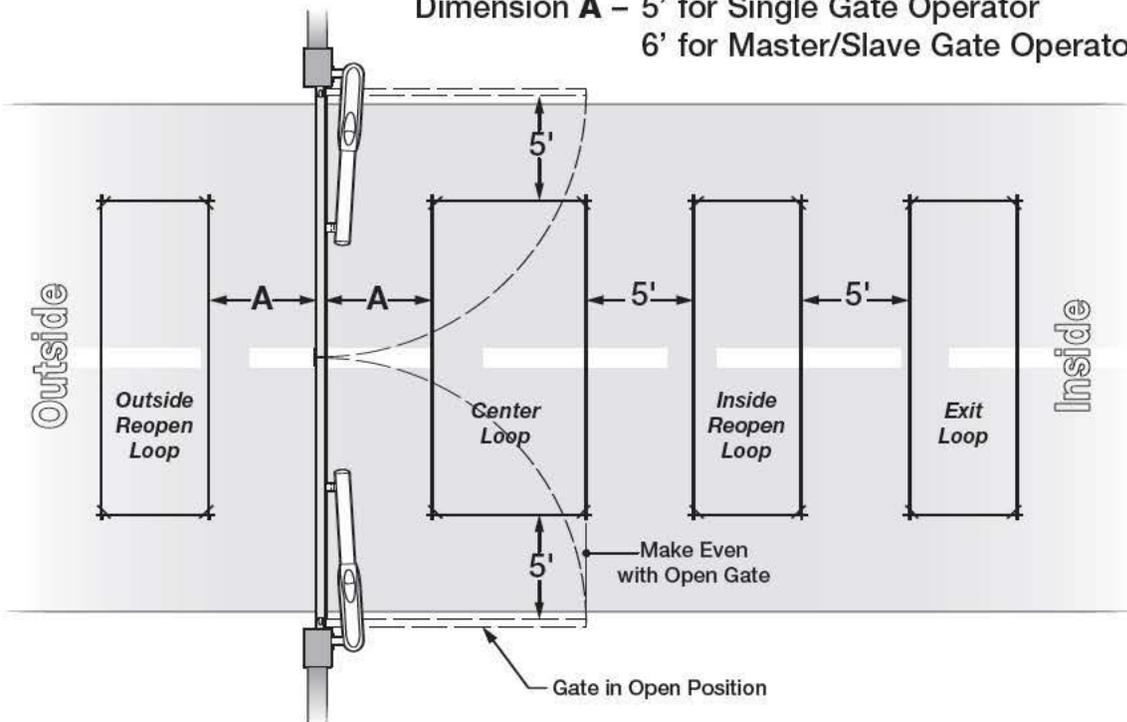

VEHICULAR LOOP DETECTOR INSTALLATION

WARNING – Consult the installation instructions from the loop detector manufacturer. The following statements are provided as a guide but different requirements may be required by the vehicular loop detector manufacturer.

Guidelines for Vehicular Loop Detector Installation

1. Prevent sharp corners in the geometry of the loop sensor.
2. Install the appropriate number of turns for your loop geometry based on the loop perimeter. Use Table C (below) as a guide.
3. Use XLP (cross-linked-polyethylene) type of wire. This wire reduces the effects of moisture and other environmental events in altering the functionality of the vehicular loop detector.
4. Twist the lead wire at least 6 turns per foot.
5. Use BACKER-ROD to minimize damage to the loop detector wire prior to using the sealant.
6. Place the loop detector wire and adjust the sensitivity of the vehicular loop detector unit in a way to minimize the effects of the gate over the loop detector wire.

IMPORTANT – Some of the following parameters may affect the proper functionality of the vehicular loop detector (consult the installation manual and the manufacturer of the vehicular loop detector).

- Gate size
- Number of turns in the loop sensor wire;
- Distance from the loop sensor wire to the gate either at the open or close position.



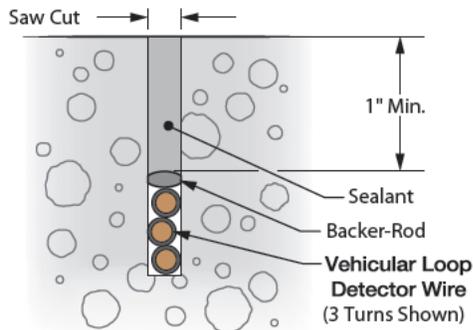


Table C – Recommended Number of Turns

Perimeter in Feet	Number of Turns
10	5
20	4
30-40	3
50-100	2

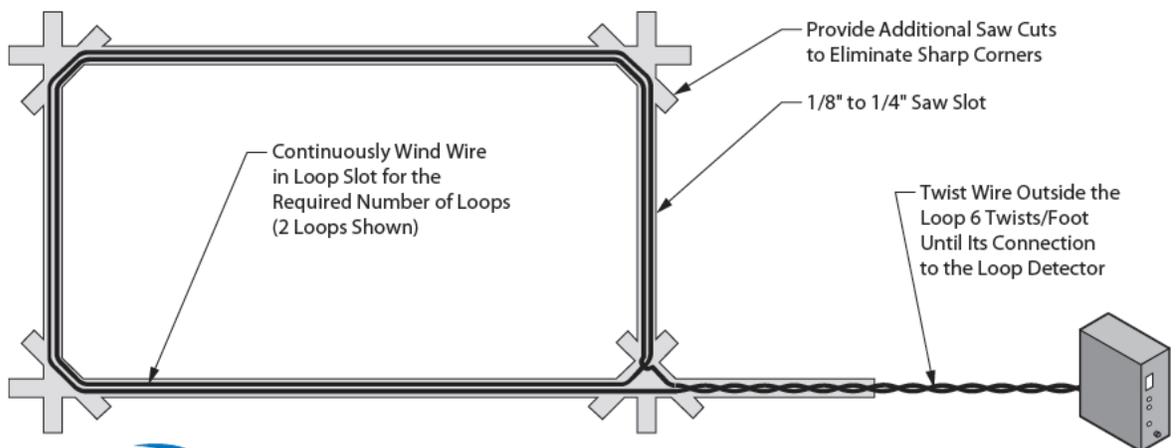

ACCESSORY CONNECTIONS

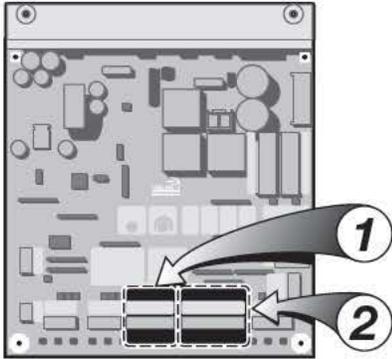


Connection Locations
(Single Unit Board shown)

Vehicle loop detectors must be installed to decrease the possibility of vehicle entrapment on the gate (see page 20).


The SECONDARY ENTRAPMENT PROTECTION like the edge sensor and the photoelectric beam MUST BE PART OF EVERY SINGLE INSTALLATION to prevent pedestrian or animal entrapment (see pages 6 and 7).

The edge sensor and/or the photoelectric beam must be UL325 compliant devices.


Open Commands

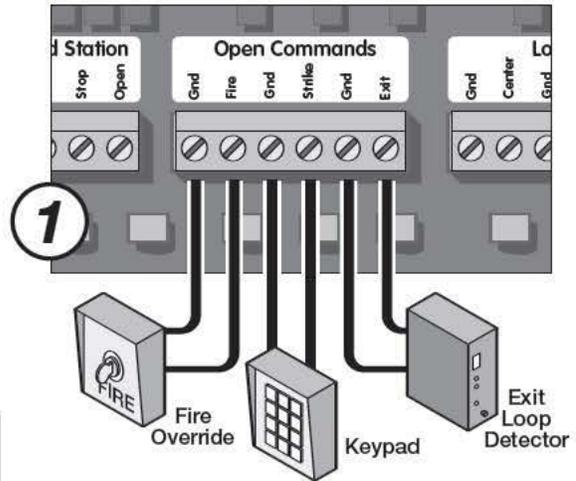


Safety Connections

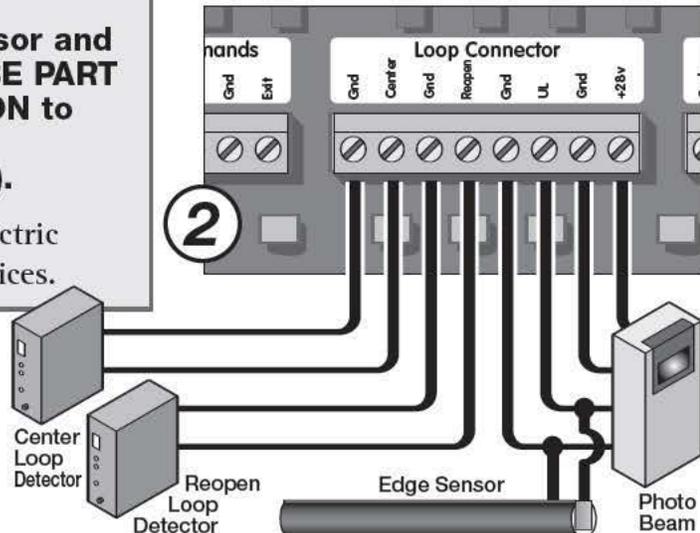

Reopen Photo Beam

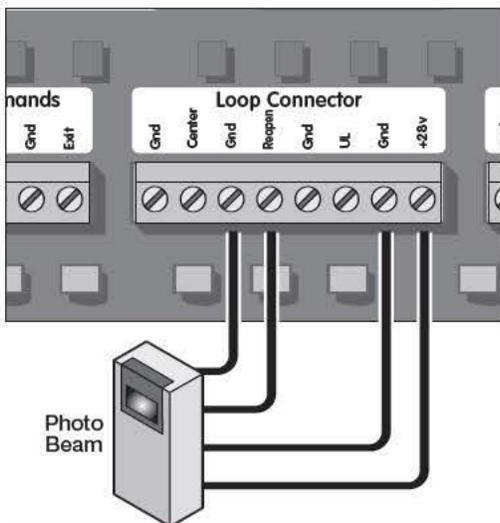

As an alternative to the Outside Reopen Loop, a photo beam unit can be used as shown.

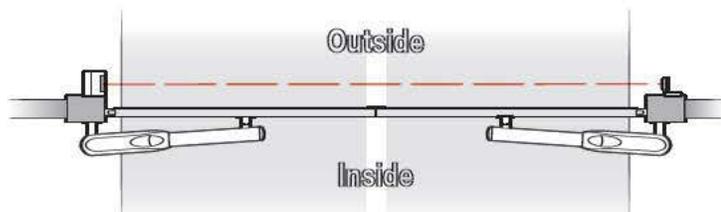

ACCESSORY CONNECTIONS

Radio Receiver

When connecting the Radio Receiver, carefully verify the proper connections.

The maximum voltage that the control board provides for external accessories, is the maximum voltage of the battery which is about 28 volts.

In the event of an electrical short in the power to the accessories, the board will protect itself by shutting down and will remain shut down until the short is corrected.

The control board provides two modes of operation that a radio receiver can control the gate:

Open-Stop-Close

1. By having the radio receiver connected as illustrated and with the Hold Open Timer OFF (see page 27):

Every command of the radio transmitter will control the gate as follows:

- a) First command opens the gate
- b) Second command stops the gate
- c) Third command closes the gate
- d) Any subsequent commands will continue in the same order to control the gate.


NOTE: This type of configuration is not recommended for commercial applications.

Open Only

2. By having the radio receiver connected as illustrated and with the Hold Open Timer ON (see page 27):

Each command of the radio transmitter is ALWAYS AN OPEN COMMAND to the gate.

Note: All controls are normally open.

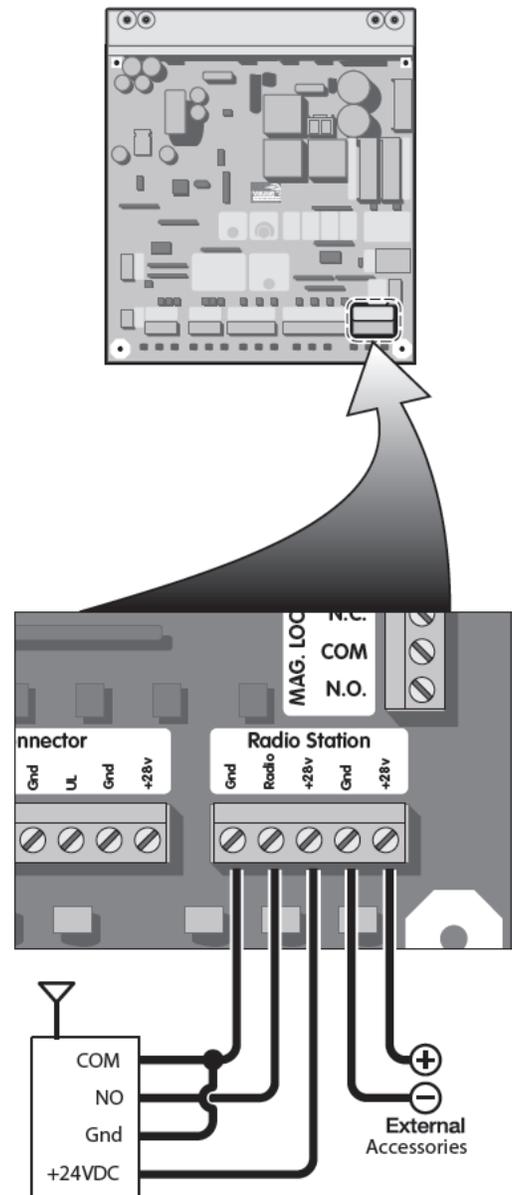


This page is intentionally left blank.



ACCESSORY CONNECTIONS


Magnetic Lock

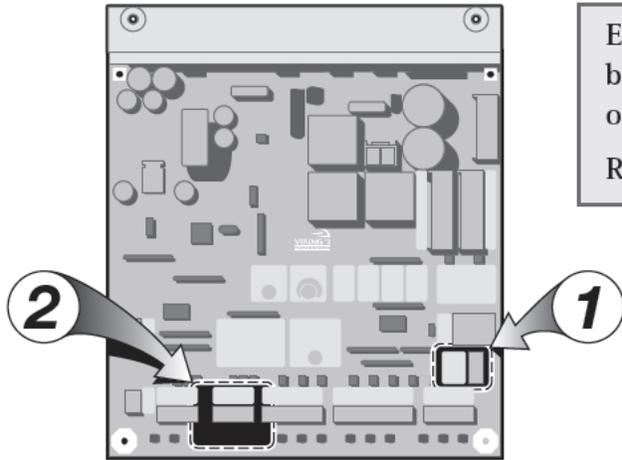

Connection Locations
(Single Unit Board shown)

External supply for the magnetic lock must be provided. This will prevent rapid drainage of the battery in the event of power failure.


Relay Contact 10A-250VAC

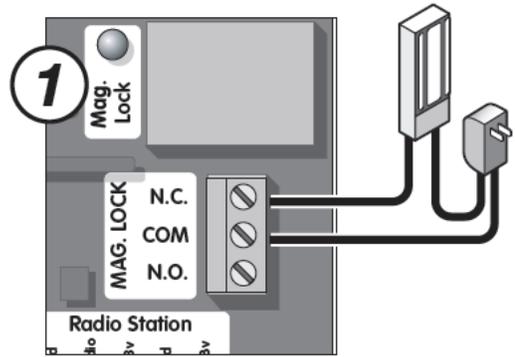

Solenoid Connection

External supply for the solenoid connection must be provided. This will prevent rapid drainage of the battery in the event of power failure.

Relay Contact 10A-250VAC

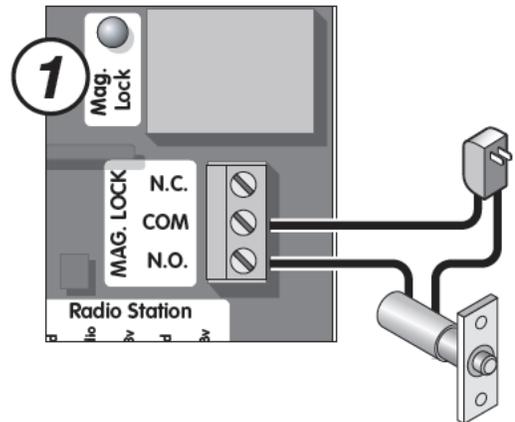


Guard Station

The guard station provides control of the gate operator to open, stop, and close the gate.


All three switches must be a Normally Open type of switch and can share the same common (ground).

Place the control switch box within sight of the gate, away from moving parts of the gate and out of reach of children.

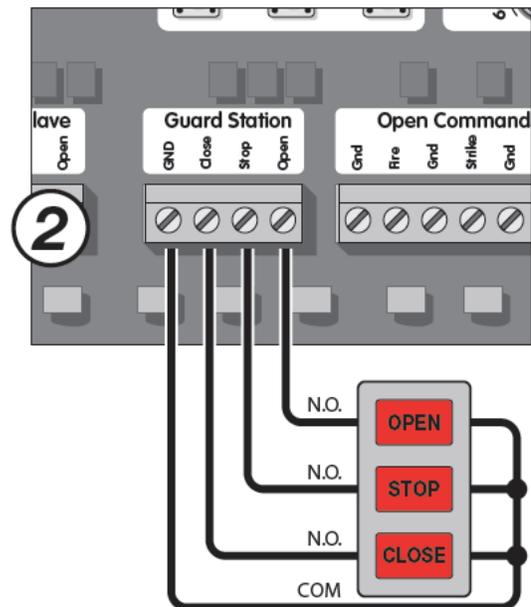


SPECIAL FEATURES

Intelligent Obstruction Sensor (Primary Entrapment Protection)

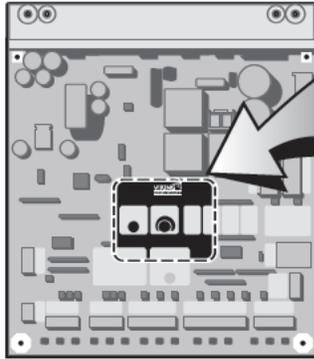

Trim Pot Location
(Single Unit Board shown)

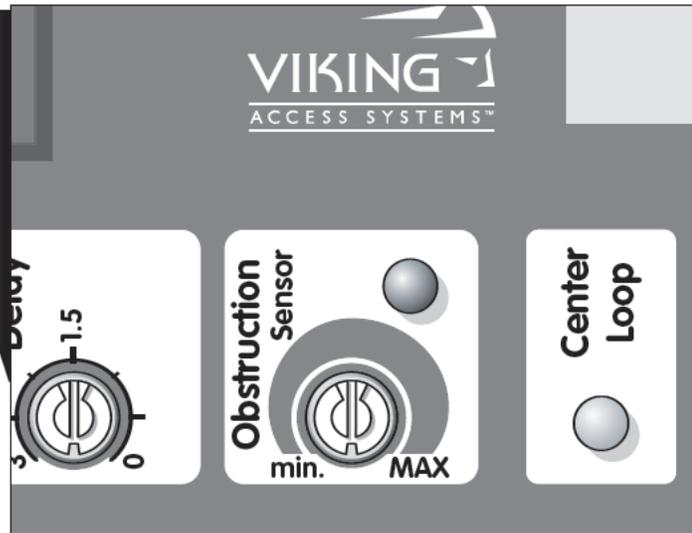

The Obstruction Sensor detects obstructions in the path of the traveling gate. The Trim Pot for the Obstruction Sensor adjusts the sensitivity level that triggers the Sensor.

When the Obstruction Sensor detects an obstruction it will:

1. Stop the gate's movement and reverse it momentarily.
2. Bring the gate to a resting position.
3. Disable the Hold Open Timer feature until the Gate Operator receives a new command.

If another obstruction is detected before the gate reaches either limit it will:


1. Stop the gate's movement.
2. Bring the gate to a resting position.
3. Disable the Gate Operator.

UL325 standard requires an audio alarm to go off after two consecutive entrapment events sensed by the Inherent Entrapment Protection of the Gate Operator.


The audio alarm will sound for a period of 5 minutes or until the "Stop" Button is pressed (see page 8 for remote installation of a "Stop" Button).

Turning the Trim Pot clockwise increases the sensitivity.

Turning the Trim Pot counter-clockwise decreases the sensitivity.

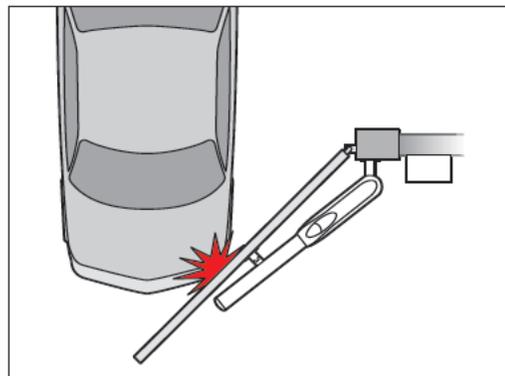

SPECIAL FEATURES

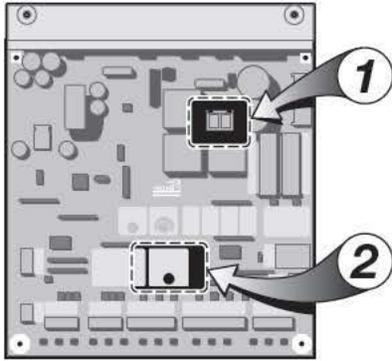

Connection Locations
(Single Unit Board shown)

Fail Safe/Fail Secure Operation

The gate operator contains a unique design that allows the user to move the gate manually in case of COMPLETE POWER FAILURE.

There are two levels of force required to move the gate manually.

Fail Safe Mode :


By removing the wire-jumper plug from the “Fail Safe/Secure” connector:
The gate can move manually with a relatively low amount of force.

Fail Secure Mode:



By inserting the wire-jumper plug into the “Fail Safe/Secure” connector:
The gate still move manually, but with a relatively high amount of force.

Note:

If Fail Secure Mode is selected, the gate can be manually operated with a relatively low amount of force by performing the steps for manual release as outlined at on page 7.

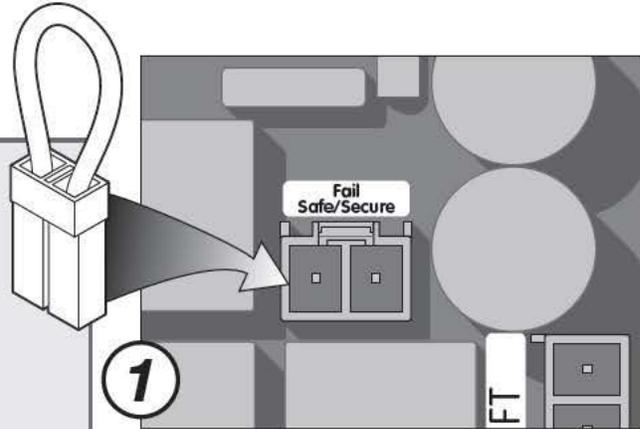

Manual Release

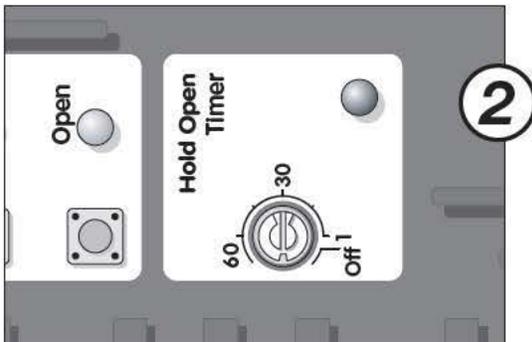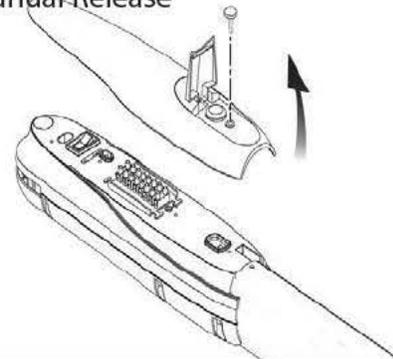

Hold Open Timer

The Hold Open Timer function holds the gate at the open position for a predetermined amount of time, prior to closing automatically. Set the Timer to the desired time, from 1 to 60 seconds.

If this feature is not needed, turn the Trim Pot clockwise to the “off” position.

Note: The Hold Open Timer affects the “radio receiver command” and the sequence of operation for the gate (see page 23).




SPECIAL FEATURES


Gate Overlap Setting

Setting the Overlap Delay Pot to “0” will cause the master and the slave units to open and close at the same time

A Master/Slave control board is required to operate two gates with a single controller.

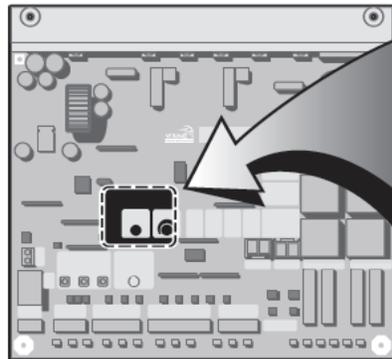


Trim Pot Location
(Master/Slave Unit Board shown)

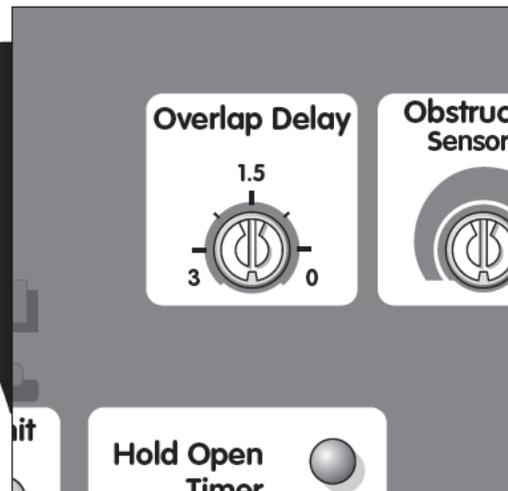

Setting the Overlap Delay Pot to any value other than zero will cause the master unit to delay in opening.

The time delay can be set for up to 3 seconds.

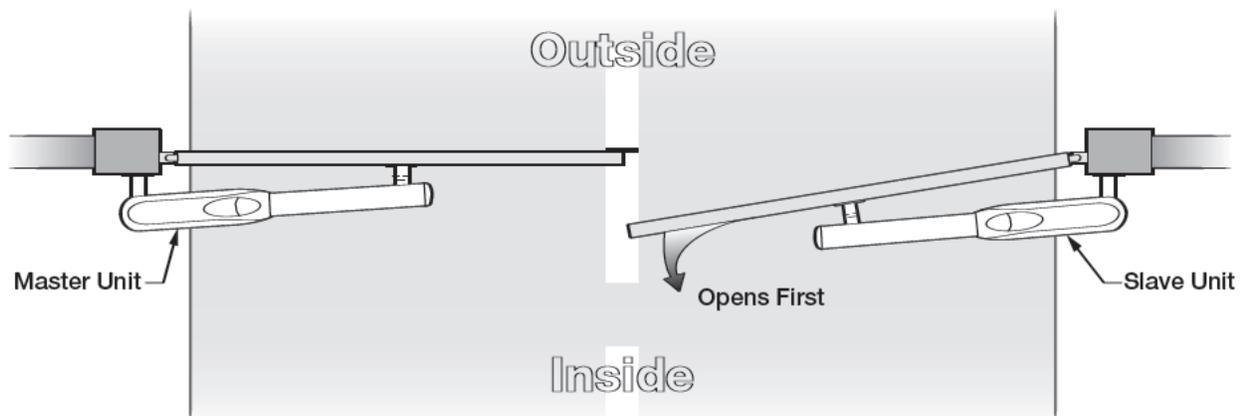

SPECIAL FEATURES

Auto-Open Feature


The Auto-Open feature in Viking Gate Operators enables the following functionality in the event of power failure:

- Open the gate in case of power failure (120 or 220 VAC).
- Keep the gate at the open position as long as there is no power.
- Resume to normal operation when the power has been restored.


The Auto-Open feature allows proper operation while opening in case of power failure for the following devices:

- All accessories,
- All safety devices,
- All entrapment protections.

The only operation that can not be executed while opening in case of power failure is to CLOSE the gate.

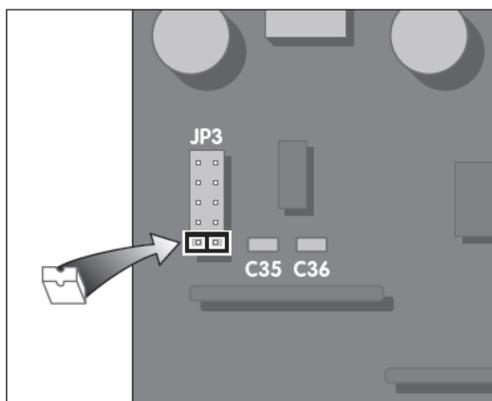

To enable the Auto-Open feature : Use the “jumper” provided and place it on the pin-header of JP3, on the terminals close to C35 as the illustration indicates.

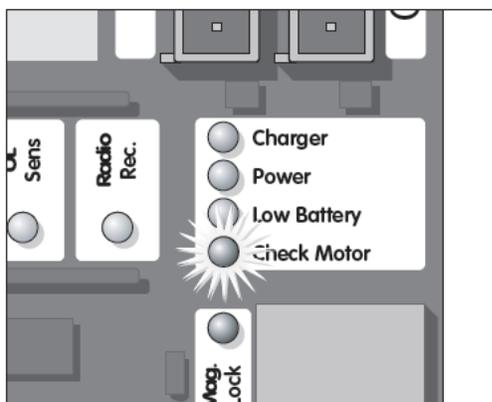


Once you put the “jumper” on the control board the “Check Motor” light will come on indicating that the Auto-Open feature has been enabled.

NOTE: This feature is NOT available on the Master/ Slave (Dual) Control Board.



OPTIONAL SOLAR PANEL INSTALLATION

For Viking Vehicular Gate Operators

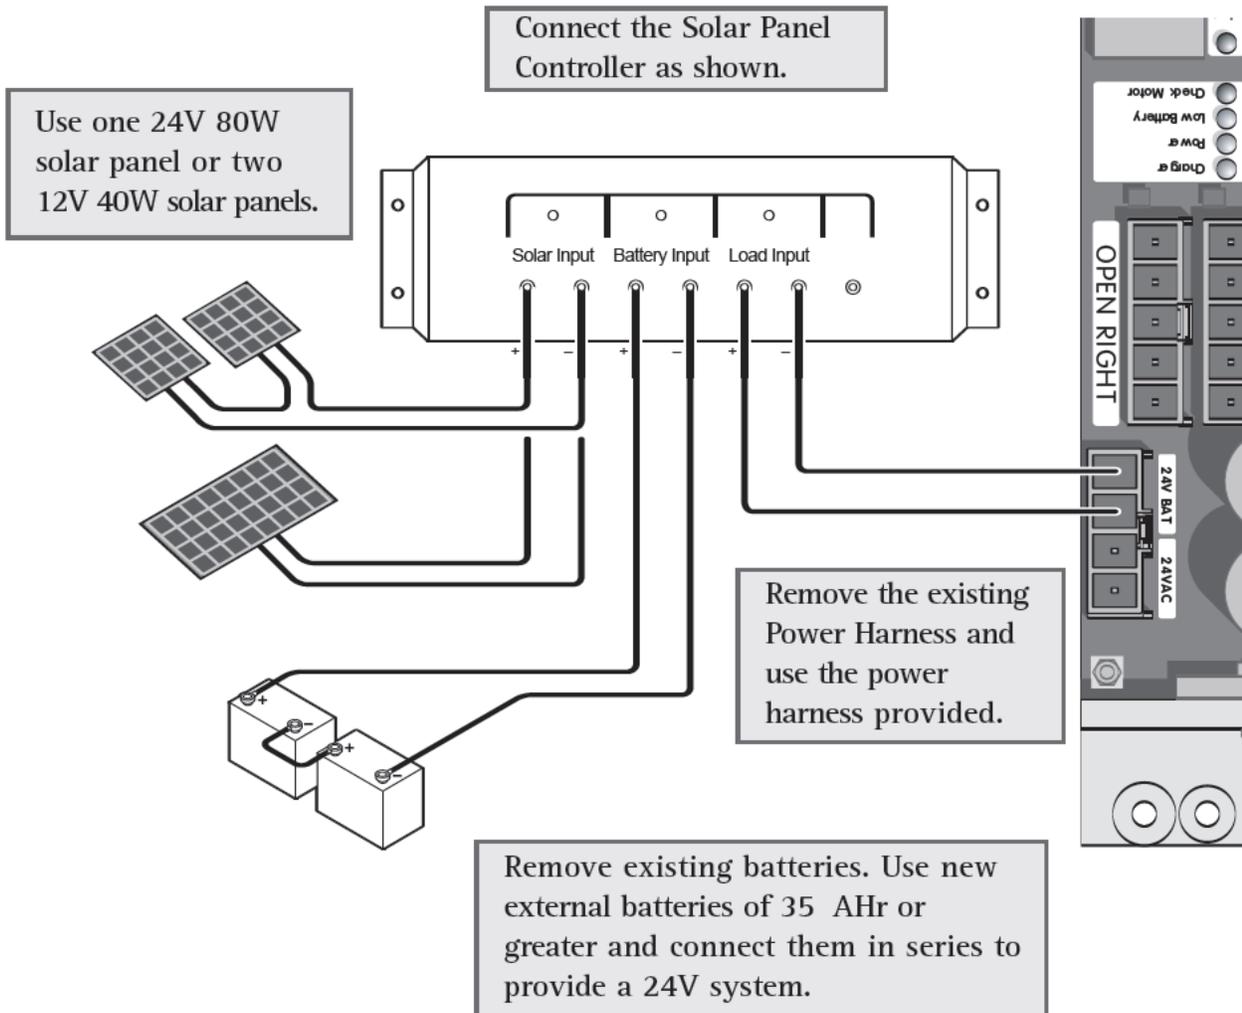


OPTIONAL SOLAR PANEL INSTALLATION

For Viking Vehicular Gate Operators

WARNING – Solar Panel must be UL Listed, Class 2


STEP 1

Use a 24V solar panel or two solar panels of 12V in series with a total capacity of 80 Watts..

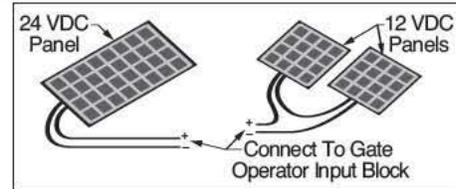

STEP 2

Connect the solar panel cables to the power harness as shown. Make sure you cut the wires coming from the toroidal transformer.

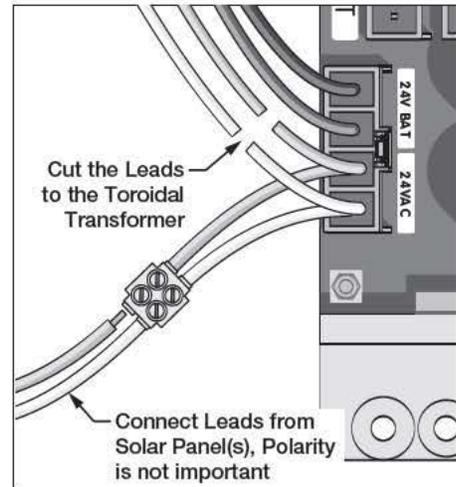


STEP 3

Replace the existing batteries with a battery pack of 35Ahr or greater.

STEP 4


Refer to the maps provided to get an idea about the number of cycles the gate will be operated per day. This figure is for a single gate operator with just:

- a) One Radio reiver,
- b) One low voltage low current loop detector and
- c) One low voltage, low current photo cell

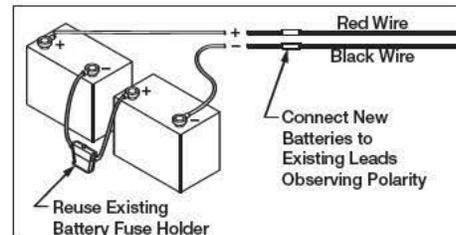

Number of Cycles per Day*

- 14
- 12
- 10
- 8
- 5
- 2

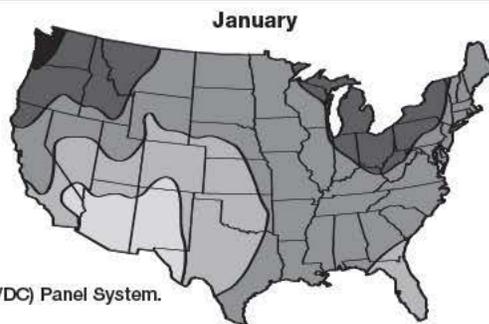

*With a 80 Watt (24VDC) Panel System.

1. The greater capacity of the batteries, the longer the system will operate on cloudy days.
2. If more specific information is needed, please consult with Viking Access Systems. For more information regarding solar energy refer to <http://www.nrel.gov>.




VIKING PIPE STAND *Part No. VA-G5PSKT*

For Viking G-5 Vehicular Gate Operator

Standard Features

- Main pieces made of 1/4" thick material
- All hardware included


When installing the Pipe Stand Assembly be sure it is parallel to the gate and that it is level. For further details see the G-5 installation manual.

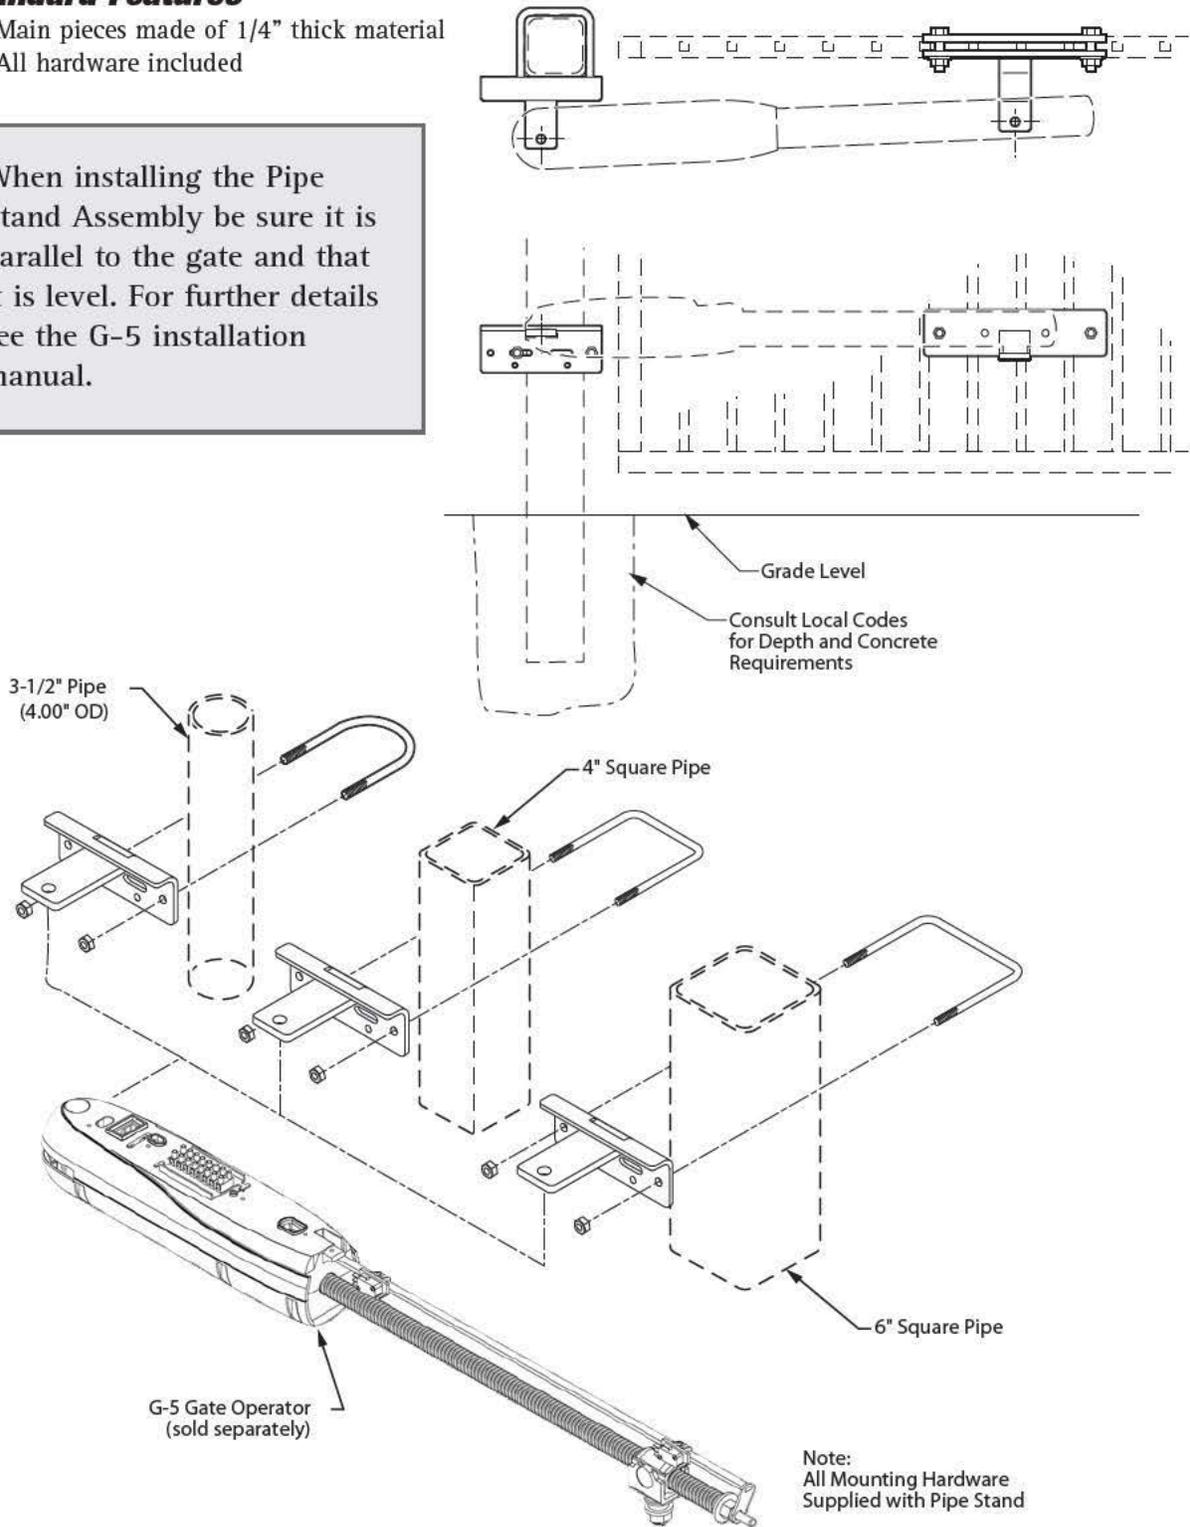

PLAN OF INSTALLATION - OPEN INSIDE

The gate must be installed in a location so that enough clearance is supplied between the gate and adjacent structures when opening and closing to reduce the risk of entrapment.

Swinging gates shall not open into public access areas.

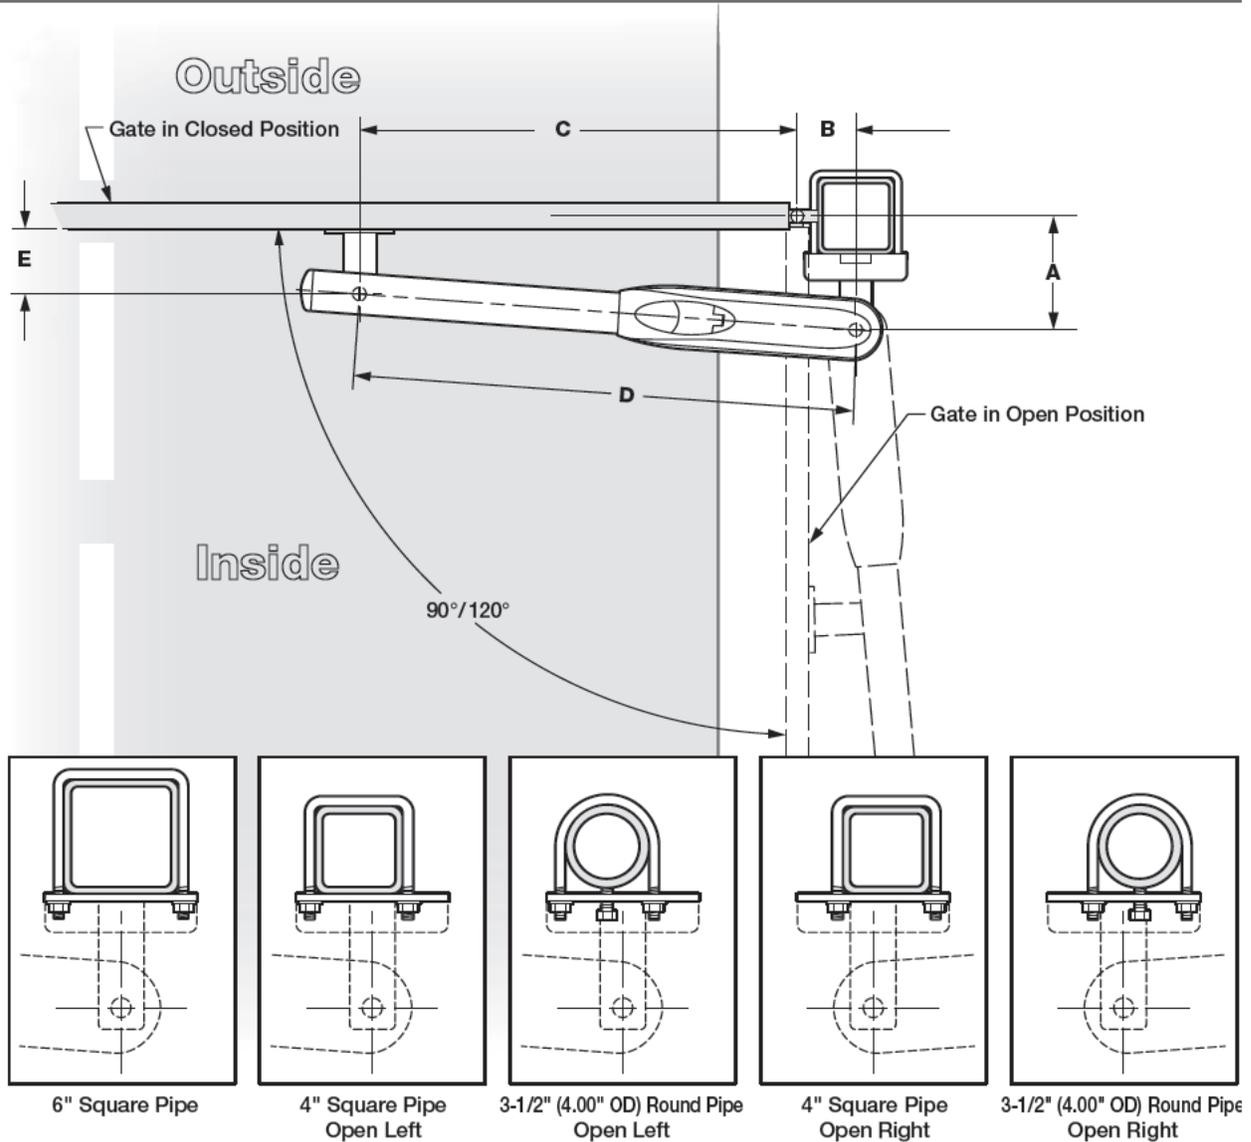




Range	NORMAL INSTALLATION					Opening Time
	A	B	C	D	E	
Minimum	6.00	5.00	27	31.50	4.75	14 seconds
Maximum	7.00	7.875	28	35.875	4.75	20 seconds

Figure A
Open Inside Plan of Installation



Note: Varying from the dimensions shown may severely affect the speed and performance of the gate operator.

OPTIONAL VIKING BLUE INSTALLATION

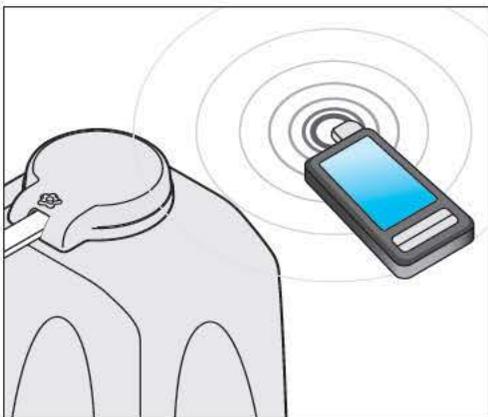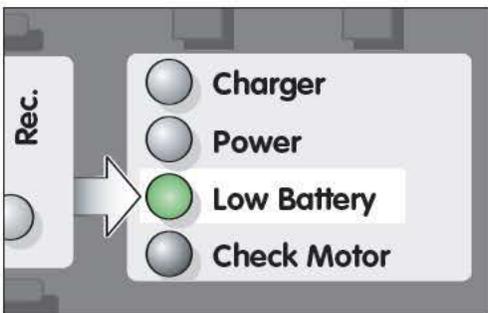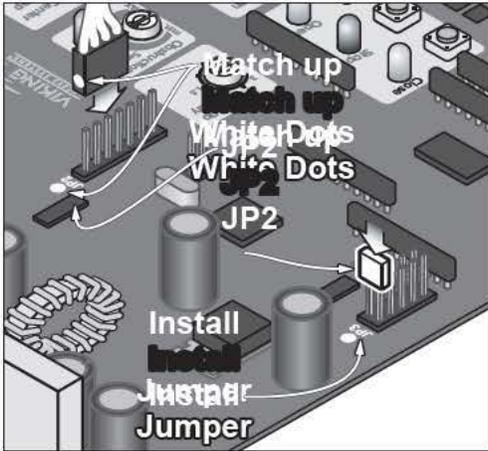

1. Insert CD into host computer
2. Install MS ActiveSync (check your computer, it may already be installed to communicate with a PDA or smart phone).
3. Install Viking Blue software
Select Install Viking-Blue for PC (to have the computer to communicate with the Operator)
Select Install Viking-Blue for PDA (to have the PDA to communicate with the Operator)

WARNING: If this PDA is a new device, turn off all options when syncing with the computer. For either installation, follow the steps in the user manual.

4. Plug the Viking Blue Module into the Viking Gate Operator Control Board.

WARNING: Connecting the plug backwards can result in damage to the Control Board and will render the Viking Blue Module useless.

Use care in connecting the plug to the Control Board. The pins are small and easily bent. Match the white dot on the plug to the white dot on the control board (near the JP2 legend as depicted).

5. Install the Jumper (near the JP3 legend depicted). Viking-Blue requires this jumper to operate. The “Low Battery” LED will turn ON, indicating the Control Board is ready for use with the Viking-Blue Module.
6. Open Viking Blue software on the chosen device.

If you are using the computer:

- Hold the computer near the Gate Operator.
- Run the application by clicking the icon on the desktop.
- Select “Setting” in the top right of the screen.

If you are using a PDA:

- Hold the PDA near the Gate Operator.
- Select “Start” and “Programs”.
- Click the Viking-Blue Application.
- Select “Connection” on the toolbar.

- Click “Search” (looking for available Viking devices).
- Select the Operator you want to communicate with.
- Click “Connect” to start communication. The Light on the Viking-Blue module will turn green upon connection to the Computer or PDA.

Follow the steps in the user manual.



TROUBLESHOOTING

Gate does not run – Motor Sensor indicator comes ON

Check all motor connections to be fully engaged. Refer to page 15, 18 and 19.	Ensure that the motor connections are: a) Properly connected, b) Tight enough and c) Color coded Refer to page 15.	Check that all motor cable connections, junctions and extensions are properly connected and color-coded. Refer to page 15.
Check the 15 Amp fuse in the control board	Ensure that the Manual Release Switch is in the “ENGAGE” position. Refer to page 7.	

Gate does not run – Motor Sensor indicator is OFF

Check all motor connections to be fully engaged. Refer to 15.	Check that limit switches are connected to the common and the normally close position refer to page 15.	Check that the stop command is not active. Refer to page 8 and 25
Check that the UL command (photo beam and/or edge sensor) is not active. Refer to page 6, 7 and 22.	Check that the vehicular loop detectors are working properly. Refer to page 20, 21 and 22.	Check that the radio command is not active. Refer to page 23.
Ensure that you external accessories are working properly.	Check the 4 Amps fuse in the control board	Ensure that you power cables are adequate in voltage and properly connected. Refer to page 17.

Gate does not run – Power failure

Check the 15 Amp battery fuse. Refer to page 16	Check the battery connections and cables.	Check the voltage of the battery.
---	---	-----------------------------------

Gate does not run – Obstruction sensor ON and audio alarm is SOUNDING

Ensure that the gate path is clear of obstructions.	Note: To stop the audio alarm, use the stop command. Refer to page 8 and 25.	Adjust the trim pot of the obstruction sensor. Refer to page 26.
---	--	--

Gate runs, stops and reverse momentarily – Obstruction sensor ON and audio alarm OFF

Ensure that the gate path is clear of obstructions.	Check for proper functionality and lubrication of the gate and hardware (hinges and the like).	Adjust the trim pot of the obstruction sensor. Refer to page 26.
---	--	--

Gate ignores the limit switches

Check that the open limit switch and close limit switch are in the corresponding place. Refer to page 15.	Check that all motor cable connections, junctions and extensions are properly connected and color-coded. Specifically check the blue and black motor leads. Refer to page 15.	Ensure that the motor cable is away from sources of electrical interference, such as a) Electric motors b) Electric fences c) Power lines
Check that the limit switch is not faulty	Check that wires to the limit switch are not shorted.	Note: To minimize effects cause by electrical interference use twisted pairs of cables with the shield grounded.



TROUBLESHOOTING

Gate does not open or close

Check all motor connections to be fully engaged. Refer to page 15.	Check that limit switches are connected to the common and the normally close position refer to page 15.	Check that the stop command is not active. Refer to page 8 and 25.
Check that the UL command (photo beam and/or edge sensor) is not active. Refer to page 6, 7 and 22.	Check that the vehicular loop detectors are working properly. Refer to page 20, 21 and 22.	Check that the radio command is not active. Refer to page 23.
Ensure that you external accessories are working properly	Ensure that the Manual Release Switch is in the "ENGAGE" position. Refer to page 7.	

Automatic Hold Open Timer does not function

Check that the trim pot of the hold open timer is set to the proper time delay. Refer to page 27.	Note: Hold open timer closes the gate automatically once the gate reaches the limit open. The time delay to close is set by the trim pot. To turn this system off turn the trim pot all the way clockwise.	Verify proper functionality of: Photo beam(s) Loop Detectors Radio Receiver that may prevent closing the gate.
---	--	--

Gate opens in the opposite desired direction

Verify your motor cable is connected to the proper connector. Specifically check the blue and black motor leads. Refer to page 18 and 19.	Check that all motor cable connections, junctions and extensions are properly connected and color-coded. Refer to 15.
---	---

Gate opens in the opposite desired direction passing the limit switch

Check the motor wiring and polarity of cables. Refer to page 18 and 19.

On a Master/Slave installation, one gate runs in the opposite direction

Check the motor and limit switch wiring. Refer to page 15 and 19.	Verify that both units are connected as open-left or open-right. Refer to page 19.
---	--



TROUBLESHOOTING

Gate opens after few second delay

Set the overlap delay trim pot to 0. Refer to page 28.

Note: Overlap trim pot is normally recommended to use in overlapping gates. Refer to page 28.

Gate opens. Closes or stops on its own

Ensure that the key for manual release is in the lock position. Refer to page 7.

Make sure that the 'Charger' LED is on, indicating that there is AC power.

G-5 unit runs slower than normal

Set the overlap delay trim pot to 0. Refer to page 28.

Note: Overlap trim pot is normally recommended to use in overlapping gates. Refer to page 28.

'Charger' LED off. Gate does not run - alarm sounds upon any input command

Check the 4 Amp fuse on the control board.

Check the 3 Amp fuse on the EMI control board. Refer to page 17.

Make sure the incoming AC line is properly connected. Refer to page 17.

Check the incoming high voltage power supply.

Check the proper selection of power supply (120/220 VAC). Refer to page 17.

Verify the EMI board by reading high voltage across the (4) blue and red wires at the terminal block connections.

Check that all three LED indicators on EMI board are illuminated. Refer to page 17.

Green LED - Input Power
On - Indicates OK
Off - Check the power to EMI Board

Yellow LED - Output Power
On - Indicated OK
Off - Check 6 Amp fuse on EMI Board

Red LED - Protection
On - Indicates the circuit is protected
Off - Circuit is not protected. Replace EMI Board for continued protection against surge and lightning.

Battery voltage reads zero or very low

Ensure the batteries are connected as follows:

- Left battery - Black terminal connected to the black wire from the harness (jacketed wire)
- Left battery - Red terminal connected to the red wire from the fuse holder.
- Right battery - Black terminal connected to the red wire from the fuse holder.
- Right battery - Red terminal connected to the red wire from the harness (jacketed wire)



OUR CONTINUOUS COMMITMENT TO EXCELLENCE

Viking Access Systems is continuously working hard to identify and design products that will appeal to the industry and its needs. As technology continues to advance, we have developed a completely efficient and intelligent line of gate operators to meet the changing demands. These machines offer; full UL325 and UL991 compliance, soft-start and soft-stop, intelligent obstruction sensors, continuous operation (100% duty cycle) and extreme power efficiency. Innovative features include; adaptive and self-learning algorithms, redundancy design in both hardware and software to ensure operation and functionality, protection from lightning, short circuit and power surges, and our exclusive helical gearing offering the highest efficiency rating in the industry. Our entire product line is continually modified and improved based on the latest technology and our customer's valuable feedback. The results are products that offer accuracy, efficiency, reliability and performance, all in sleek, high-tech designs.

We pledge to continue establishing ourself as the leader in high quality, innovative gate operators by developing "Next Level" technology. We are committed to providing safety and convenience with innovative solutions for every security gate need.



STANDARD FEATURES AND OPERATOR SPECIFICATIONS

- UL325 and UL991 Compliant by Underwriter Laboratories (UL) standards.
- Manual Release switch
- Fail-Safe option sets the gate to automatically transfer to a fail-safe mode in the event of a power failure, allowing the gate to be pushed open without the use of special knowledge of the equipment
- Fail- Secure option sets the gate to electronically lock in the event of a power failure, allowing no manual movement without the use of the manual release
- Elegant design, appealing to any architectural project
- Powder coated aluminum housing
- Opening up to 135°
- Operation speed of 15 to 18 seconds per 90°
- 100% duty cycle
- Very low power consumption
- 400 cycles of operation on backup battery (600 lb. gate and 12' length)
- Intelligent speed control with smooth start and stop, self-adjust system
- Modulated speed regulator prevents exceeding operating speed that may reduce the service life of the gate operator and/or installation
- Intelligent obstruction detection with adjustable sensitivity
- Overlap delay that holds one gate momentarily by an adjustable time while the other gate is operating (Master/Slave installation with overlap gates)
- Built-in protection against lightning strikes or similar electrical surges
- Inherent overload protection in the regulated power supply for external accessories with multiple devices of protection
- Modular connectors for easy access control installations
- Solar panel and low voltage wiring compatibility
- LED indicators display gate and operator status for easy troubleshooting

INSTALLATION DATE: _____

COMPANY / INSTALLER: _____

CONTACT: _____

SERIAL NUMBER(S): _____

ALL INSTALLATION, MAINTENANCE AND REPAIR WORK MUST BE DOCUMENTED AND MADE AVAILABLE TO THE USER.



VIKING ACCESS SYSTEMS

631 Wald Irvine, CA 92618

Phone 800.908.0884

Fax 949.753.1640

www.vikingaccess.com