


REFERENCE ONLY, NOT TO SCALE
DO NOT USE AS A DRILLING TEMPLATE
CALL 800-849-8324


7102 / 7108 MODELS TEMPLATE, LEFT HAND DOOR

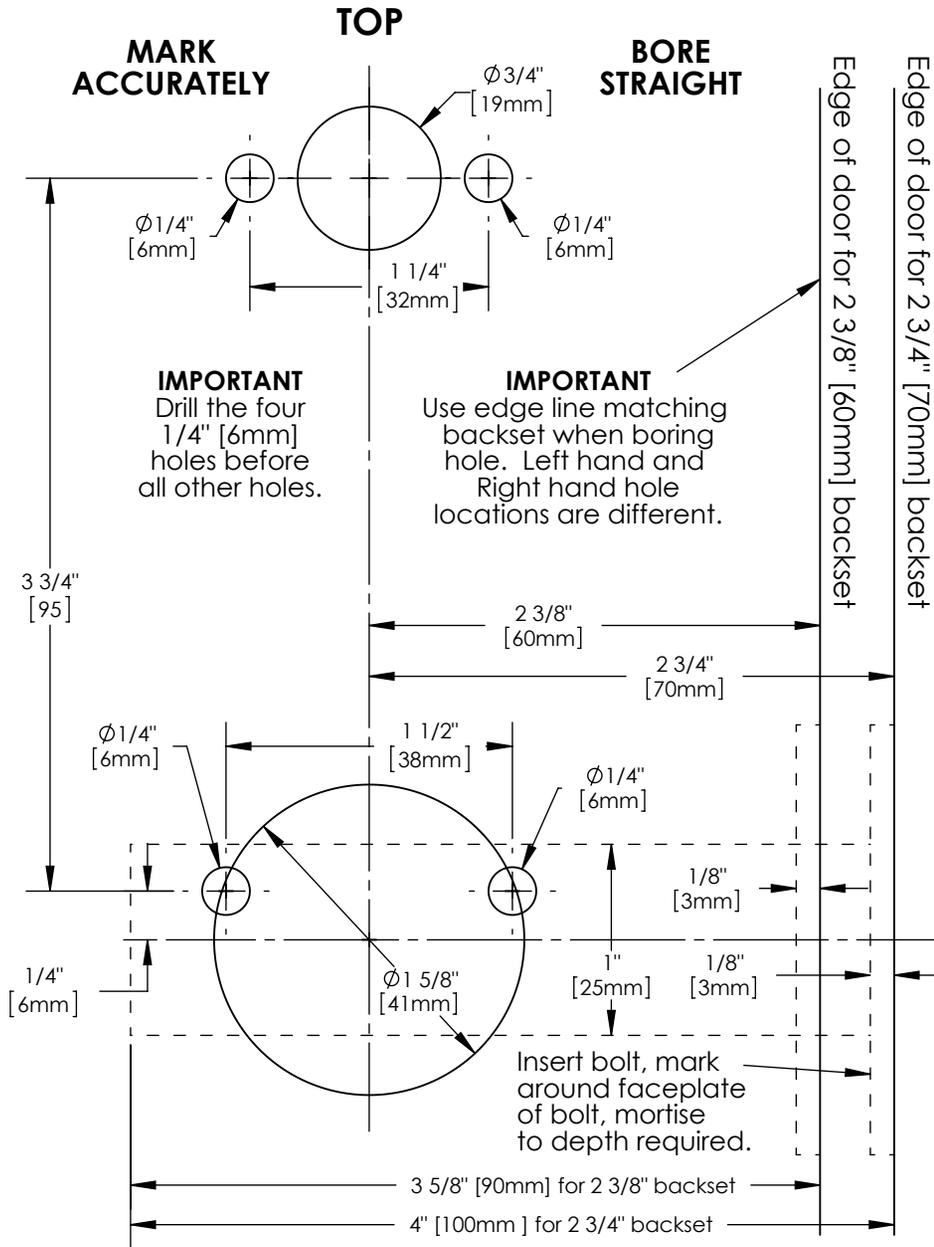



Kaba Access Controls
 www.kabaaccess.com
 Tel: 800.849.8324



CAUTION
 Apply template and drill from the outside.
 Compensate for door bevel if any.

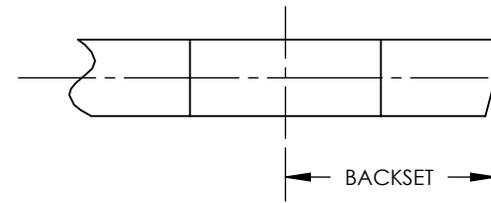

NOTE: Lock will accommodate doors 1 3/8" [35mm] to 2 1/4" [57mm] thick. Suitable reinforcement shall be provided by the hollow metal door manufacturer to prevent collapsing of door. When door silencers are to be installed, proper allowances must be made for strike location.

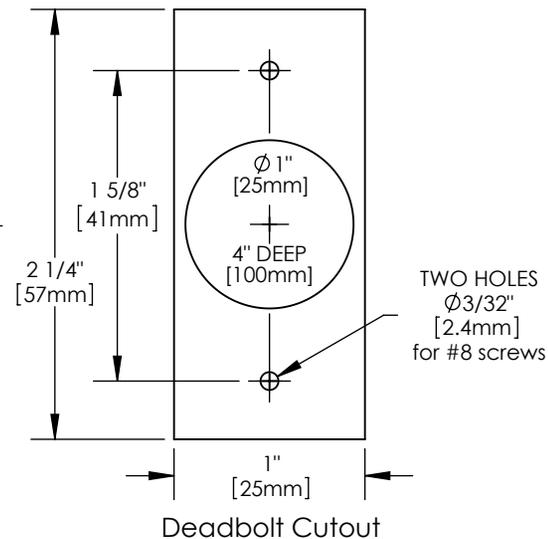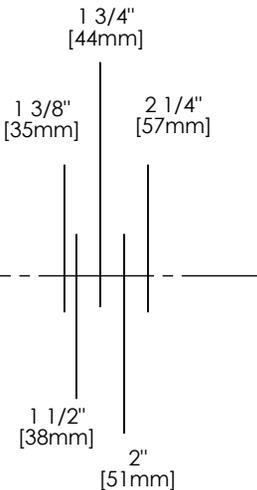

Left Hand installation for both 2 3/8" (60mm) and 2 3/4" (70mm) backsets


PKG3308 0212





Kaba Access Controls
 www.kabaaccess.com
 Tel: 800.849.8324

7102 / 7108 MODELS TEMPLATE, RIGHT HAND DOOR

CAUTION
 Apply template and drill from the outside.
 Compensate for door bevel if any.

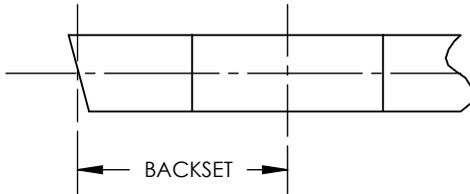

NOTE: Lock will accommodate doors 1 3/8" [35mm] to 2 1/4" [57mm] thick. Suitable reinforcement shall be provided by the hollow metal door manufacturer to prevent collapsing of door. When door silencers are to be installed, proper allowances must be made for strike location.

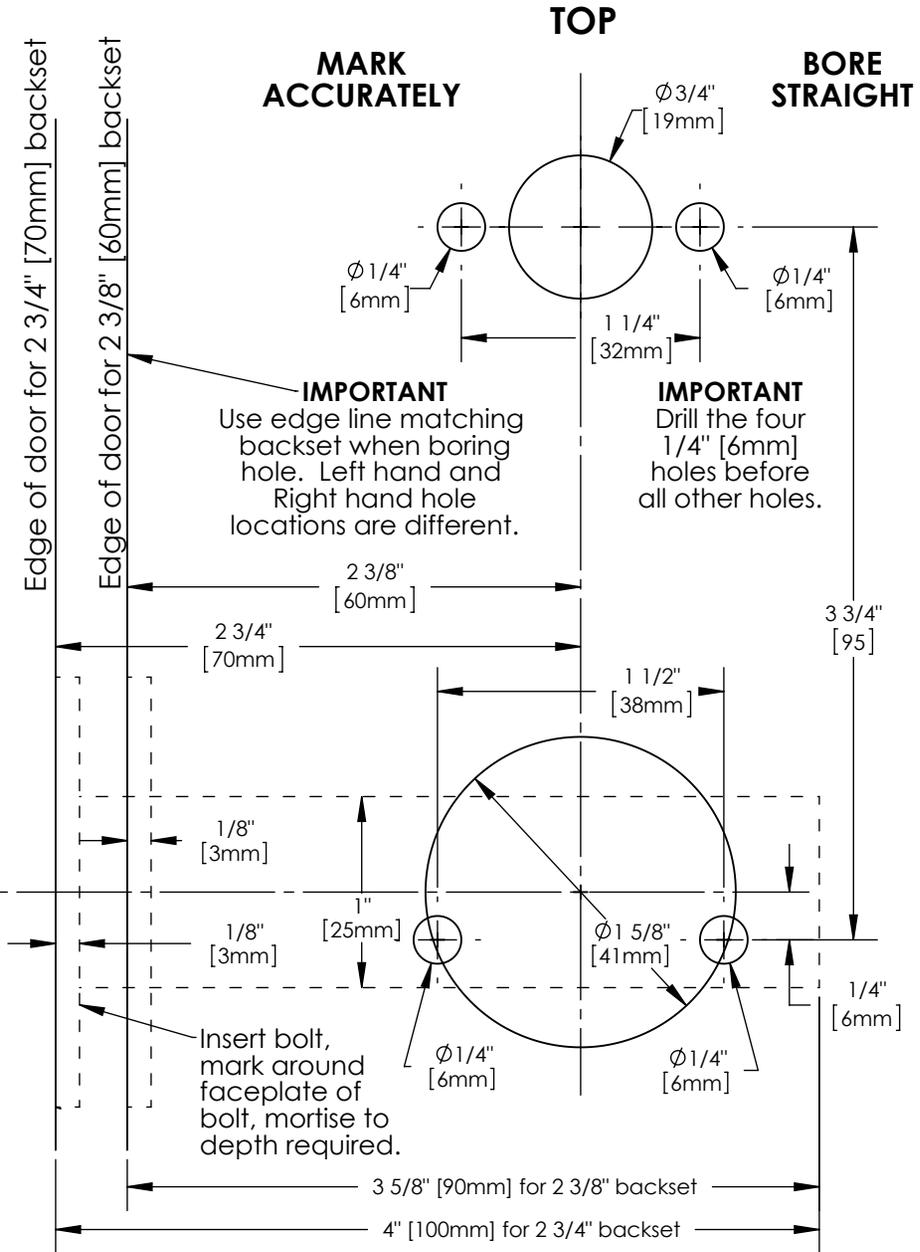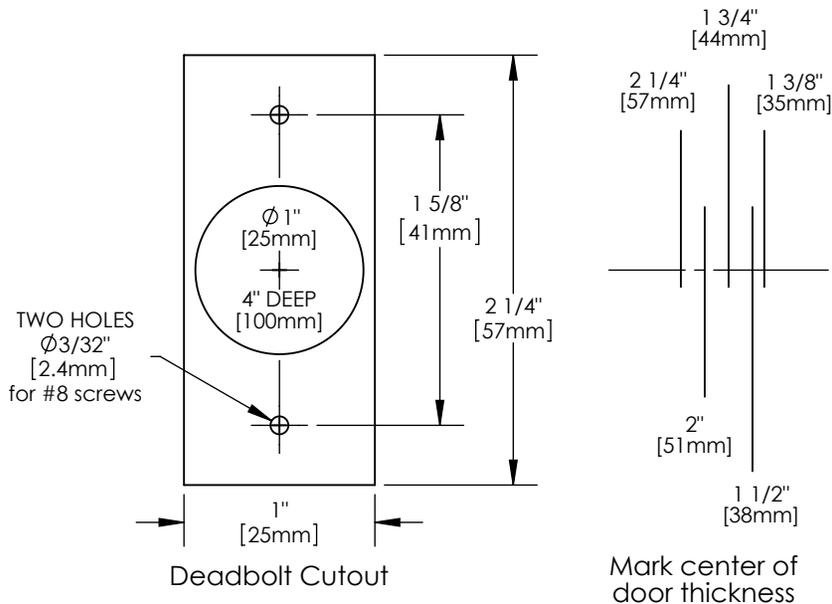

Right Hand installation for both 2 3/8" (60mm) and 2 3/4" (70mm) backsets

PKG3308 0212