


# 7800/8200, 7900 and 9200 Series Mortise Locks with One-Sided Trim Only INSTALLATION INSTRUCTIONS

**SARGENT**  
**ASSA ABLOY**

For assistance, contact SARGENT at 800-727-5477 or [www.sargentlock.com](http://www.sargentlock.com)


## Step 1

Slide plate and post assembly through lockbody on the side opposite from the trim.

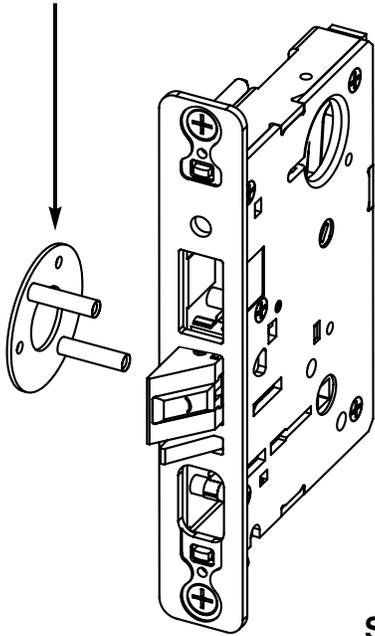


## Step 3

Press lock centering spring onto the lockbody as shown. (For use with door pocket widths of 1.25" or greater).

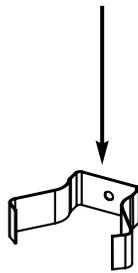

## Step 4

Install lockbody into the door.

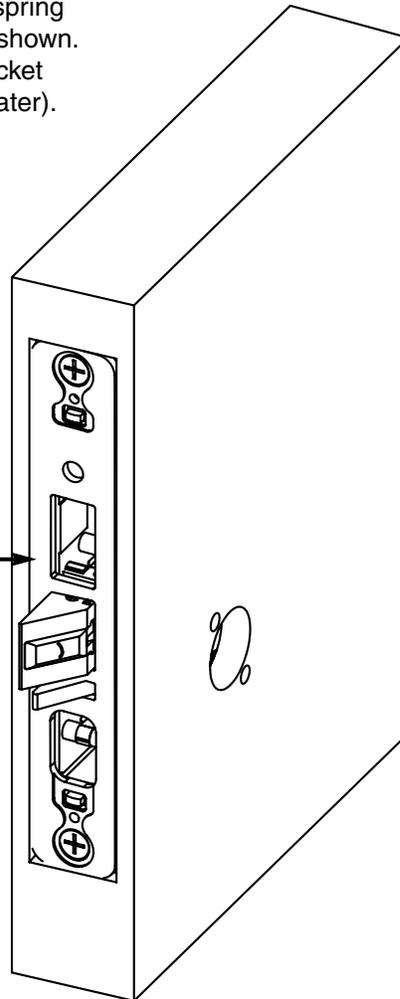


## Step 2

Secure plate and post assembly to the lockbody with two (2) lockwashers.



## Step 5

Secure surface adapter plate and square spindle with two (2) screws and fasten.

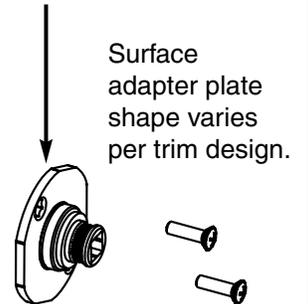

## Step 6 (Not Shown)

Attach rose trim by threading rose onto surface adapter plate or escutcheon trim with SURFACE APPLIED screws provided (except on LS/KS escutcheon). Attach lever with set screw, already provided in the lever (or in separate screw pack for Studio Collection). For additional information, see standard instruction sheet for each product.