




Security Door Controls

801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 • Fax: (805) 494-8861
www.sdcsecurity.com • E-mail: service@sdsecurity.com

INSTALLATION INSTRUCTIONS HDB HERCULITE GLASS DOOR BRACKET

INSTALL BRACKET AND BAR TO
GLASS DOOR

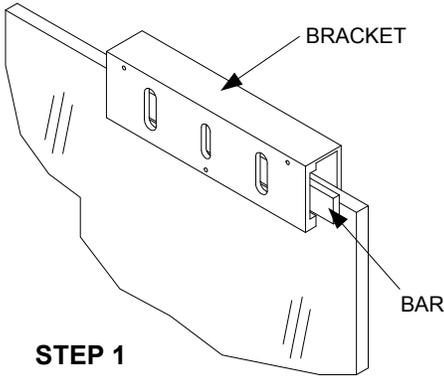


STEP 1

FOR 1/2" GLASS DOORS:
PLACE RUBBER PAD &
10GA. SHIM BOTH SIDES.


FOR 5/8" GLASS DOORS:
PLACE RUBBER PAD BOTH
SIDES & 10 GA. SHIM ONE
SIDE ONLY.

FOR 3/8" GLASS DOORS:
PLACE RUBBER PAD BOTH
SIDES & 18 GA. SHIM ONE
SIDE ONLY.

SECURE SET SCREWS WITH
ALLEN WRENCH PROVIDED

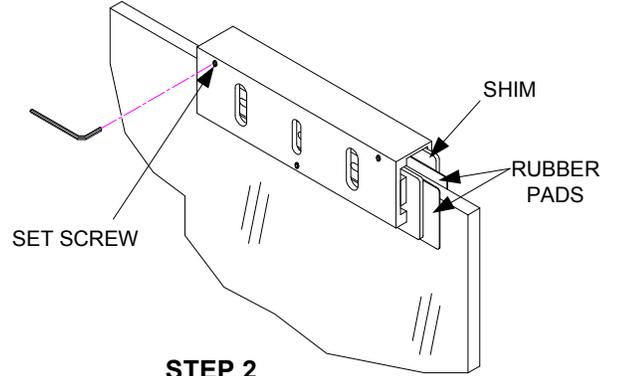



STEP 2

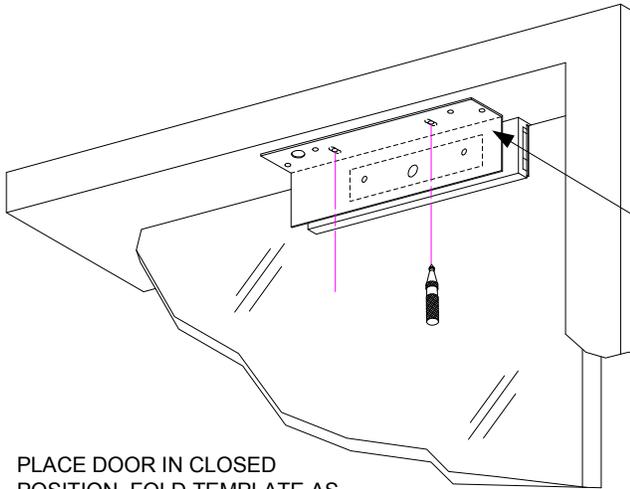

PLACE DOOR IN CLOSED
POSITION, FOLD TEMPLATE AS
INDICATED BY DOTTED LINE AND PLACE
TEMPLATE AGAINST FRAME HEADER AND
BRACKET THEN MARK AND DRILL AS INDICATED.


STEP 3

LOCK TEMPLATE
(PACKAGED w/LOCK)

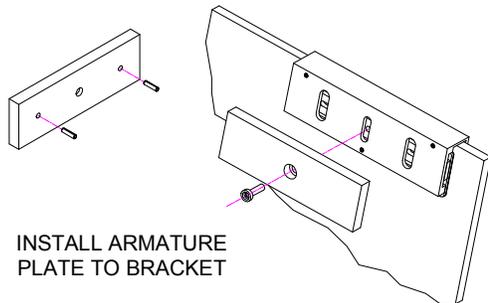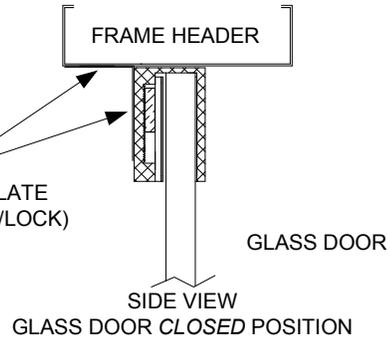

STEP 4

USING BAR (SEE STEP 1)
ADJUST ARMATURE PLATE
AS NEEDED FOR PROPER
ALIGNMENT BETWEEN
ARMATURE PLATE AND
EMLOCK SURFACE.

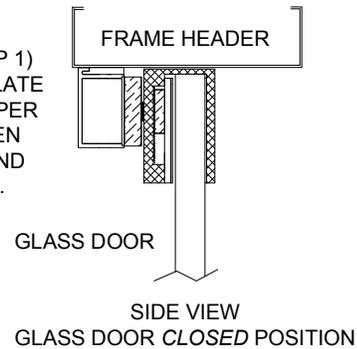

STEP 5