

8 Megapixel

NETWORK CAMERA

User Manual

Please read this instruction carefully before using the product and keep it for further reference

- Please use the specified power supply to connect.
- Do not attempt to disassemble the camera; in order to prevent electric shock, do not remove screws or covers.
- There are no user-serviceable parts inside. Please contact the nearest service center as soon as possible if there is any failure.
- Avoid from incorrect operation, shock vibration, heavy pressing which can cause damage to product.
- Do not use corrosive detergent to clean main body of the camera. If necessary, please use soft dry cloth to wipe dirt; for hard contamination, use neutral detergent. Any cleanser for high grade furniture is applicable.
- Avoid aiming the camera directly towards extremely bright objects, such as, sun, as this may damage the image sensor.
- Please follow the instructions to install the camera. Do not reverse the camera, or the reversing image will be received.
- Do not operate it in case temperature, humidity and power supply are beyond the limited stipulations.
- Keep away from heat sources such as radiators, heat registers, stove, etc.
- Do not expose the product to the direct airflow from an air conditioner.
- This is product instructions not quality warranty. We may reserve the rights of amending the typographical errors, inconsistencies with the latest version, software upgrades and product improvements, interpretation and modification. These changes will be published in the latest version without special notification.
- When this product is in use, the relevant contents of Microsoft, Apple and Google will be involved in. The pictures and screenshots in this manual are only used to explain the usage of our product. The ownerships of trademarks, logos and other intellectual properties related to Microsoft, Apple and Google belong to the above-mentioned companies.
- This manual is suitable for IR water-proof network camera. All pictures and examples used in the manual are for reference only.

Table of Contents

1	Introduction	1
2	Network Configuration	2
2.1	LAN	2
2.1.1	Access through IP-Tool	2
2.1.2	Directly Access through IE	4
2.2	WAN	5
3	Live View	8
4	Configuration	10
4.1	System Configuration	10
4.1.1	Basic Information	10
4.1.2	Date and Time	10
4.1.3	Local Config	11
4.1.4	Storage	11
4.2	Image Configuration	13
4.2.1	Display Configuration	13
4.2.2	Video Configuration	15
4.2.3	OSD Configuration	17
4.2.4	Video Mask	17
4.2.5	ROI Configuration	18
4.2.6	Lens Control	19
4.3	Alarm Configuration	19
4.3.1	Motion Detection	19
4.3.2	Other Alarms	21
4.3.3	Alarm In	22
4.3.4	Alarm Out	23
4.3.5	Alarm Server	24
4.4	Event Configuration	24
4.4.1	Exception	25
4.4.2	Line Crossing	26
4.4.3	Intrusion	27
4.5	Network Configuration	28
4.5.1	TCP/IP	28
4.5.2	Port	30
4.5.3	Server Configuration	30
4.5.4	DDNS	30
4.5.5	802.1x	32
4.5.6	RTSP	32
4.5.7	UPNP	33
4.5.8	Email	33
4.5.9	FTP	34



4.5.10	HTTPS	35
4.5.11	P2P (Optional).....	36
4.5.12	QoS	37
4.6	Security Configuration	37
4.6.1	User Configuration	37
4.6.2	Online User.....	38
4.6.3	Block and Allow Lists	39
4.6.4	Security Management	39
4.7	Maintenance Configuration.....	39
4.7.1	Backup and Restore	39
4.7.2	Reboot	40
4.7.3	Upgrade	40
4.7.4	Operation Log.....	41
5	Record Search	42
5.1	Image Search	42
5.2	Video Search.....	44
5.2.1	Local Video Search.....	44
5.2.2	SD Card Video Search.....	45
Appendix.....		47
Appendix 1 Q& A.....		47
Appendix 2 Specifications		49

1 Introduction

Main Features

- 8MP (3840 × 2160) @20fps
- ICR auto switch, true day/night
- 3D DNR, digital WDR, defog, BLC, HLC, anti-flicker
- ROI coding
- Scene change detection, region intrusion detection, line crossing detection
- Support mobile surveillance by smart phones with iOS or Android OS

Surveillance Application

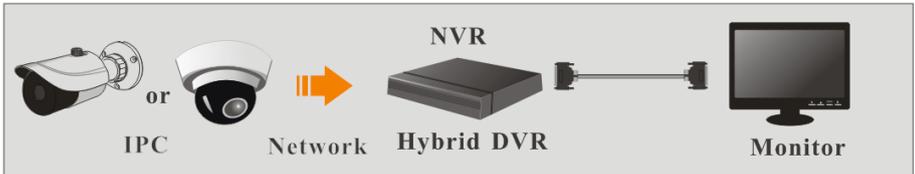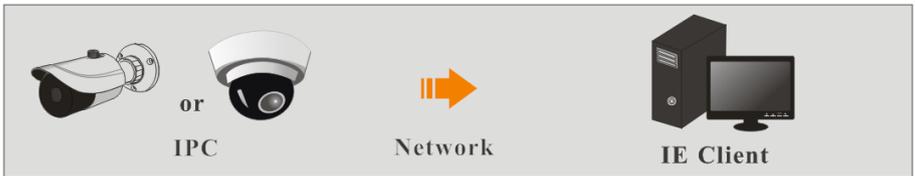

2 Network Configuration


You may connect IP-Cam via LAN or WAN. Here only take IE browser (6.0) for example. The details are as follows:

2.1 LAN


In LAN, there are two ways to access IP-Cam: 1. access through IP-Tool; 2. directly access through IE browser.

2.1.1 Access through IP-Tool

Network connection:

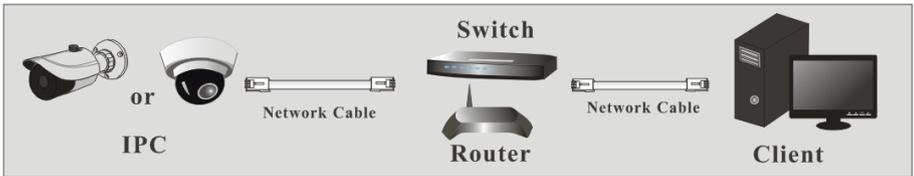

- ① Make sure the PC and IP-Cam are connected to the LAN and the IP-Tool is installed in the PC from the CD.
- ② Double click the IP-Tool icon on the desktop to run this software as shown below:

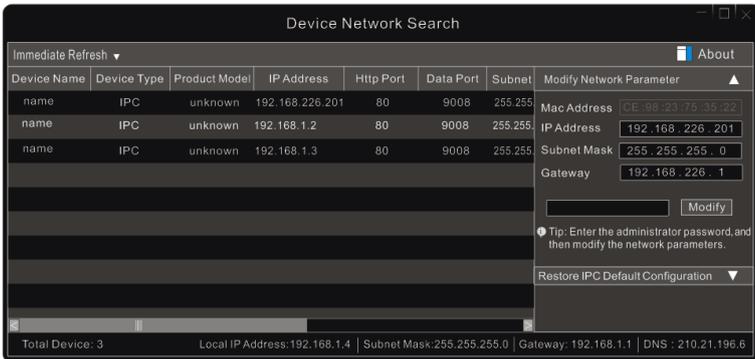

- ③ Modify the IP address. The default IP address of this camera is 192.168.226.201. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as the computer's. Please modify the IP address of your device according to the practical situation.

Modify Network Parameter

Mac Address CE:98:23:75:35:22

IP Address 192.168.1.201

Subnet Mask 255.255.255.0

Gateway 192.168.1.1

••••• Modify

For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X. After modification, please input the password of the administrator and click “Modify” button to modify the setting.

 The default password of the administrator is “123456”.

④ Double click the IP address and then the system will pop up the IE browser to connect IP-CAM. Follow directions to download, install and run the Active X control.

Name: admin

Password: •••••

Stream Type: 3840x2160 20fps

Language: English

Remember me

Login

Input the username and password to log in.

 The default username is “admin”; the default password is “123456”.

Please change the default password

Modify Password

New Password

Confirm Password

Do not show again

OK Cancel

The system will pop up the above-mentioned textbox to ask you to change the default password. It is strongly recommended to change the default password for account security. If “Do not show again” is checked, the textbox will not appear next time.

2.1.2 Directly Access through IE

The default network settings are as shown below:

IP address: **192.168.226.201**


Subnet Mask: **255.255.255.0**

Gateway: **192.168.226.1**


HTTP: **80**

Data port: **9008**


You may use the above default settings when you log in the camera for the first time. You may directly connect the camera to the computer through network cable.

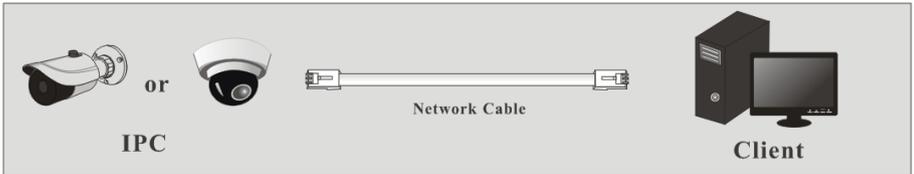

① Manually set the IP address of the PC and the network segment should be as the same as the default settings of the IP camera. Open the network and share center. Click “Local Area Connection” to pop up the following window.

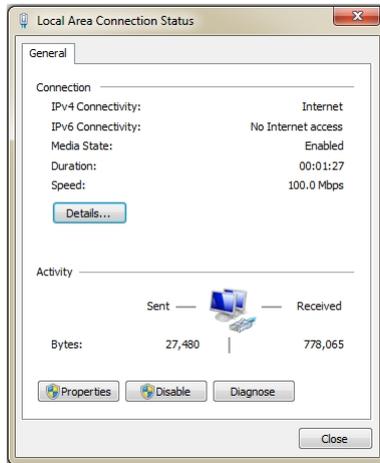


Select “Properties” and then select internet protocol according to the actual situation (for example: IPv4). Next, click “Properties” button to set the network of the PC.

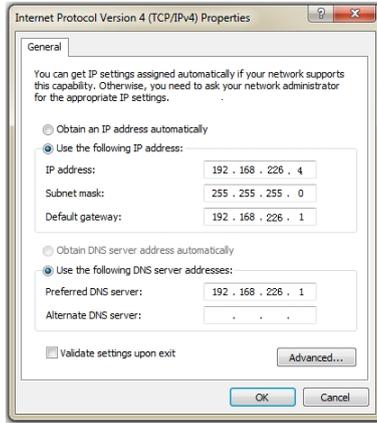

- ② Open the IE browser and enter the default address of IP-CAM and confirm.
- ③ Follow directions to download and install the Active X control.
- ④ Enter the default username and password in the login window and then enter to view.

2.2 WAN

➤ Access through the router or virtual server

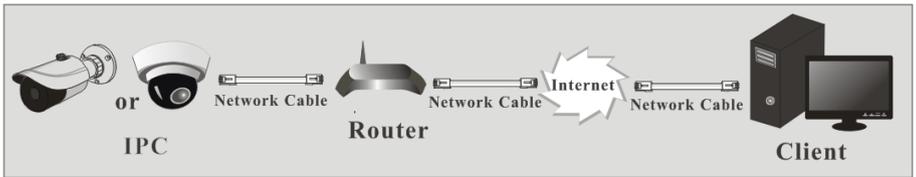

- ① Make sure the camera is well connected via LAN and then log in the camera via LAN and go to Config→Network→Port menu to set the port number.

HTTP Port	80
HTTPS Port	443
Data Port	9008
RTSP Port	554

Port Setup

- ② Go to Config→Network→TCP/IP menu to modify the IP address.

IPv4 IPv6 PPPoE Config IP Change Notification Config

Obtain an IP address automatically

Use the following IP address

IP Address

Subnet Mask

Gateway

Preferred DNS Server

Alternate DNS Server

IP Setup

- ③ Go to the router’s management interface through IE browser to forward the IP address and port of the camera in the “Virtual Server”.


Port Range					
Application	Start	End	Protocol	IP Address	Enable
1	9007	to 9008	Both	192.168.1.201	<input checked="" type="checkbox"/>
2	80	to 81	Both	192.168.1.201	<input checked="" type="checkbox"/>
3	10000	to 10001	Both	192.168.1.166	<input type="checkbox"/>
4	21000	to 21001	Both	192.168.1.166	<input type="checkbox"/>

Router Setup

- ④ Open the IE browser and input its WAN IP and http port to access.

➤ **Access through PPPoE dial-up**

Network connection

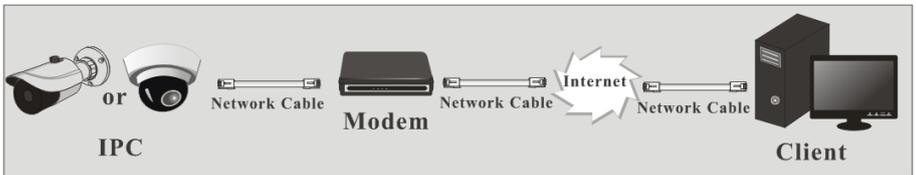

You may access the camera through PPPoE auto dial-up. The setting steps are as follow:

- ① Go to Config→Network→Port menu to set the port number.
- ② Go to Config→Network→TCP/IP→ PPPoE Config menu. Enable PPPoE and then input

the user name and password which you can get from your internet service provider.

IPv4	IPv6	PPPoE Config	IP Change Notification Config
<input checked="" type="checkbox"/> Enable			
User Name	<input type="text" value="xxxxxxx"/>		
Password	<input type="password" value="•••••"/>		
<input type="button" value="Save"/>			

- ③ Go to Config→Network→DDNS menu. Before you configure the DDNS, please apply for a domain name first. Please refer to DDNS configuration for detail information.
- ④ Open the IE browser and input the domain name and http port to access.

➤ **Access through static IP**

Network connection




The setting steps are as follow:

- ① Go to Config→Network→Port menu to set the port number.
- ② Go to Config→Network→TCP/IP menu to set the IP address. Check “Use the following IP address” and then input the static IP address and other parameters.
- ③ Open the IE browser and input its WAN IP and http port to access.

3 Live View

After you log in, you will see the following window.

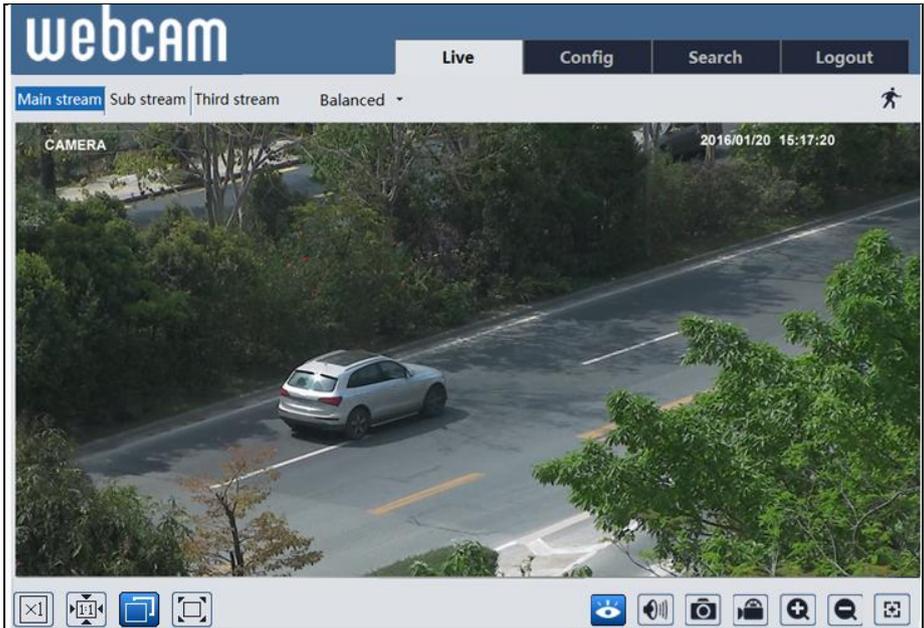

The following table is the instructions of the icons on the live view interface.

Icon	Description	Icon	Description
	Original size		Zoom out
	Fit correct scale		SD card recording indicator
	Auto (fill the window)		Motion alarm indicator
	Full screen		Scene change indicator
	Start/stop live view		Abnormal clarity indicator
	Snap		Color abnormal indicator
	Start/stop recording		Object removal indicator
	Enable/disable audio		Line crossing indicator
	Zoom in		Intrusion indicator

Icon	Description	Icon	Description
	AZ control (only available for the model with motorized zoom lens)		

- In full screen mode, double click to exit.
- Those smart alarm indicators will flash only when the camera supports those functions and the corresponding events are enabled.
- Click AZ control button to show AZ control panel. The descriptions of the control panel are as follows:

Icon	Description	Icon	Description
	Zoom -		Zoom +
	Focus -		Focus +
	One key focus (used when image is out of focus after manual adjustment)		

4.1 System Configuration

The “System” configuration includes three submenus: Basic Information, Date and Time and Local Config.

4.1.1 Basic Information

In the “Basic Information” interface, you can check the relative information of the device.

Device Name	IPC
Product Model	IPC
Brand	Customer
Software Version	4.2.1.0(23341)
Software Build Date	2019-06-25
Kernel Version	01020506
Hardware Version	1.3-1528502
Onvif Version	18.06
OCX Version	2.0.4.6
MAC	00:18:ae:00:80:d0


Some versions may support device ID and QR code. Having been enabled P2P (see Network Configuration-[P2P](#)), the network camera can be quickly added to mobile surveillance client, by scanning the QR code or entering device ID.

4.1.2 Date and Time

Go to Config→System→Date and Time. Please refer to the following interface.


Zone		Date and Time	
Zone	GMT (Dublin, Lisbon, London, Reykjavik)		
<input type="checkbox"/> DST			
<input checked="" type="radio"/> Auto DST			
<input type="radio"/> Manual DST			
Start Time	January	First	Sunday 00 Hour
End Time	February	First	Monday 00 Hour
Time Offset	120 Minutes		

You can select the time zone and DST as required.
Click “Date and Time” tab to set the time mode.

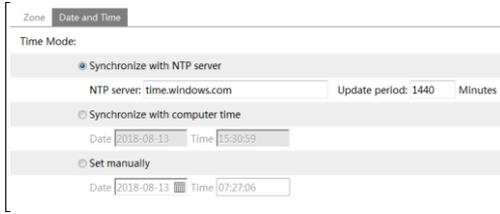

4.1.3 Local Config


Go to Config→System→Local Config to set up the storage path of captured pictures and recorded videos on the local PC. There is also an option to enable or disable the bitrate display in the recorded files.

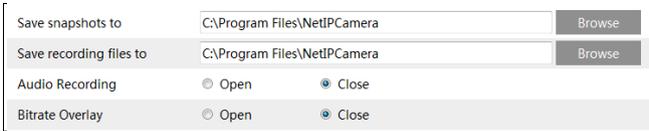

Additionally, audio recording can be enabled or disabled here.

4.1.4 Storage

Go to Config→System→Storage to go to the interface as shown below.

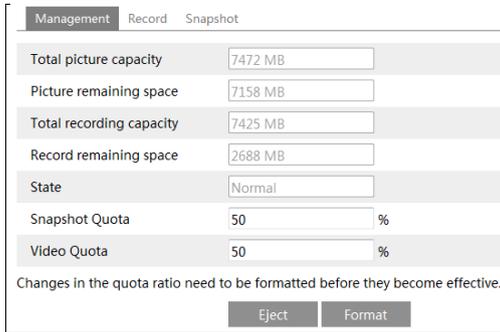

- **SD Card Management**

Click the “Format” button to format the SD card. All data will be cleared by clicking this button.


Click the “Eject” button to stop writing data to SD card. Then the SD card can be ejected safely.

Snapshot Quota: Set the capacity proportion of captured pictures on the SD card.

Video Quota: Set the capacity proportion of record files on the SD card.

● **Schedule Recording Settings**

1. Go to Config→System→Storage→Record to go to the interface as shown below.

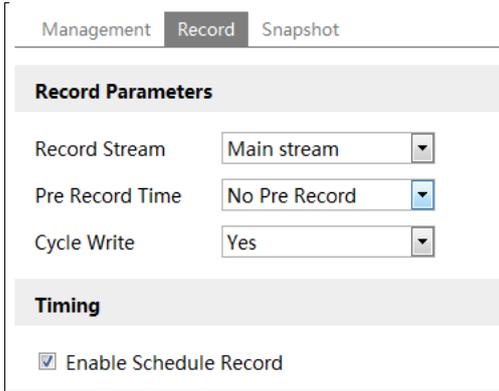

2. Set record stream, pre-record time and cycle writing.

Pre Record Time: Set the time to record before the actual recording begins.

3. Set schedule recording. Check “Enable Schedule Record” and set the schedule.



Weekly schedule

Set the alarm time from Monday to Sunday for a single week. Each day is divided in one hour increments. Green means scheduled. Blank means unscheduled.

“Add”: Add the schedule for a special day. Drag the mouse to set the time on the timeline.

“Erase”: Delete the schedule. Drag the mouse to erase the time on the timeline.

Manual Input: Click it for a specific day to enter specific start and end times. This adds more granularities (minutes).

Day schedule

Set the alarm time for alarm a special day, such as a holiday.

Note: Holiday schedule takes priority over weekly schedule.

- **Snapshot Settings**

Go to Config→System→Storage→Snapshot to go to the interface as shown below.

Set the format, resolution and quality of the image saved on the SD card and the snapshot interval and quantity and the timing snapshot here.

Snapshot Quantity: The number you set here is the maximum quantity of snapshots. The actual quantity of snapshots may be less than this number. Supposing the occurrence time of an alarm event is less than the time of capturing pictures, the actual quantity of snapshots is less than the set quantity of snapshots.

Timing Snapshot: Enable timing snapshot first and then set the snapshot interval and schedule. The setup steps of schedule are the same as the schedule recording (See [Schedule Recording](#)).


4.2 Image Configuration

Image Configuration includes Display, Video/Audio, OSD, Video Mask, ROI Config and Lens Control.

4.2.1 Display Configuration

Go to Image→Display interface as shown below. The image’s brightness, contrast, hue and

saturation and so on for common, day and night mode can be set up separately. The image effect can be quickly seen by switching the configuration file.

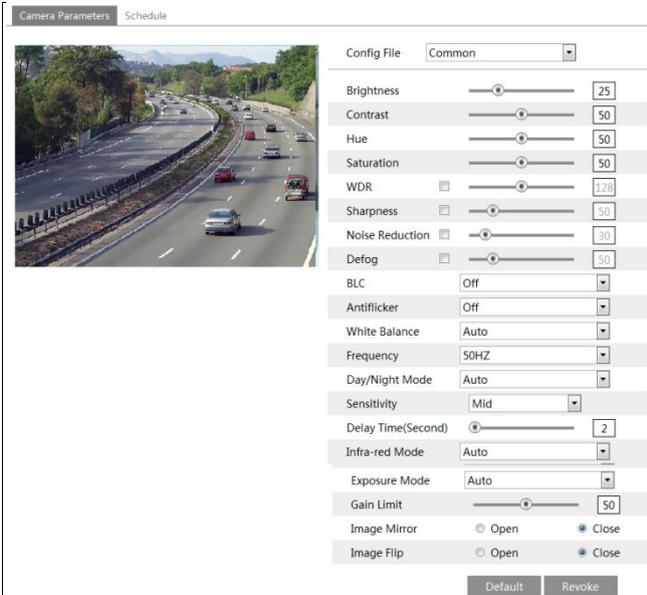

Brightness: Set the brightness level of the camera’s image.

Contrast: Set the color difference between the brightest and darkest parts.

Hue: Set the total color degree of the image.

Saturation: Set the degree of color purity. The purer the color is, the brighter the image is.

WDR: WDR can adjust the camera to provide a better image when there are both very bright and very dark areas simultaneously in the field of the view by lowering the brightness of the bright area and increasing the brightness of the dark area.

Sharpness: Set the resolution level of the image plane and the sharpness level of the image edge.

Noise Reduction: Decrease the noise and make the image more thorough. Increasing the value will make the noise reduction effect better but it will reduce the image resolution.

Defog: Activating this function and setting an appropriate value as needed in foggy, dusty, smoggy or rainy environment to get clear images.

Backlight Compensation (BLC):

- Off: disables the backlight compensation function. It is the default mode.
- HLC: lowers the brightness of the entire image by suppressing the brightness of the image’s bright area and reducing the size of the halo area.
- BLC: If enabled, the auto exposure will activate according to the scene so that the object of the image in the darkest area will be seen clearly.

Antiflicker:

- Off: disables the anti-flicker function. This is used mostly in outdoor installations.

- 50Hz: reduces flicker in 50Hz lighting conditions.
- 60Hz: reduces flicker in 60Hz lighting conditions.

White Balance: Adjust the color temperature according to the environment automatically.

Frequency: 50Hz and 60Hz can be optional.

Day/night Mode: Please choose the mode as needed.

Sensitivity: High, middle and low can be selected for switching back and forth from day to night modes.

Infrared Mode: Choose “ON”, “OFF” and “Auto” (**Some models may not support the infrared mode**).

Exposure Mode: Choose “Auto” or “Manual”. If manual is chosen, the digital shutter speed can be adjusted.

Gain Limit: The higher the gain value is, the higher the brightness of the image is and the more noises of the image are.

Image Mirror: Turn the current video image horizontally.


Image Flip: Turn the current video image vertically.

Schedule Settings of Image Parameters:

Click the “Schedule” tab as shown below.




Set full time schedule for common, day, night mode and specified time schedule for day and night. Choose “Timing” in the drop-down box of schedule as shown below.

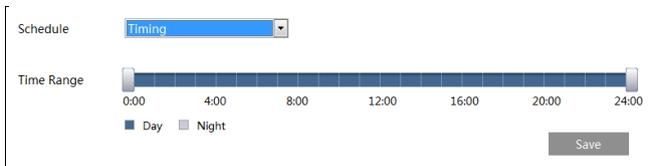

Drag “” icons to set the time of day and night. Blue means day time and blank means night time. If the current mode of camera parameters is set to Timing, the image configuration mode will automatically switch between day and night according to the schedule.

4.2.2 Video Configuration

Go to Image→Video interface as shown below. In this interface, you can set the resolution, frame rate, bitrate type, video quality and so on subject to the actual network condition.

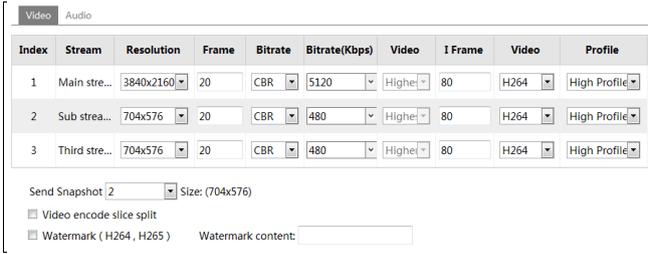

Three video streams can be adjustable.

Resolution: The higher the resolution is, the clearer the image is.

Frame rate: The higher the frame rate is, the more fluency the video is. However, more storage room will be taken up.

Bitrate type: Including CBR and VBR. CBR means that no matter how changeable the video resources are, the compression bitrate keeps constant. This will not only facilitate the image quality better in a constant bitrate but also help to calculate the capacity of the recording. VBR means that the compression bitrate can be adjustable according to the change of the video resources. This will help to optimize the network bandwidth.

Bitrate: Please choose it according to the actual network situation.

Video Quality: When VBR is selected, you need to choose image quality. The higher the image quality you choose, the more bitrate will be required.

I Frame interval: It is recommended to use the default value. If the value is over high, the read speed of the group of pictures will be slow resulting in the quality loss of the video.

Video Compression: H264 and H265 are optional. Higher quality of image can be transferred under limited network bandwidth by using H265 video encoding, however, higher quality of the hardware is required.


Profile: Baseline, main/high profiles are optional. Baseline profile is mainly used in interactive application with low complexity and delay. Main/high profile is mainly used for higher coding requirement.

Send Snapshot: Please select it according to the actual situation.

Video encode slice split: If enabled, you may get more fluency image even though using the low-performance PC.

Watermark: If enabled, input the watermark content. You may check the watermark when playing back the local record in the search interface, lest the record files is tampered.

Click the “Audio” tab to go to the interface as shown below.

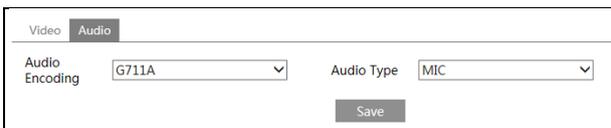

Audio Encoding: G711A and G711U are selectable.

Audio Type: MIC.

4.2.3 OSD Configuration


Go to Image→OSD interface as shown below.



Time stamp, device name and OSD can be set up here. After enabling the corresponding display and entering the content, drag them to change their position. Then press the “Save” button to save the settings.

4.2.4 Video Mask

Go to Image→Video Mask interface as shown below. You can set 4 mask areas at most.

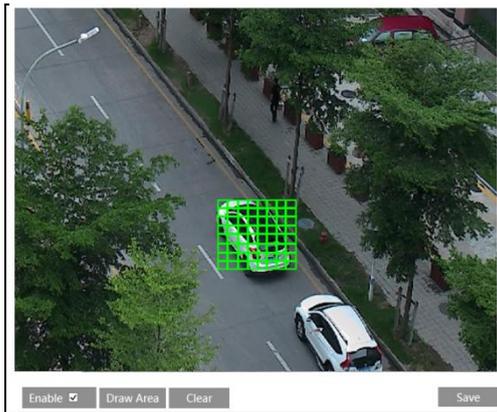

To set up video mask:

1. Enable video mask.
2. Click “Draw Area” and then drag the mouse to draw the video mask area.
3. Click “Save” to save the settings.
4. Return to the live to verify that the area have been drawn as shown as blocked out in the image.




To clear the video mask:

Go to video mask interface and then click “Clear” button to delete the current video mask area.

4.2.5 ROI Configuration

Go to Image→ROI Config interface as shown below. An area in the image can be set as a region of interest. This area will have a higher bitrate than the rest of the image, resulting in better image quality for the identified area.

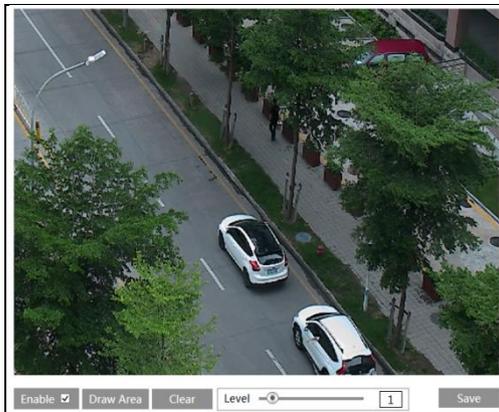


1. Check “Enable” and then click “Draw Area” button.
2. Drag the mouse to set the ROI area.
3. Set the level.
4. Click “Save” button to save the settings.



4.2.6 Lens Control

This function is only available for the model with motorized zoom lens. Go to Config→Image→Zoom/Focus interface. Within this section, zoom and focus can be controlled. If the image is out of focus after a manual adjustment, one key focus can be used to set the focus automatically.

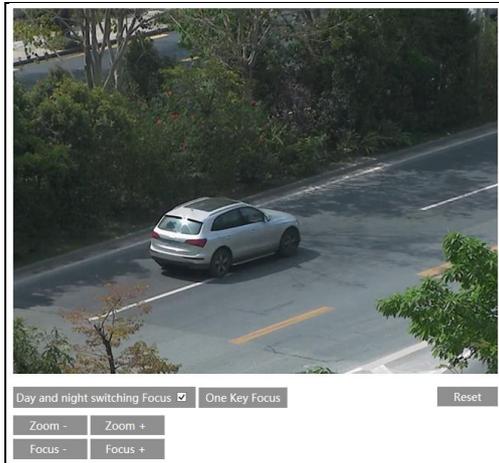


4.3 Alarm Configuration

4.3.1 Motion Detection

To set motion detection:

1. Go to Config→Alarm→Motion Detection to set motion detection alarm. Check “Enable” check box to activate motion based alarms. If unchecked, the camera will not send out any signals to trigger motion-based recording to the NVR or CMS, even if there is motion in the video.

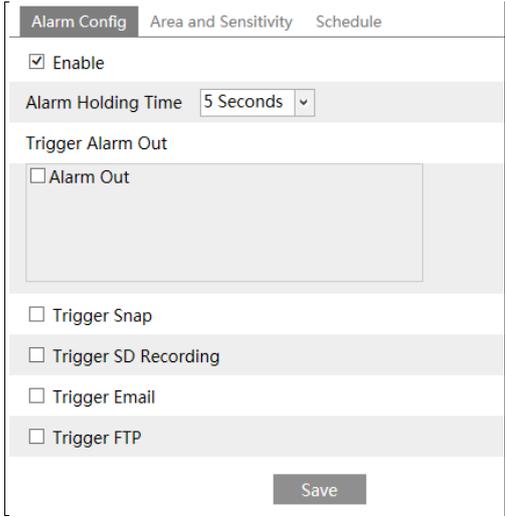

Then select the alarm holding time and set the alarm trigger options.

Alarm Out: If selected, this would trigger an external relay output that is connected to the camera on detecting a motion based alarm (**this function is only available for the model with alarm output connector**).


Trigger Snap: If selected, the system will capture images on motion detection and save the images on an SD card.

Trigger SD Recording: If selected, video will be recorded on an SD card on motion detection.

Trigger Email: If “Trigger Email” and “Attach Picture” are checked (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent into those addresses.

Trigger FTP: If “Trigger FTP” and “Attach Picture” are checked, the captured pictures will be sent into FTP server address. Please refer to FTP configuration chapter for more details.

2. Set motion detection area and sensitivity. Click the “Area and Sensitivity” tab to go to the interface as shown below.

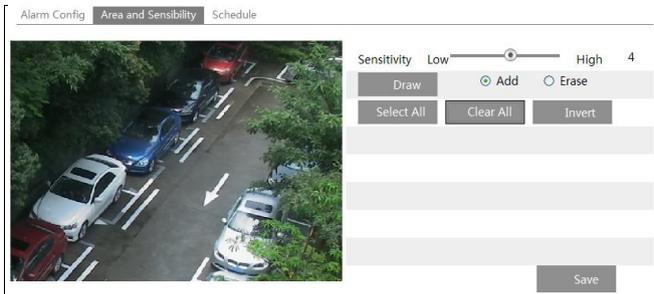

Move the “Sensitivity” scroll bar to set the sensitivity. Higher sensitivity value means that motion will be triggered more easily.

Select “Add” and click “Draw”. Drag the mouse to draw the motion detection area; Select “Erase” and drag the mouse to clear motion detection area.


After that, click the “Save” to save the settings.

3. Set the schedule of the motion detection. The schedule setup steps of the motion detection are the same as the schedule recording setup (See [Schedule Recording](#)).

4.3.2 Other Alarms

● SD Card Full

1. Go to Config→Alarm→Anomaly→SD Card Full.

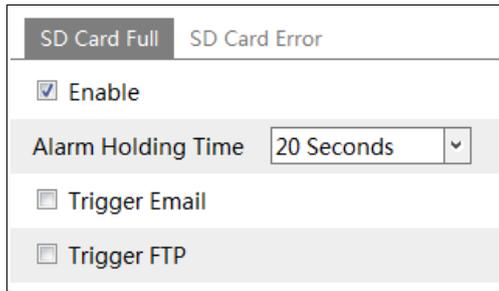


2. Click “Enable” and set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

● SD Card Error

1. When there are some errors in writing SD card, the corresponding alarms will be triggered.

2. Go to Config→Alarm→Anomaly→SD Card Error as shown below.

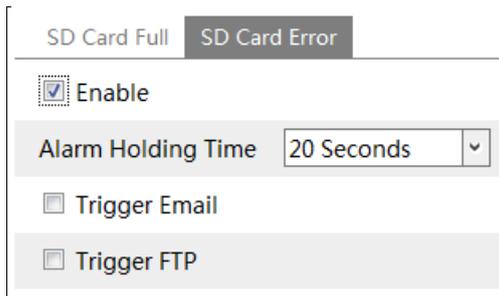

3. Click “Enable” and set the alarm holding time.

4. Set alarm trigger options. Trigger Email and FTP. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

● IP Address Conflict

1. Go to Config→Alarm→Anomaly→IP Address Collision as shown below.




2. Click “Enable” and set the alarm holding time.

3. Trigger alarm out. When the IP address of the camera is in conflict with the IP address of other devices, the system will trigger the alarm out.

Note: This function is only available for the model with alarm output connector.

● Cable Disconnection

1. Go to Config→Alarm→Anomaly→Cable Disconnected as shown below.

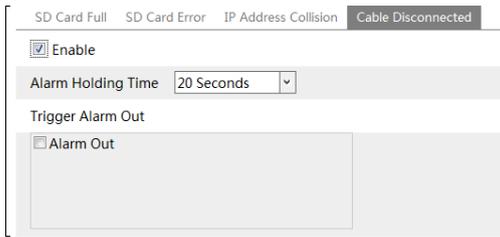

2. Click “Enable” and set the alarm holding time.

3. Trigger alarm out. When the camera is disconnected, the system will trigger the alarm out.

Note: This function is only available for the model with alarm output connector.

4.3.3 Alarm In

This function is only available for the model with alarm input connector. To set sensor alarm (alarm in):

Go to Config→Alarm→Alarm In interface as shown below.

Alarm Config		Schedule
<input checked="" type="checkbox"/>	Enable	
Alarm Type	NO	
Alarm Holding Time	20 Seconds	
Sensor Name		
Trigger Alarm Out		
<input type="checkbox"/>	Alarm Out	
<input type="checkbox"/>	Trigger Snap	
<input type="checkbox"/>	Trigger SD Recording	
<input type="checkbox"/>	Trigger Email	
<input type="checkbox"/>	Trigger FTP	

1. Click “Enable” and set the alarm type, alarm holding time and sensor name.
2. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) chapter for details.
3. Click “Save” button to save the settings.
4. Set the schedule of the sensor alarm. The setup steps of the schedule are the same as the schedule recording setup. (See [Schedule Recording](#)).

4.3.4 Alarm Out

This function is only available for the model with alarm output connector. Go to Config→Alarm→Alarm Out.

Alarm Out Mode	Alarm Linkage
Alarm Out Name	alarmOut1
Alarm Holding Time	30 Seconds

Alarm Out Mode: Alarm linkage, manual operation, day/night switch linkage and timing are optional.

Alarm Linkage: Having selected this mode, select alarm out name and alarm holding time at the “Alarm Holding Time” pull down list box.

Manual Operation: Having selected this mode, click “Open” to trigger the alarm out immediately; click “Close” to stop alarm.

Alarm Out Mode	Manual Operation
Manual Operation	<input type="button" value="Open"/> <input type="button" value="Close"/>

Day/Night Switch Linkage: Having selected this mode, choose to open or close alarm out when the camera switches to day mode or night mode.

Alarm Out Mode	Day/night switch linkage
Day	Open
Night	Close

Timing: Click “Add” and drag the mouse on the timeline to set the schedule of alarm out; click “Erase” and drag the mouse on the timeline to erase the set time schedule. After this schedule is saved, the alarm out will be triggered in the specified time.

Alarm Out Mode	Timing
Time Range	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> <input type="radio"/> Erase <input checked="" type="radio"/> Add </div> <div style="flex-grow: 1;"> </div> <div style="margin-left: 10px;"> <input type="button" value="Manual Input"/> </div> </div>
	<input type="button" value="Save"/>

4.3.5 Alarm Server

Go to Alarm→Alarm Server interface as shown below.

Set the server address, port, heartbeat and heartbeat interval. When an alarm occurs, the camera will transfer the alarm event to the alarm server. If an alarm server is not needed, there is no need to configure this section.

Server Address	<input type="text"/>
Port	<input type="text" value="0"/>
Heartbeat	Disable
Heartbeat interval	<input type="text" value="30"/> Second

4.4 Event Configuration

For more accuracy, here are some recommendations for installation.

- Cameras should be installed on stable surfaces, as vibrations can affect the accuracy of detection.
- Avoid pointing the camera at the reflective surfaces (like shiny floors, mirrors, glass, lake surfaces and so on).
- Avoid places that are narrow or have too much shadowing.


- Avoid scenario where the object’s color is similar to the background color.
- At any time of day or night, please make sure the image of the camera is clear and with adequate and even light, avoiding overexposure or too much darkness on both sides.

4.4.1 Exception

This function can detect changes in the surveillance environment affected by the external factors.

To set exception detection:

Go to Config→Event→Exception interface as shown below.

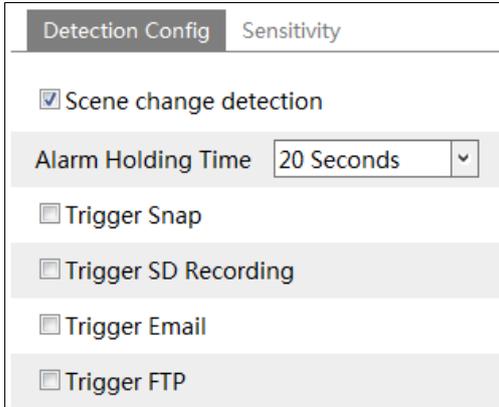


1. Enable the applicable detection that’s desired.

Scene Change Detection: Alarms will be triggered if the scene of the monitor video has changed.

2. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) chapter for details.

3. Click “Save” to save the settings.

4. Set the sensitivity of the exception detection. Click the “Sensitivity” tab to go to the interface as shown below.

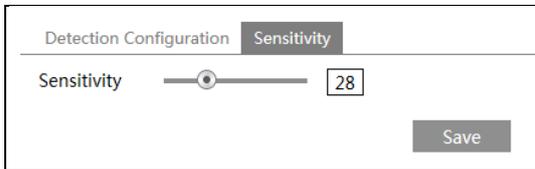

Drag the slider to set the sensitivity value or directly enter the sensitivity value in the textbox. Click “Save” button to save the settings.

The sensitivity value of Scene Change Detection: The higher the value is, the more sensitive the system responds to the amplitude of the scene change.


※ **The requirements of camera and surrounding area**

1. Auto-focusing function should not be enabled for exception detection.
2. Try not to enable exception detection when light changes greatly in the scene.
3. Please contact us for more detailed application scenarios.


4.4.2 Line Crossing

Line Crossing: Alarms will be triggered if someone or something crosses the pre-defined alarm lines.

Go to Config→Event→Line Crossing interface as shown below.

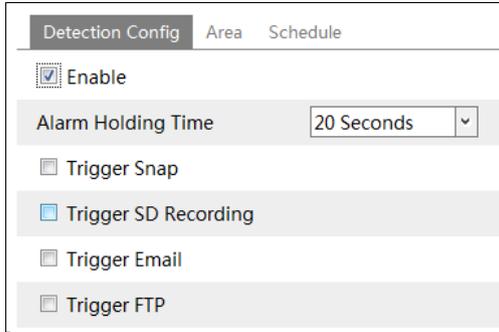

1. Enable line crossing alarm and set the alarm holding time.
2. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.
3. Click “Save” to save the settings.
4. Set area and sensitivity of the line crossing alarm. Click the “Area and Sensitivity” tab to go to the interface as shown below.

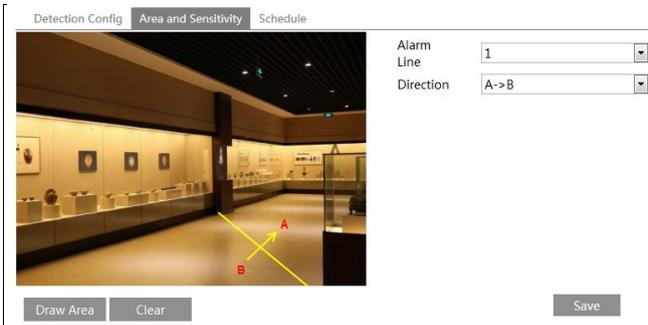

Set the alarm line number and direction. Up to 4 lines can be added. Multiple lines cannot be added simultaneously.

Direction: A<->B, A->B and A<-B optional. This indicates the direction of the intruder who crosses over the alarm line that would trigger the alarm.

A<->B: The alarm will be triggered when the intruder crosses over the alarm line from B to A or from A to B.

A->B: The alarm will be triggered when the intruder crosses over the alarm line from A to B.

A<-B: The alarm will be triggered when the intruder crosses over the alarm line from B to A.

Click “Draw Area” and then drag the mouse to draw a line in the image. Click “Stop Draw” to stop drawing. Click “Clear” to delete the lines. Click “Save” to save the settings.

5. Set the schedule of the line crossing alarm. The setup steps of the schedule are the same as the schedule recording setup. (See [Schedule Recording](#)).


※ Configuration of camera and surrounding area

1. Auto-focusing function should not be enabled for line crossing detection.
2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn’t be too low.
3. Cameras should be mounted at a height of 2.8 meters or above.
4. Keep the mounting angle of the camera at about 45 °.
5. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image.
6. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
7. Adequate light and clear scenery are crucial for line crossing detection.


4.4.3 Intrusion

Intrusion: Alarms will be triggered if someone or something intrudes into the pre-defined areas.

Go to Config→Event→Intrusion interface as shown below.

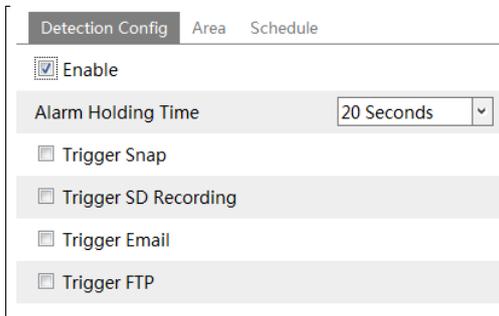

1. Enable region intrusion detection alarm and set the alarm holding time.
2. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) chapter for details.
3. Click “Save” to save the settings.
4. Set the alarm area of the intrusion detection. Click the “Area” tab to go to the interface as shown below.

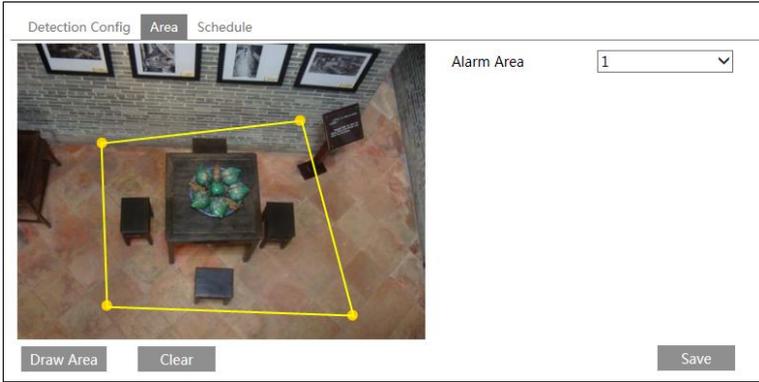

Set the alarm area number on the right side. Up to 4 alarm areas can be added. Click “Draw Area” and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click “Stop Draw” to stop drawing. Click “Clear” to delete the alarm area. Click “Save” to save the settings.

5. Set the schedule of the intrusion detection. The setup steps of the schedule are the same as the schedule recording setup. (See [Schedule Recording](#)).

※ Configuration requirements of camera and surrounding area

1. Auto-focusing function should not be enabled for intrusion detection.
2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
3. Cameras should be mounted at a height of 2.8 meters or above.
4. Keep the mounting angle of the camera at about 45 °.
5. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image.
6. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
7. Adequate light and clear scenery are crucial to line crossing detection.

4.5 Network Configuration

4.5.1 TCP/IP

Go to Config→Network→TCP/IP interface as shown below. There are two ways for network connection.

IPv4 IPv6 PPPoE Config IP Change Notification Config

Obtain an IP address automatically

Use the following IP address

IP Address

Subnet Mask

Gateway

Preferred DNS Server

Alternate DNS Server

Use IP address (take IPv4 for example)-There are two options for IP setup: obtain an IP address automatically by DHCP and use the following IP address. Please choose one of the options as needed.

Test: Test the effectiveness of the IP address by clicking this button.

Use PPPoE-Click the “PPPoE Config” tab to go to the interface as shown below. Enable PPPoE and then enter the user name and password from your ISP.

IPv4 IPv6 PPPoE Config IP Change Notification Config

Enable

User Name

Password

Either method of network connection can be used. If PPPoE is used to connect internet, the camera will get a dynamic WAN IP address. This IP address will change frequently. To be notified, the IP change notification function can be used.

Click “IP Change Notification Config” to go to the interface as shown below.

IPv4 IPv6 PPPoE Config IP Change Notification Config

Trigger Email

Trigger FTP

Trigger Email: when the IP address of the device is changed, the new IP address will be sent to the email address that has been set up.

Trigger FTP: when the IP address of the device is changed, the new IP address will be sent to FTP server that has been set up.

4.5.2 Port

Go to Config→Network→Port interface as shown below. HTTP port, Data port and RTSP port can be set.

HTTP Port	<input type="text" value="80"/>
HTTPS Port	<input type="text" value="443"/>
Data Port	<input type="text" value="9008"/>
RTSP Port	<input type="text" value="554"/>

HTTP Port: The default HTTP port is 80. It can be changed to any port which is not occupied.

HTTPS Port: The default HTTPS port is 443. It can be changed to any port which is not occupied.

Data Port: The default data port is 9008. Please change it as necessary.

RTSP Port: The default port is 554. Please change it as necessary.

4.5.3 Server Configuration

This function is mainly used for connecting network video management system.

Enable

Server Port

Server Address

Device ID

1. Check “Enable”.
2. Check the IP address and port of the transfer media server in the ECMS/NVMS. Then enable the auto report in the ECMS/NVMS when adding a new device. Next, enter the remaining information of the device in the ECMS/NVMS. After that, the system will automatically allot a device ID. Please check it in the ECMS/NVMS.
3. Enter the above-mentioned server address, server port and device ID in the corresponding boxes. Click “Save” to save the settings.

4.5.4 DDNS

If the camera is set up with a DHCP connection, DDNS should be set for the internet.

1. Go to Config→Network→ DDNS.

Port Server **DDNS** SNMP 802.1X RTSP UPnP Email FTP HTTPS QoS

Enable

Server Type: www.dyndns.com

User Name:

Password:

Domain:

Save

2. Apply for a domain name. Take www.dvrmyndns.com for example. Enter www.dvrmyndns.com in the IE address bar to visit its website. Then click the “Registration” button.

NEW USER REGISTRATION

USER NAME:

PASSWORD:

PASSWORD CONFIRM:

FIRST NAME:

LAST NAME:

SECURITY QUESTION: My first phone number.

ANSWER:

CONFIRM YOU'RE HUMAN: New Captcha

Enter the text you see above

Submit Reset

Create domain name.

You must create a domain name to continue.

Domain name must start with (a-z, 0-9). Cannot end or start, but may contain a hyphen and is not case-sensitive.

.dvrmyndns.com Request Domain

After the domain name is successfully applied for, the domain name will be listed as below.

Search by Domain: Search

Click a name to edit your domain settings.

NAME	STATUS	DOMAIN
654321ABC	✓	654321abc.dvrmyndns.com

Last Update: Not yet updated! IP Address: 210.21.229.138

[Create additional domain names](#)

3. Enter the username, password, domain you apply for in the DDNS configuration interface.

4. Click “Save” to save the settings.

4.5.5 802.1x

IEEE802.X which is an access control protocol manages devices in connection with the local network by authentication. The setup steps are as follows:

<input checked="" type="checkbox"/> Enable	
Protocol Type	EAP_MD5
EAPOL Version	1
User Name	test
Password	•••••
Confirm Password	•••••

To use this function, the camera shall be connected to a switch supporting 802.1x protocol. The switch can be reckoned as an authentication system to identify the device in a local network. If the camera connected to the network interface of the switch has passed the authentication of the switch, it can be accessed via the local network.

Protocol type and EAPOL version: Please use the default settings.

User name and password: The user name and password must be the same with the user name and password applied for and registered in the authentication server.

4.5.6 RTSP

Go to Config→Network→RTSP.

<input checked="" type="checkbox"/> Enable	
Port	554
Address	rtsp://IP or domain name:port/profile1
	rtsp://IP or domain name:port/profile2
	rtsp://IP or domain name:port/profile3
Multicast address	
Main stream	239.0.0.0 50554 <input type="checkbox"/> Automatic start
Sub stream	239.0.0.1 51554 <input type="checkbox"/> Automatic start
Third stream	239.0.0.2 52554 <input type="checkbox"/> Automatic start
Audio	239.0.0.3 53554 <input type="checkbox"/> Automatic start
<input type="checkbox"/> Allow anonymous login (No username or password required)	
<input type="button" value="Save"/>	

Select “Enable” to enable the RTSP function.

Port: Access port of the streaming media. The default number is 554.

RTSP Address: The RTSP address (unicast) format that can be used to play the stream in a media player.

Multicast Address

Main stream: The address format is
“rtsp://IP address: rtsp port/profile1?transportmode=mcast”.

Sub stream: The address format is
“rtsp://IP address: rtsp port/profile2?transportmode=mcast”.

Third stream: The address format is
“rtsp://IP address: rtsp port/profile3?transportmode=mcast”.

Audio: Having entered the main/sub stream in a VLC player, the video and audio will play automatically.

If “Allow anonymous login...” is checked, there is no need to enter the username and password to view the video.


If “auto start” is enabled, the multicast received data should be added into a VLC player to play the video.

Note:1. This camera support local play through a VLC player. Enter the RTSP address (unicast or multicast, eg. rtsp://192.168.226.201:554/profile1?transportmode=mcast) in a VLC player to realize the simultaneous play with the web client.

- 2. The IP address mentioned above cannot be the address of IPv6.
- 3. Avoid using the same multicast address in the same local network.
- 4. When playing the video through the multicast streams in a VLC player, please pay attention to the mode of the VLC player. If it is set to TCP mode, the video cannot be played.
- 5. If the coding format of the video of the main stream is MJPEG, the video may be disordered at some resolutions.

4.5.7 UPNP

If this function is enabled, the camera can be quickly accessed through the LAN. Go to Config→Network→UPnP. Enable UPnP and then enter UPnP name.

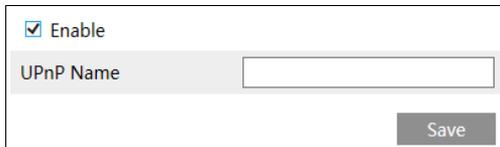

Enable

UPnP Name

Save

4.5.8 Email

If you need to trigger Email when an alarm happens or IP address is changed, please set the Email here first.

Go to Config→Network →Email.

Port Server DDNS SNMP RTSP UPnP **Email** FTP

Sender

Sender Address

User Name

Password

Server Address

Secure Connection

SMTP Port Default

Send Interval(S) (0-3600)

Clear Test

Recipient

XXXX@126.com

Recipient Address

Add Delete

Save

Sender Address: Sender’s e-mail address.

User name and password: Sender’s user name and password.

Server Address: The SMTP IP address or host name.

Select the secure connection type at the “Secure Connection” pull-down list according to what’s required.

SMTP Port: The SMTP port.


Send Interval(S): The time interval of sending email. For example, if it is set to 60 seconds and multiple motion detection alarms are triggered within 60 seconds, they will be considered as only one alarm event and only one email will be sent. If one motion alarm event is triggered and then another motion detection alarm event is triggered after 60 seconds, two emails will be sent. When different alarms are triggered at the same time, multiple emails will be sent separately.

Click the “Test” button to test the connection of the account.

Recipient Address: receiver’s e-mail address.

4.5.9 FTP

After an FTP server is set up, captured pictures from events will be uploaded to the FTP server. Go to Config→Network →FTP.

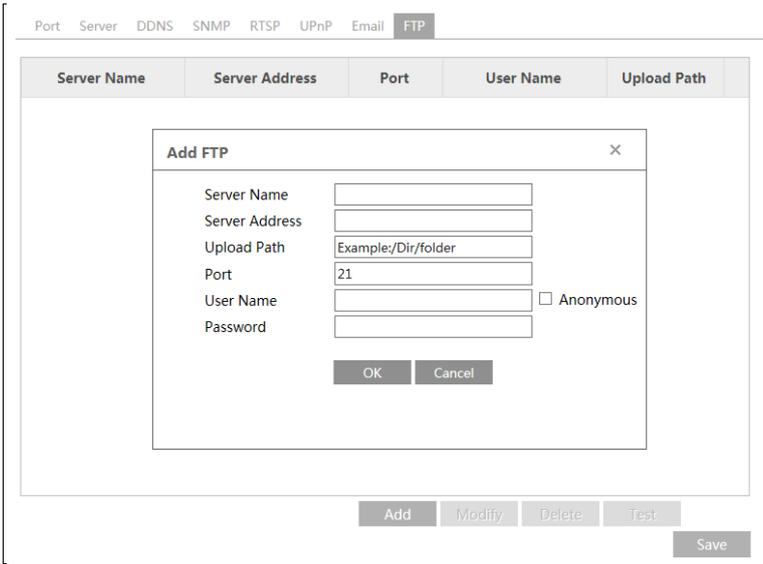

Server Name: The name of the FTP server.

Server Address: The IP address or domain name of the FTP.

Upload Path: The directory where files will be uploaded to.

Port: The port of the FTP server.

Use Name and Password: The username and password that are used to login to the FTP server.

4.5.10 HTTPS

HTTPS provides authentication of the web site and protects user privacy.

Go to Config Config → Network → HTTPS as shown below.



There is a certificate installed by default as shown above. Enable this function and save it. Then the camera can be accessed by entering https://IP: https port via the web browser (eg. https://192.168.226.201:443).

A private certificate can be created if users don't want to use the default one. Click "Delete" to cancel the default certificate. Then the following interface will be displayed.

The screenshot shows a configuration window with the following elements:

- An "Enable" checkbox at the top left.
- An "Installation type" section with three radio button options:
 - Have signed certificate, install directly
 - Create a private certificate
 - Create a certificate request
- An "Install certificate" section with a text input field, a "Browse" button, and an "Install" button.
- A "Save" button at the bottom right.

- * If there is a signed certificate, click “Browse” to select it and then click “Install” to install it.
- * Click “Create a private certificate” to enter the following creation interface.

The screenshot shows a configuration window with the following elements:

- An "Enable" checkbox at the top left.
- An "Installation type" section with three radio button options:
 - Have signed certificate, install directly
 - Create a private certificate
 - Create a certificate request
- A "Create a private certificate" section with a "Create" button.
- A "Save" button at the bottom right.

- Click the “Create” button to create a private certificate. Enter the country (only two letters available), domain (camera’s IP address/domain), validity date, password, province/state, region and so on. Then click “OK” to save the settings.
- * Click “Create a certificate request” to enter the following interface.

The screenshot shows a configuration window with the following elements:

- An "Enable" checkbox at the top left.
- An "Installation type" section with three radio button options:
 - Have signed certificate, install directly
 - Create a private certificate
 - Create a certificate request
- A "Create a certificate request" section with "Create", "Download", and "Delete" buttons.

Click “Create” to create the certificate request. Then download the certificate request and submit it to the trusted certificate authority for signature. After receiving the signed certificate, import the certificate to the device.

4.5.11 P2P (Optional)

If this function is enabled, the network camera can be quickly accessed by adding the device ID in mobile surveillance client or CMS/NVMS client via WAN. Enable this function by going to Config→Network→P2P interface.

The screenshot shows a configuration window with the following elements:

- A "P2P" checkbox that is checked.
- A "Save" button at the bottom right.

4.5.12 QoS

QoS (Quality of Service) function is used to provide different quality of services for different network applications. If there is not enough network bandwidth, the router or switch will sort the data streams and transfer them according to their priority to solve the network delay and network congestion by using this function.

Go to Config→Network→QoS.

Video/Audio DSCP	<input type="text" value="13"/>
Alarm DSCP	<input type="text" value="35"/>
Manager DSCP	<input type="text" value="53"/>

Video/Audio DSCP: The range is from 0 to 63.

Alarm DSCP: The range is from 0 to 63.

Manager DSCP: The range is from 0 to 63.

Generally speaking, the larger the number is, the higher the priority is.

4.6 Security Configuration

4.6.1 User Configuration

Go to Config→Security→User interface as shown below.

<input type="button" value="Add"/> <input type="button" value="Modify"/> <input type="button" value="Delete"/>			
Index	User Name	User Type	Binding MAC
1	admin	Administrator	

Add user:

1. Click the “Add” button to pop up the following textbox.

Add User
×

User Name

Password

Confirm Password

User Type Administrator ▼

Bind MAC


2. Enter user name in “User Name” textbox.

3. Enter letters or numbers in “Password” and “Confirm Password” textbox.

4. Choose the user type. Administrator has all permissions. Normal user can only view the live video. Advanced user has the same permissions as an Administrator except for user, backup settings, factory reset, and upgrading the firmware.
5. Enter the MAC address of the PC in “Bind MAC” textbox.
If this option is enabled, only the PC with the specified MAC address can access the camera for that user.
6. Click “OK” and then the newly added user will be displayed in the user list.

Modify user:

1. Select a user to modify password and MAC address if necessary in the user configuration list box.
2. The “Edit user” dialog box pops up by clicking the “Modify” button.

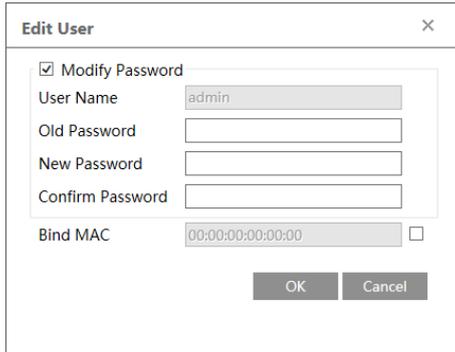

3. Enter the old password of the user in the “Old Password” text box.
4. Enter the new password in the “New password” and “Confirm Password” text box.
5. Enter computer’s MAC address as needed.
6. Click “OK” to save the settings.

Note: To change the access level of a user, the user must be deleted and added again with the new access level.

Delete user:

1. Select the user to be deleted in the user configuration list box.
2. Click the “Delete” button to delete the user.

Note: The default administrator account cannot be deleted.

4.6.2 Online User


Go to Config→Security→Online User to view the user who is viewing the live video.

Index	Client Address	Port	User Name	User Type	
1	192.168.17.232	55760	admin	Administrator	Kick Out

An administrator user can kick out all the other users (including other administrators). Once the user is kicked out, it will be added into the block list.

4.6.3 Block and Allow Lists

Go to Config→Security→Block and Allow Lists as shown below.

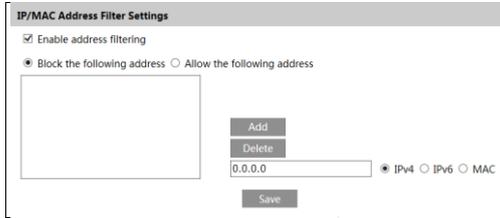

The setup steps are as follows:

Check the “Enable address filtering” check box.

Select “Block/Allow the following address”, IPv4/IPv6/MAC and then enter IP address or MAC address in the address box and click the “Add” button.

4.6.4 Security Management

Go to Config→Security→Security Management as shown below.



In order to prevent against malicious password unlocking, “locking once illegal login” function can be enabled here. If this function is enabled, login failure after trying six times will make the login interface locked. The camera can be logged in again after a half hour or after the camera reboots.

For some specified versions, anonymous login with a private protocol can be enabled here. If this function is enabled, enter `http://host:port/Anonymous/1[2/3]` (eg. `http://192.168.226.201:80/Anonymous/1`) via web browser to access the camera. 1 indicates main stream; 2 indicates sub stream; 3 indicates third stream. Only video can be viewed by this means and no other operations can be done. If no such function, please skip the instruction.

4.7 Maintenance Configuration

4.7.1 Backup and Restore

Go to Config→Maintenance→Backup & Restore.

The screenshot displays a configuration interface with three main sections:

- Import Setting:** Contains a text input field labeled "Path" with a "Browse" button to its right, and an "Import Setting" button below it.
- Export Settings:** Contains an "Export Settings" button.
- Default Settings:** Contains a "Keep" label followed by a list of three checkboxes: "Network Config", "Security Configuration", and "Image Configuration". Below this list is a "Load Default" button.

● **Import & Export Settings**

Configuration settings of the camera can be exported from a camera into another camera.

1. Click “Browse” to select the save path for import or export information on the PC.
2. Click the “Import Setting” or “Export Setting” button.

● **Default Settings**

Click the “Load Default” button to restore all system settings to the default factory settings except those you want to keep.

4.7.2 Reboot

Go to Config→Maintenance→Reboot.
Click the “Reboot” button to reboot the device.

Timed Reboot Setting:

If necessary, the camera can be set up to reboot on a time interval. Enable “Time Settings”, set the date and time and then click “Save” to save the settings.

4.7.3 Upgrade

Go to Config→Maintenance→Upgrade. In this interface, the camera firmware can be updated.

The screenshot shows the "Local upgrade" interface with a "Path" label, a text input field, and "Browse" and "Upgrade" buttons.

1. Click the “Browse” button to select the save path of the upgrade file.
2. Click the “Upgrade” button to start upgrading the firmware.
3. The device will restart automatically.

Caution! Do not close the browser or disconnect the camera from the network during the upgrade.

4.7.4 Operation Log

To query and export log:

1. Go to Config→Maintenance→Operation Log.

Main Type:	All log	Sub Type:	All log		
Start Time:	2015-07-14 00:00:00	End Time:	2015-07-14 23:59:59	Search	Export
Index	Time	Main Type	Sub Type	User Name	Login IP
1	2015-07-14 11:15:18	Operation	Log in	admin	192.168.12.53
2	2015-07-14 11:12:02	Exception	Disconnected		192.168.12.53
3	2015-07-14 19:12:17	Exception	Disconnected		192.168.12.52

2. Select the main type, sub type, start and end time.
3. Click “Search” to view the operation log.
4. Click “Export” to export the operation log.

5.1 Image Search

Click Search to go to the interface as shown below. Images that are saved on the SD card can be found here.

● Local Image Search


1. Choose “Picture”—“Local”.
2. Set time: Select date and choose the start and end time.
3. Click  to search the images.
4. Double click a file name in the list to view the captured photos as shown above.



Click  to return to the previous interface.


● SD Card Image Search

1. Choose “Picture”—“SD Card”.

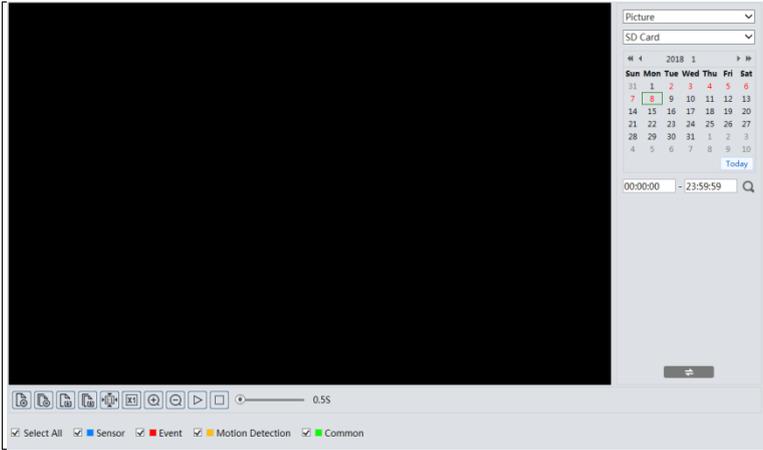

2. Set time: Select date and choose the start and end time.
 3. Choose the alarm events at the bottom of the interface.
 4. Click  to search the images.
 5. Double click a file name in the list to view the captured photos.
- Click  to return to the previous interface.


The descriptions of the buttons are shown as follows.

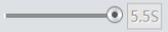Icon	Description	Icon	Description
	Close: Select an image and click this button to close the image.		Close all: Click this button to close all images.
	Save: Click this button to select the path for saving the image on the PC.		Save all: Click this button to select the path for saving all pictures on the PC.
	Fit size: Click to fit the image on the screen.		Actual size: Click this button to display the actual size of the image.
	Zoom in: Click this button to digitally zoom in.		Zoom out: Click this button to digitally zoom out.
	Slide show play: Click this button to start the slide show mode.		Stop: Click this button to stop the slide show.
	Play speed: Play speed of the slide show.		

5.2 Video Search


5.2.1 Local Video Search

Click Search to go to the interface as shown below. Videos were recorded locally to the PC can be played in this interface.

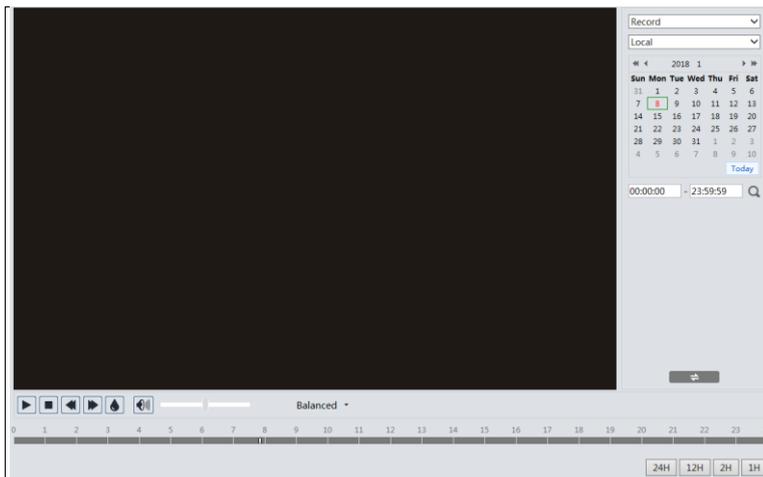

1. Choose “Record”—“Local”.
2. Set search time: Select the date and choose the start and end time.
3. Click  to search the images.
4. Double click on a file name in the list to start playback.

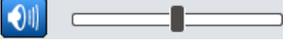


Icon	Description	Icon	Description
	Play button. After pausing the video, click this button to continue playing.		Pause button
	Stop button		Speed down
	Speed up		Watermark display
	Enable / disable audio; drag the slider to adjust the volume after enabling audio (only available for some models) .		


5.2.2 SD Card Video Search

Click Search to go to the interface as shown below. Videos that were recorded on the SD card can be played in this interface.

1. Choose “Record”—“SD Card”.
2. Set search time: Select the date and choose the start and end time.
3. Click  to search the images.

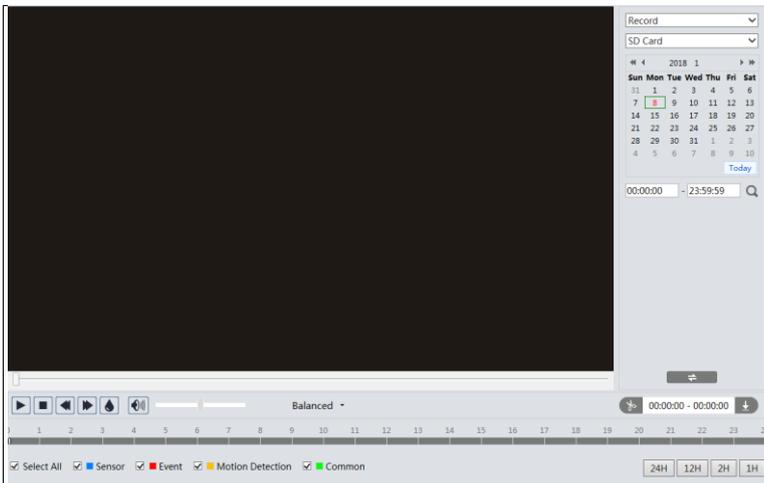

4. Select the alarm events at the bottom of the interface.
5. Select mix stream (video and audio stream) or video stream as needed.
6. Double click on a file name in the list to start playback.

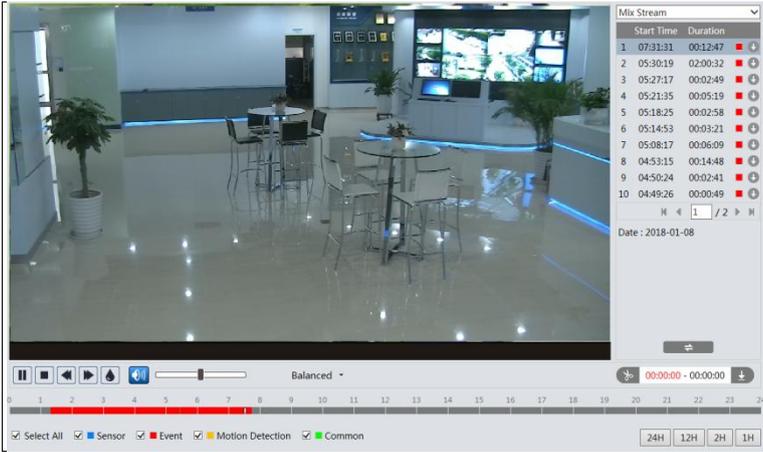

The time table can be shown in 24H/12H/2H/1H format by clicking the corresponding buttons.

Video clip and downloading

1. Search the video files according to the above mentioned steps.
2. Select the start time by clicking on the time table.
3. Click  to set the start time and then this button turns blue ().
4. Select the end time by clicking on the time table. Then click  to set the end time.
5. Click  to download the video file in the PC.

Index	Process	Record	Start Time	End Time	Path	Operate
1	100%	Cut	2018-01-16 01:1...	2018-01-16 01:1...	Favorite	Open

D:\Favorites

- Click “Set up” to set the storage directory of the video files.
- Click “Open” to play the video.
- Click “Clear List” to clear the downloading list.
- Click “Close” to close the downloading window.

Appendix 1 Q& A

Q: How to find my password if I forget it?

A : Reset the device to the default factory settings.

Default IP: 192.168.226.201; User name: admin; Password: 123456

Q: Fail to connect devices through IE browser, why?

A: Network is not well connected. Check the connection and make sure it is connected well.

B: IP is not available. Reset the valid IP.

C: Web port number has been revised: contact administrator to get the correct port number.

D: Exclude the above reasons. Recover default setting by IP-Tool.

Q: IP tool cannot search devices, why?

A : It may be caused by the anti-virus software in your computer. Please exit it and try to search device again.

Q: IE cannot download ActiveX control. How can I do?

a. IE browser blocks ActiveX. Please do setup as below.

① Open IE browser. Click Tools-----Internet Options....




② Select Security-----Custom Level....

③ Enable all the sub options under “ActiveX controls and plug-ins”.

④ Then click OK to finish setup.

b. Other plug-ins or anti-virus blocks ActiveX. Please uninstall or close them.

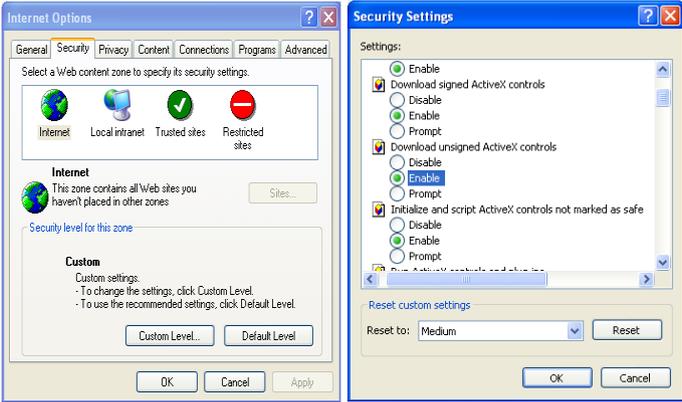

Appendix 2 Specifications

Specification /Model		 IR Water-proof Bullet Network Camera
Camera	Image Sensor	1/3 " CMOS
	Image Size	3840 × 2160
	Electronic Shutter	1/25s~1/100000s
	Iris Type	Fixed Iris
	Min. Illumination	0.11lux, F2.2, AGC ON; 0 lux with IR 0.032lux, F1.2,AGC ON; 0 lux with IR
	Lens	2.8mm@F2.0, horizontal field of view: 112 ° 3.6mm@F2.2, horizontal field of view: 89 °
	Lens Mount	M12
	Day&Night	ICR
	Digital NR	2D/3D DNR
	WDR	Digital WDR
	Angle Adjustment	Pan: 0 °~360 ° Tilt: 0 °~80 ° Rotation: 0 °~360 °
Image	Video Compression	H.265 / H.264
	Video Bit Rate	64Kbps~8Mbps
	Resolution	8MP (3840 ×2160), 6MP(3072×2048), 5MP(2592×1944), 720P(1280×720), D1, CIF, 480×240
	Main Stream	8MP/6MP/5MP (1~20fps)
	Sub Stream	720P/D1/CIF (1~20fps);
	Third Stream	D1/CIF/480×240 (1~20fps)
	Image Settings	Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, Anti-flicker, BLC, HLC, defog, etc. adjustable through client or web browser
ROI	Support	
Interfaces	Network	RJ45
	Audio	1CH audio input
	Storage	Built-in micro SD card slot; up to 128GB
	Hardware Reset	Yes
Fuction	Remote Monitoring	Web browser, CMS remote control
	Online Connection	Support simultaneous monitoring for up to 3 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP, HTTP, HTTPS, QoS, 802.1X
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion alarm, SD card full, SD card error
Intelligent Analytics	Scene change detection, region intrusion, line crossing	
Others	IR Distance	20~30 m
	Ingress Protection	IP67
	Power	DC12V/PoE
	Power Consumption	< 6.5W
	Operating Environment	Temperature: -30 °C~60 °C(-22 F~140 F); RH: <95%(non-condensing)
	Dimension (mm)	167.5×74.5×74.5
	Weight (net)	Approx. 0.44KG
Installation	Wall mounting; ceiling mounting	

Specification /Model		 IR Water-proof Bullet Network Camera
Camera	Image Sensor	1/3 " CMOS
	Image Size	3840 × 2160
	Electronic Shutter	1/25s~1/10000s
	Iris Type	Fixed Iris
	Min. Illumination	0.11lux, F2.2, AGC ON; 0 lux with IR 0.032lux, F1.2, AGC ON; 0 lux with IR
	Lens	2.8mm@F2.0, horizontal field of view: 112 ° 3.6mm@F2.2, horizontal field of view: 89 ° 2.8-12mm@F1.4 (motorized lens), horizontal field of view: 102.7 °~32.2 °
	Lens Mount	M12 or Ø14
	Day&Night	ICR
	Digital NR	3D DNR
	WDR	Digital WDR
	Angle Adjustment	Pan: 0 °~360 ° Tilt: 0 °~90 ° Rotation: 0 °~360 °
Image	Video Compression	H.265 / H.264
	Video Bit Rate	64Kbps~8Mbps
	Resolution	8MP (3840 ×2160), 6MP(3072×2048), 5MP(2592×1944), 720P(1280×720), D1, CIF, 480×240
	Main Stream	8MP/6MP/5MP (1~20fps)
	Sub Stream	720P/D1/CIF (1~20fps);
	Third Stream	D1/CIF/480×240 (1~20fps)
	Image Settings	Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, Anti-flicker, BLC, HLC, defog, etc. adjustable through client or web browser
ROI	Support	
Interface s	Network	RJ45
	Audio	1CH audio input
	Storage	Built-in micro SD card slot; up to 128GB
	Hardware Reset	Yes
Fuction	Remote Monitoring	Web browser, CMS remote control
	Online Connection	Support simultaneous monitoring for up to 3 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP, HTTP, HTTPS, QoS, 802.1X
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion alarm, SD card full, SD card error
Intelligent Analytics	Scene change detection, region intrusion, line crossing	
Others	IR Distance	30~50 m
	Ingress Protection	IP67
	Power	DC12V/PoE
	Power Consumption	< 9.5W
	Operating Environment	Temperature: -30 °C~60 °C(-22 °F~140 °F); RH: <95%(non-condensing)
	Dimension (mm)	217.7×80.5×80.5
	Weight (net)	Approx. 0.66KG
Installation	Wall mounting; ceiling mounting	

Specification /Model		 IR Water-proof Bullet Network Camera
Camera	Image Sensor	1/3 " CMOS
	Image Size	3840 × 2160
	Electronic Shutter	1/25s~1/100000s
	Iris Type	Fixed Iris
	Min. Illumination	0.11lux, F1.4, AGC ON; 0 lux with IR 0.032lux, F1.2, AGC ON; 0 lux with IR
	Lens	2.8~12mm@F1.4 (motorized lens) , horizontal field of view: 102.7°~32.2°
	Lens Mount	Ø14
	Day&Night	ICR
	Digital NR	3D DNR
	WDR	Digital WDR
	Angle Adjustment	Pan: 0°~360° ; Tilt: 0°~90° ; Rotation: 0°~360°
Image	Video Compression	H.265 / H.264
	Video Bit Rate	64Kbps~8Mbps
	Resolution	8MP (3840 ×2160), 6MP(3072×2048), 5MP(2592×1944), 720P(1280×720), D1, CIF, 480×240
	Main Stream	8MP/6MP/5MP (1~20fps)
	Sub Stream	720P/D1/CIF (1~20fps);
	Third Stream	D1/CIF/480×240 (1~20fps)
	Image Settings	Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, Anti-flicker, BLC, HLC, defog, etc. adjustable through client or web browser
ROI	Support	
Interface s	Network	RJ45
	Audio	1CH audio input; 1CH audio output
	Alarm	1CH alarm input; 1CH alarm output
	Storage	Built-in micro SD card slot, up to 128GB
	Hardware Reset	Yes
Fuction	Remote Monitoring	Web browser, CMS remote control
	Online Connection	Support simultaneous monitoring for up to 3 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP, HTTP, HTTPS, QoS, 802.1X
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion alarm, sensor alarm, SD card full, SD card error, IP address conflict, cable disconnection
	Intelligent Analytics	Scene change detection, region intrusion, line crossing
Others	IR Distance	50~70 m
	Ingress Protection	IP67
	Power	DC12V/PoE
	Power Consumption	< 9.5W
	Operating Environment	Temperature: -30 °C~60 °C(-22 F~140 F); RH: <95%(non-condensing)
	Dimension (mm)	279.5×100.3×88.9
	Weight (net)	Approx. 1.032KG
	Installation	Wall mounting; ceiling mounting

Specification /Model		 IR water-proof Dome Network Camera
Camera	Image Sensor	1/2.5 " CMOS
	Image Size	3840 × 2160
	Electronic Shutter	1/25s~1/10000s
	Iris Type	Fixed Iris
	Min. Illumination	0.1lux, F2.2, AGC ON; 0 lux with IR 0.032lux, F1.2,AGC ON; 0 lux with IR
	Lens	2.8mm@F2.0, horizontal field of view: 112 ° 3.6mm@F2.2, horizontal field of view: 89 °
	Lens Mount	M12
	Day&Night	ICR
	Digital NR	3D DNR
	WDR	Digital WDR
Angle Adjustment	Pan: 0 °~355 °, Tilt: 0 °~67 °, Rotate: 0 °~355 °	
Image	Video Compression	H.265 / H.264
	Video Bit Rate	64Kbps~8Mbps
	Resolution	8MP (3840 ×2160), 6MP(3072×2048), 5MP(2592×1944), 720P(1280×720), D1, CIF, 480×240
	Main Stream	8MP/6MP/5MP (1~20fps)
	Sub Stream	720P/D1/CIF (1~20fps);
	Third Stream	D1/CIF/480×240 (1~20fps)
	Image Settings	Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, Anti-flicker, BLC, HLC, defog, etc. adjustable through client or web browser
ROI	Support	
Interfaces	Network	RJ45
	Audio	1CH audio input; 1CH built-in MIC
	Storage	Built-in micro SD card slot; up to 128GB
	Hardware Reset	Yes
Fuction	Remote Monitoring	Web browser, CMS remote control
	Online Connection	Support simultaneous monitoring for up to 3 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP, HTTP, HTTPS, QoS, 802.1X
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion alarm, SD card full, SD card error
	Intelligent Analytics	Scene change detection, region intrusion, line crossing
Others	IR Distance	20~30 m
	Ingress Protection	IP67&IK10
	Power	DC12V/PoE
	Power Consumption	< 7W
	Operating Environment	Temperature: -30 °C~60 °C(-22 F~140 F); RH: <95%(non-condensing)
	Dimension (mm)	Ø 119×87.8
	Weight (net)	Approx. 0.63KG
	Installation	Ceiling mounting (wall mounting available with the junction box and bracket)

Specification /Model		 IR water-proof Dome Network Camera
Camera	Image Sensor	1/3 " CMOS
	Image Size	3840 × 2160
	Electronic Shutter	1/25s~1/10000s
	Iris Type	Fixed Iris
	Min. Illumination	0.11lux, F1.4, AGC ON; 0 lux with IR 0.032lux, F1.2, AGC ON; 0 lux with IR
	Lens	2.8~12mm@F1.4 (motorized lens) , horizontal field of view: 102.7°~32.2°
	Lens Mount	Ø14
	Day&Night	ICR
	Digital NR	3D DNR
	WDR	Digital WDR
	Angle Adjustment	Pan: 0°~345° ; Tilt: 0°~77° ; Rotation: 0°~345°
Image	Video Compression	H.265 / H.264
	Video Bit Rate	64Kbps~8Mbps
	Resolution	8MP(3840×2160), 6MP(3072×2048), 5MP(2592×1944), 720P(1280×720), D1, CIF, 480×240
	Main Stream	8MP/6MP/5MP (1~20fps)
	Sub Stream	720P/D1/CIF (1~20fps);
	Third Stream	D1/CIF/480×240 (1~20fps)
	Image Settings	Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, Anti-flicker, BLC, HLC, defog, etc. adjustable through client or web browser
ROI	Support	
Interface s	Network	RJ45
	Audio	1CH audio input; 1CH audio output
	Alarm	1CH alarm input; 1CH alarm output
	Storage	Built-in micro SD card slot, up to 128GB
	Hardware Reset	Yes
Fuction	Remote Monitoring	Web browser, CMS remote control
	Online Connection	Support simultaneous monitoring for up to 3 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP, HTTP, HTTPS, QoS, 802.1X
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion alarm, sensor alarm, SD card full, SD card error, IP address conflict, cable disconnection
	Intelligent Analytics	Scene change detection, region intrusion, line crossing
Others	IR Distance	30~50 m
	Ingress Protection	IP67&IK10
	Power	DC12V/PoE
	Power Consumption	< 9.5W
	Operating Environment	Temperature: -30 °C~60 °C(-22 F~140 F); RH: <95%(non-condensing)
	Dimension (mm)	Ø 141×100.2
	Weight (net)	Approx. 0.89KG
	Installation	Ceiling mounting (wall mounting available with the junction box and bracket)

Specification /Model		 IR Water-proof Dome Network Camera
Camera	Image Sensor	1/3 " CMOS
	Image Size	3840 × 2160
	Electronic Shutter	1/25s~1/100000s
	Iris Type	Fixed Iris
	Min. Illumination	0.1lux, F2.2, AGC ON; 0 lux with IR 0.032lux, F1.2,AGC ON; 0 lux with IR
	Lens	2.8mm@F2.0, horizontal field of view: 112 ° 3.6mm@F2.2, horizontal field of view: 89 °
	Lens Mount	M12
	Day&Night	ICR
	Digital NR	3D DNR
	WDR	Digital WDR
	Angle Adjustment	Pan: 0 °~360 °, Tilt: 0 °~70 °, Rotate: 0 °~360 °
Image	Video Compression	H.265 / H.264
	Video Bit Rate	64Kbps~8Mbps
	Resolution	8MP (3840 × 2160), 6MP(3072 × 2048), 5MP(2592 × 1944), 720P(1280 × 720), D1, CIF, 480 × 240
	Main Stream	8MP/6MP/5MP (1~20fps)
	Sub Stream	720P/D1/CIF (1~20fps);
	Third Stream	D1/CIF/480 × 240 (1~20fps)
	Image Settings	Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, Anti-flicker, BLC, HLC, defog, etc. adjustable through client or web browser
ROI	Support	
Interfaces	Network	RJ45
	Audio	1CH audio input; 1CH built-in MIC
	Storage	Built-in micro SD card slot; up to 128GB
	Hardware Reset	Yes
Fuction	Remote Monitoring	Web browser, CMS remote control
	Online Connection	Support simultaneous monitoring for up to 3 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP, HTTP, HTTPS, QoS, 802.1X
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion alarm, SD card full, SD card error
Intelligent Analytics	Scene change detection, region intrusion, line crossing	
Others	IR Distance	20~30 m
	Ingress Protection	IP67
	Power	DC12V/PoE power supply
	Power Consumption	< 6W
	Operating Environment	Temperature: -30 °C~60 °C(-22 °F~140 °F); RH: <95%(non-condensing)
	Dimension (mm)	Ø 94.6 × 82.8
	Weight (net)	Approx. 0.47KG
	Installation	Ceiling mounting (wall mounting available with the junction box and bracket)

Specification /Model		 IR Water-proof Dome Network Camera
Camera	Image Sensor	1/3 " CMOS
	Image Size	3840 ×2160
	Electronic Shutter	1/25s~1/100000s
	Iris Type	Fixed Iris
	Min. Illumination	0.11lux, F1.4, AGC ON; 0 lux with IR 0.032lux, F1.2,AGC ON; 0 lux with IR
	Lens	2.8~12mm@F1.4 (motorized lens) , horizontal field of view: 102.7 °~32.2 °
	Lens Mount	Ø14
	Day&Night	ICR
	Digital NR	3D DNR
	WDR	Digital WDR
Angle Adjustment	Pan: 0 °~360 °, Tilt: 0 °~80 °, Rotate: 0 °~360 °	
Image	Video Compression	H.265 / H.264
	Video Bit Rate	64Kbps~8Mbps
	Resolution	8MP (3840 ×2160), 6MP(3072×2048), 5MP(2592×1944), 720P(1280×720), D1, CIF, 480×240
	Main Stream	8MP/6MP/5MP (1~20fps)
	Sub Stream	720P/D1/CIF (1~20fps);
	Third Stream	D1/CIF/480×240 (1~20fps)
	Image Settings	Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, Anti-flicker, BLC, HLC, defog, etc. adjustable through client or web browser
ROI	Support	
Interfaces	Network	RJ45
	Audio	1CH audio input; 1CH built-in MIC
	Storage	Built-in micro SD card slot; up to 128GB
	Hardware Reset	Yes
Fuction	Remote Monitoring	Web browser, CMS remote control
	Online Connection	Support simultaneous monitoring for up to 3 users and multi-stream transmission
	Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP, HTTP, HTTPS, QoS, 802.1X
	Interface Protocol	ONVIF
	Storage	Network remote storage, micro SD card storage
	Smart Alarm	Motion alarm, SD card full, SD card error
	Intelligent Analytics	Scene change detection, region intrusion, line crossing
Others	IR Distance	30~50 m
	Ingress Protection	IP67
	Power	DC12V/PoE power supply
	Power Consumption	< 9 W
	Operating Environment	Temperature: -30 °C~60 °C(-22 °F~140 °F); RH: <95%(non-condensing)
	Dimension (mm)	Ø 111.5×99.6
	Weight (net)	Approx. 0.62KG
	Installation	Ceiling mounting (wall mounting available with the junction box and bracket)